



NovAtel Application Suite User Manual

NovAtel Application Suite User Manual

Publication Number: D100355

Revision Level: v2.5

Revision Date: January 2025

Warranty

NovAtel Inc. warrants that its GNSS products are free from defects in materials and workmanship, subject to the conditions set forth on our web site: novatel.com/products/novatel-warranty-and-return-policies.

Return Instructions

To return products, refer to the instructions found at: novatel.com/products/novatel-warranty-and-return-policies.

Proprietary Notice

This document and the information contained herein are the exclusive properties of the legal entities that comprise the Autonomous Solutions division of the Hexagon AB group of companies ("Hexagon").

No part of this document may be reproduced, displayed, distributed, or used in any medium, in connection with any other materials, or for any purpose without prior written permission from Hexagon. Applications for permission may be directed to contact.ap@hexagon.com. Unauthorized reproduction, display, distribution or use may result in civil as well as criminal sanctions under the applicable laws. Hexagon aggressively protects and enforces its intellectual property rights to the fullest extent allowed by law.

This document and the information contained herein are provided AS IS and without any representation or warranty of any kind. Hexagon disclaims all warranties, express or implied, including but not limited to any warranties of merchantability, non-infringement, and fitness for a particular purpose. Nothing herein constitutes a binding obligation on Hexagon.

The information contained herein is subject to change without notice.

© Copyright 2020 – 2025 Hexagon AB and/or its subsidiaries and affiliates. All rights reserved.

ALIGN, NovAtel, Oceanix, OEM7, PwrPak7, SPAN, TerraStar and Waypoint are trademarks of Hexagon AB and/or its subsidiaries and affiliates, and/or their licensors. All other trademarks are properties of their respective owners.

Table of Contents

Customer Support

Chapter 1 NovAtel Application Suite

1.1	Install NovAtel Application Suite	7
1.1.1	Minimum Requirements	7
1.2	Launch NovAtel Application Suite	7
1.3	Welcome Window	7
1.3.1	NovAtel Application Suite Menus	8
1.3.2	Add Applications	9
1.3.3	Remove Applications	10

Chapter 2 Manage

2.1	Devices Window	12
2.1.1	Add a Device – Serial Connection	12
2.1.2	Add a Device – USB Connection	14
2.1.3	Add a Device – Ethernet Connection	16
2.1.4	Open/Close a Connection	17
2.1.5	Open the Status and Configuration Windows for a Device	17
2.1.6	Change the Communication Parameters of a Device	17
2.1.7	Delete a Device	17
2.1.8	Download and Load a Receiver Configuration	18
2.1.9	Group the Devices	18
2.2	Status and Configuration Window	22
2.2.1	Connections Bar	22
2.2.2	Menu Bar	22
2.2.3	Summary Bar	22
2.2.4	Menu	24
2.2.5	General Settings	26
2.2.6	Networking	26
2.2.7	Vehicle Setup	30
2.2.8	Terminal	31
2.2.9	Interference Toolkit	33
2.2.10	Details	44
2.2.11	Storage	47
2.2.12	Update	49
2.2.13	Events	50
2.3	Status Window	52
2.3.1	Change the Status Tile Layout	53
2.3.2	Positioning Status	53
2.3.3	Satellite View	56
2.3.4	Ports Status	57
2.3.5	Logging Status	58
2.3.6	Device Status	59
2.3.7	Interference Status	59
2.3.8	ALIGN Status	60
2.3.9	SPAN Status	61

2.3.10	PPP Corrections Status	63
2.3.11	Radio Status	65
2.3.12	Satellite Tracking	65
2.4	Configuration Window	69
2.4.1	Positioning Configuration	69
2.4.2	Ports Configuration	85
2.4.3	Logging Configuration	93
2.4.4	ALIGN Configuration	101
2.4.5	SPAN Configuration	104
2.4.6	Radio Configuration	111
2.4.7	GNSS Configuration	112
2.4.8	Spoofing Configuration	113
2.5	PIM222A	114
2.5.1	Positioning Status	114
2.5.2	Device Status	115
2.5.3	2d-SD	115
2.5.4	Height-SD	115
2.5.5	Satellite View	116
2.5.6	Positioning Configuration	116
2.5.7	Logging Configuration	120
2.5.8	Details	121
2.5.9	Update Firmware	121
2.5.10	Terminal	123
2.6	G-III Reference Receiver	124
2.6.1	Operating View	124
2.6.2	Carrier-to-Noise	130
2.6.3	Lock Time	130
2.6.4	View Satellite Details	130
2.6.5	Show	130
2.6.6	Sort By	131
2.6.7	View all satellite information	131
2.6.8	Configuration View	136

Chapter 3 Playback

3.1	Recent Playback Activity	138
3.2	View a File In Playback	139
3.2.1	Files Bar	139
3.2.2	Summary Bar	140
3.2.3	Status Tiles	141
3.2.4	Playback Controls	141

Chapter 4 Convert

4.1	Start Convert	143
4.2	Open files in Convert	143
4.2.1	Invalid files	144
4.3	Output Settings window	145
4.3.1	Output Settings – Messages	148
4.3.2	Output Settings – Format	152

4.4	Conversion Results	157
4.5	Convert command line interface	160
4.5.1	CLI options	160
4.5.2	Output path	161
4.5.3	Split	161
4.5.4	Time windowing	161
4.5.5	Log conversion	162
4.5.6	Sampling	162

Chapter 5 GRIT Monitor

5.1	Devices Window	163
5.1.1	Add a Device – Serial Connection	166
5.1.2	Add a Device – USB Connection	168
5.1.3	Add a Device – Ethernet Connection	169
5.1.4	Open/Close a Connection	171
5.1.5	Open GRIT Monitor for a Device	171
5.1.6	Change the Communication Parameters of a Device	171
5.1.7	Delete a Device	171
5.1.8	Group the Devices	171
5.2	GRIT Monitor Dashboard	174
5.2.1	Connections Bar	174
5.2.2	Menu Bar	175
5.2.3	Summary Bar	175
5.2.4	Timeline Bar	176
5.2.5	Mitigation Assistant	177
5.2.6	Signal Matrix	178
5.2.7	Spectrum Viewer	179
5.2.8	Position Overview	192
5.3	Configuration	195
5.4	Playback	196
5.4.1	Playback Controls	197
5.5	Menu	199
5.5.1	Dashboard	199
5.5.2	Configuration	199
5.5.3	Settings	199
5.5.4	Tools	199
5.5.5	Help	199
5.6	Networking	199
5.6.1	Wi-Fi	200
5.6.2	Ethernet	201
5.6.3	Wi-Fi Hotspot	201
5.7	Map Settings	203
5.7.1	Points of Interest	203
5.7.2	Triggers	206
5.7.3	Display	208
5.8	Terminal	209

Customer Support

NovAtel Knowledge Base

If you have a technical issue, visit the NovAtel Support page at novatel.com/support. Through the *Support* page, you can contact Customer Support, find papers and tutorials or download current manuals and the latest firmware.

Contact Information

Log a support request with NovAtel Customer Support using one of the following methods:

Log a Case and Search Knowledge:

Website: novatel.com/support

Log a Case, Search Knowledge and View Your Case History: (login access required)

Web Portal: <https://novatelsupport.force.com/community/login>

E-mail:

support.novatel@hexagon.com

Telephone:

U.S. and Canada: 1-800-NOVATEL (1-800-668-2835)

International: +1-403-295-4900

Chapter 1 NovAtel Application Suite

The NovAtel Application Suite is set of computer based tools used to configure, monitor, troubleshoot and update NovAtel receivers.

NovAtel Application Suite runs on a Windows® 10/11 or Linux (Ubuntu 20.04+) based computer and communicates to the receiver using a serial, USB or Ethernet connection.

1.1 Install NovAtel Application Suite

The latest NovAtel Application Suite software is available from the NovAtel web page. To install NovAtel Application Suite:

1. Download the NovAtel Application Suite installation file from the NovAtel web page: novatel.com/products/firmware-options-pc-software/novatel-application-suite.
2. Once downloaded, open the installation file to start the installation wizard.
3. Follow the wizard to install NovAtel Application Suite.

1.1.1 Minimum Requirements

The minimum requirements for the NovAtel Application Suite computer are:

- 2 GHz dual core processor
- 4 GB of RAM
- 550 MB of hard disk space
- 1280 x 1024 resolution display


1.2 Launch NovAtel Application Suite

When NovAtel Application Suite is installed, a NovAtel Application Suite icon is added to the desktop and the Windows Start menu.

To launch NovAtel Application Suite, click the NovAtel Application Suite icon. The Welcome window displays when NovAtel Application Suite is opened.

1.3 Welcome Window

The Welcome window is the first window that appears after NovAtel Application Suite starts.

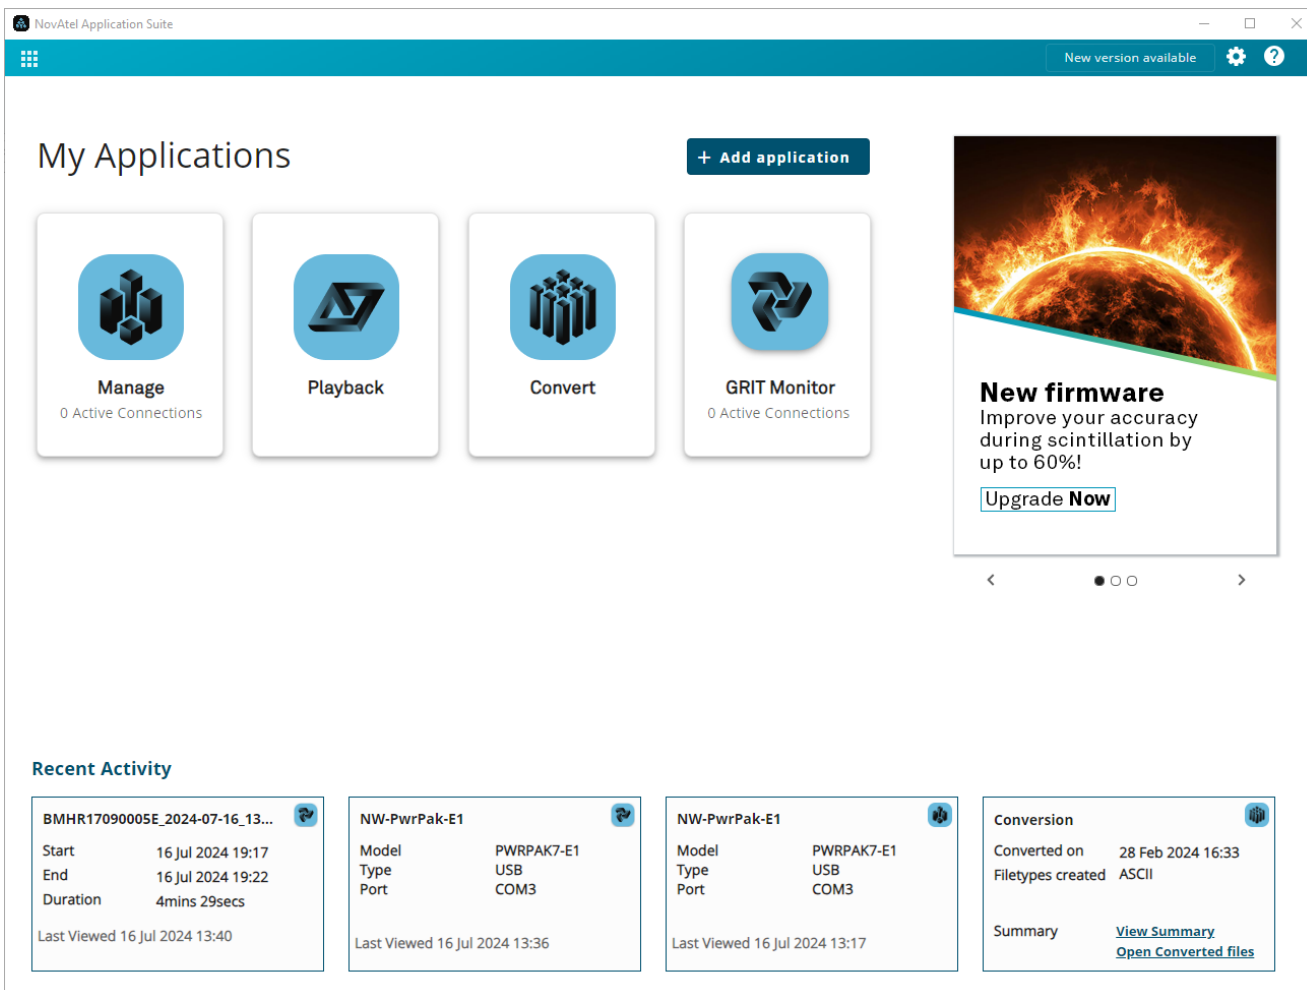

From the Welcome window you can access all of the tools available in the NovAtel Application Suite. To open one of the tools, click the button for the tool.

- **Manage**

The Manage tool is used to configure the receiver and monitor receiver status. See *Manage* on page 12.

- **Playback**

The Playback tool is used to review the data saved in a log file using the Playback interface. See *Playback* on page 138.

- **Convert**

The Convert tool is used to convert NovAtel logs contained in a file from one format to another. See *Convert* on page 143.

- **GRIT Monitor**


The GRIT Monitor tool is used to monitor and visualize sources of GNSS interference. It also has features to help mitigate the impact of the interference. See *GRIT Monitor* on page 163.

If there are any recently accessed receivers or playback files, the receivers or playback files are shown in the *Recent Activity* section. To access a receiver or open a playback file in the Recent Activity section, click the icon for the receiver or file.


1.3.1 NovAtel Application Suite Menus

Three menus are available at the top of all NovAtel Application Suite windows.

Application Menu

The Application menu () is in the top left corner of the window. Use this menu to switch between tools available in NovAtel Application Suite.

Settings Menu

The Settings menu () is in the top right corner of the window. Use this menu to change the window settings for NovAtel Application Suite and access additional information.

Check For Updates

Check for application updates for the NovAtel Application Suite. If an update is available, a dialog box appears which provides an option to update NovAtel Application Suite.

Language

From the Language options, you can select the language used for the NovAtel Application Suite user interface.


Theme

From the Theme option, you can select the color scheme used for the NovAtel Application Suite user interface. The themes available are Light and Dark.

Quit

Quit NovAtel Application Suite.

Help Menu

The Help menu () is in the top right corner of the window. Use this menu to access information about NovAtel Application Suite.

NovAtel Application Suite Help

Open the help file for NovAtel Application Suite.

Contact Support

Open the NovAtel Application Suite support page on the NovAtel website.

Feedback

Open a dialog box to send feedback about NovAtel Application Suite to NovAtel.

About

View information about NovAtel Application Suite including the NovAtel Application Suite version number.


1.3.2 Add Applications

Applications other than the core tools (Manage, Playback, Convert and GRIT Monitor) can be installed and then accessed using NovAtel Application Suite. As these other applications become available, they can be installed using the Add application button.

To add an application:

1. Click the **Add application** button.

The *Add application* window appears.

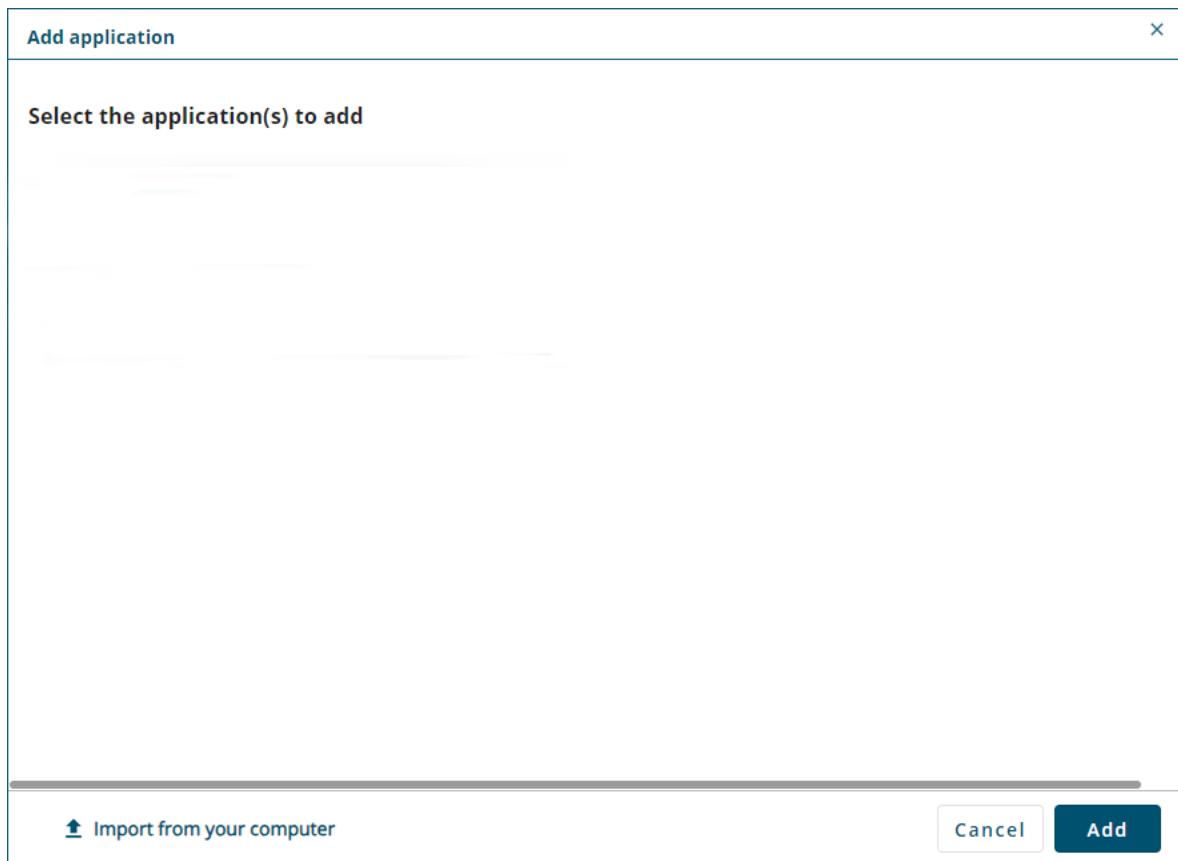

A list of applications available is shown. If there are no additional applications currently available, the window will be empty.

2. Select the checkbox for the application you want to install.
3. Click the **Add** button.

To add an application stored on the computer:

1. Click the **Add application** button.
The *Add application* window appears.
2. Click the **Import from your computer** link.
The *Open* dialog box appears.
3. Navigate to the folder that contains the application to install, select the application and click the **Open** button.
4. When the application has finished installing, click the **Done** button.
5. Click the **Add** button.

1.3.3 Remove Applications

Installed applications, other than the core tools (Manage, Playback, Convert and GRIT Monitor), can be removed from NovAtel Application Suite.

To remove an application:

1. Click the **Delete** icon () on the application to remove.
The *Delete Application* dialog box appears.
2. Click the **Delete** button.
3. When the application has finished deleting, click the **Done** button.

Chapter 2 Manage

The Manage tool is a graphic interface that allows you to configure and monitor a NovAtel receiver.


To use Manage with a receiver, the receiver must be physically connected to the computer running Manage using a serial, USB or Ethernet connection. For information about making the physical connection, refer to the OEM7 Receiver User Documentation Portal (docs.novatel.com/OEM7).

The communication parameters used to communicate with the receiver must also be defined in Manage. See *Devices Window* below for information about defining and saving the communication parameters.

To start Manage, click the **Manage** icon on the *NovAtel Application Suite* main window.

2.1 Devices Window

Before a Manage session can be started with a receiver, a Device must be added for the receiver on the *Devices* window. A Device contains the connection type and communication parameters used to communicate with a receiver.

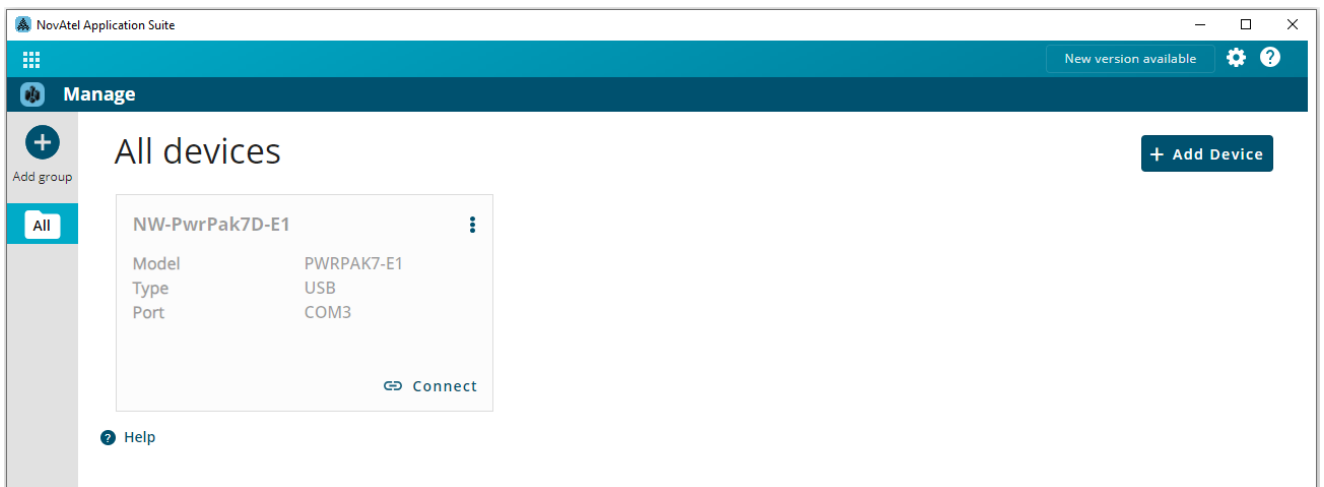

The Devices window contains all of the Devices defined in Manage. From this window, Devices can be added, edited and deleted. The Devices are used to start a connection with the receiver and open the Status and Configuration windows for the receiver.




The Devices in GRIT Monitor are synchronized with the Devices in Manage. If a Device is added, changed or removed in Manage, the addition, change or deletion is also made in GRIT Monitor.

2.1.1 Add a Device – Serial Connection

This type of Device is used for a receiver that is connected to the Manage computer using a serial (COM) port.

1. Click the **Add Device** button.

The New Connection dialog box opens.

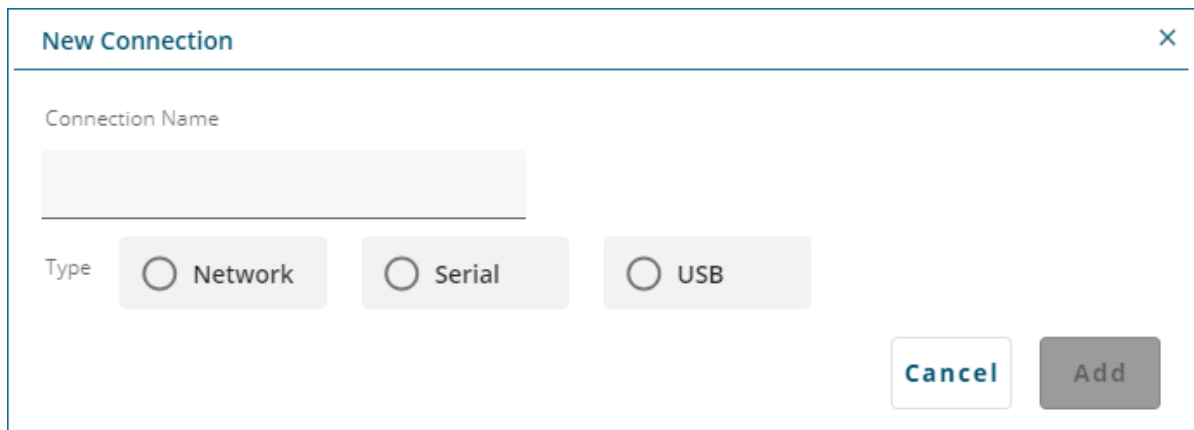

New Connection [X]

Connection Name

Type ☐ Network ☐ Serial ☐ USB


Cancel Add

2. In the *Connection Name* box, enter a name for the Device.

This name is used to identify this Device on the *Devices* window and on the *Status* and *Configuration* windows.

3. Click the **Serial** button.

The *New Connection* dialog box expands to show the serial connection parameters.

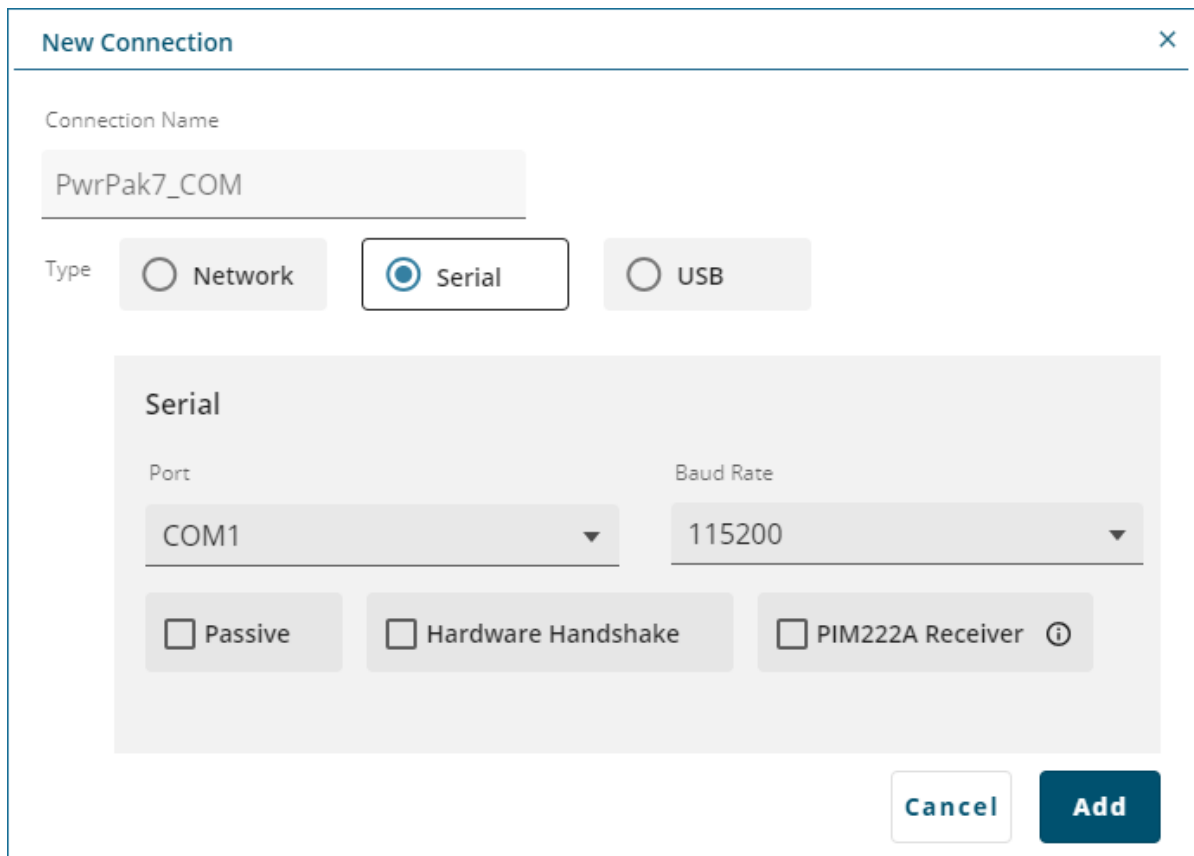

New Connection [X]

Connection Name

PwrPak7_COM

Type ☐ Network ☒ Serial ☐ USB

Serial

Port Baud Rate

COM1 115200

☐ Passive ☐ Hardware Handshake ☐ PIM222A Receiver ⓘ

Cancel Add

4. Click the **Port** drop menu and select the COM port the computer uses to connect to the receiver.
5. Click the **Baud Rate** drop menu and select the baud rate used to communicate with the receiver.

If *Auto* is selected, Manage will establish a connection at the highest baud rate available.



Baud rates higher than 115,200 bps are not supported by standard PC hardware. Special PC hardware may be required for higher rates, including 230400 bps and 460800 bps.

6. Use the **Passive** option to enable or disable Passive mode. Passive mode is used to avoid disruptions to logging or port configurations.

If the **Passive** option is selected, Manage attempts to communicate with the receiver at the specified baud rate. The baud rate selected must match the baud rate configured on the receiver COM port. The AUTO baud rate option can not be used when Passive is enabled.

If the **Passive** option is cleared, signal breaks are sent over the COM port and the receiver is configured to communicate at the specified baud rate. If Passive is disabled, all previously requested logs on that port will be stopped

7. Use the **Hardware Handshake** option to enable or disable hardware handshaking.

If the **Hardware Handshake** option is selected, the computer will use the CTS and RTS hardware signals to control data flow.

If the **Hardware Handshake** option is cleared, the computer does not use the CTS and RTS signals.



Not all receiver ports support the CTS and RTS signals. Do not enable hardware handshaking unless the receiver port supports CTS and RTS and handshaking is enabled on the receiver port.



If the new Device is a PIM222A receiver, you must select the PIM222A Receiver option to ensure the correct communication parameters are set.

8. Click the **Add** button.

A new Device labeled with the name entered in the *Connection Name* box is added to the *Devices* window.

2.1.2 Add a Device – USB Connection


This type of Device is used for a receiver connected to the Manage computer using a USB port.



A USB connection is not available for MarinePak7 receivers.

1. Click the **Add Device** button.

The *New Connection* dialog box opens.

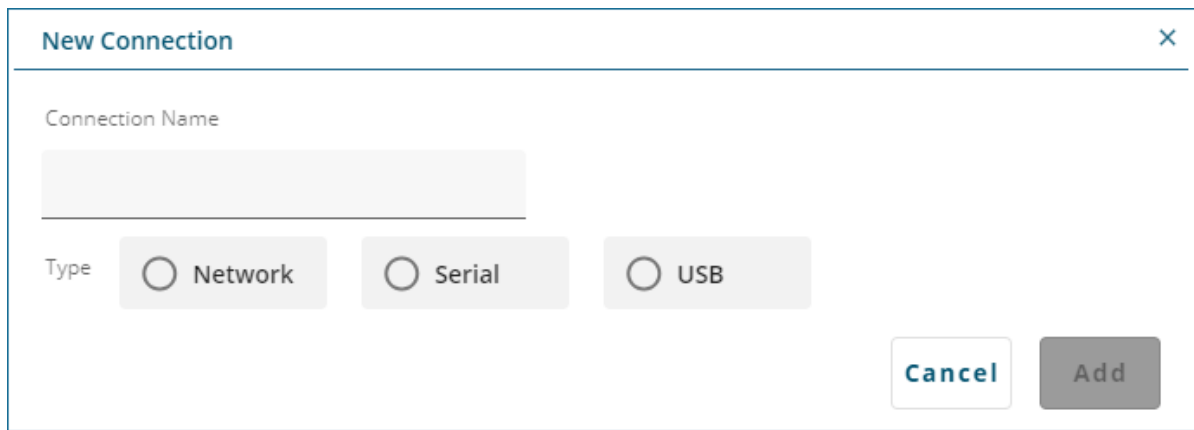


The 'New Connection' dialog box is shown. It has a title bar with a close button (X). Inside, there is a 'Connection Name' label above a text input field. Below this, there is a 'Type' label followed by three radio button options: 'Network', 'Serial', and 'USB'. At the bottom right, there are two buttons: 'Cancel' and 'Add'.

2. In the *Connection Name* box, enter a name for the Device.

This name is used to identify this Device on the *Devices* window and on the *Status* and *Configuration* windows.

3. Click the **USB** button.

The *New Connection* dialog box expands to show the USB parameters.

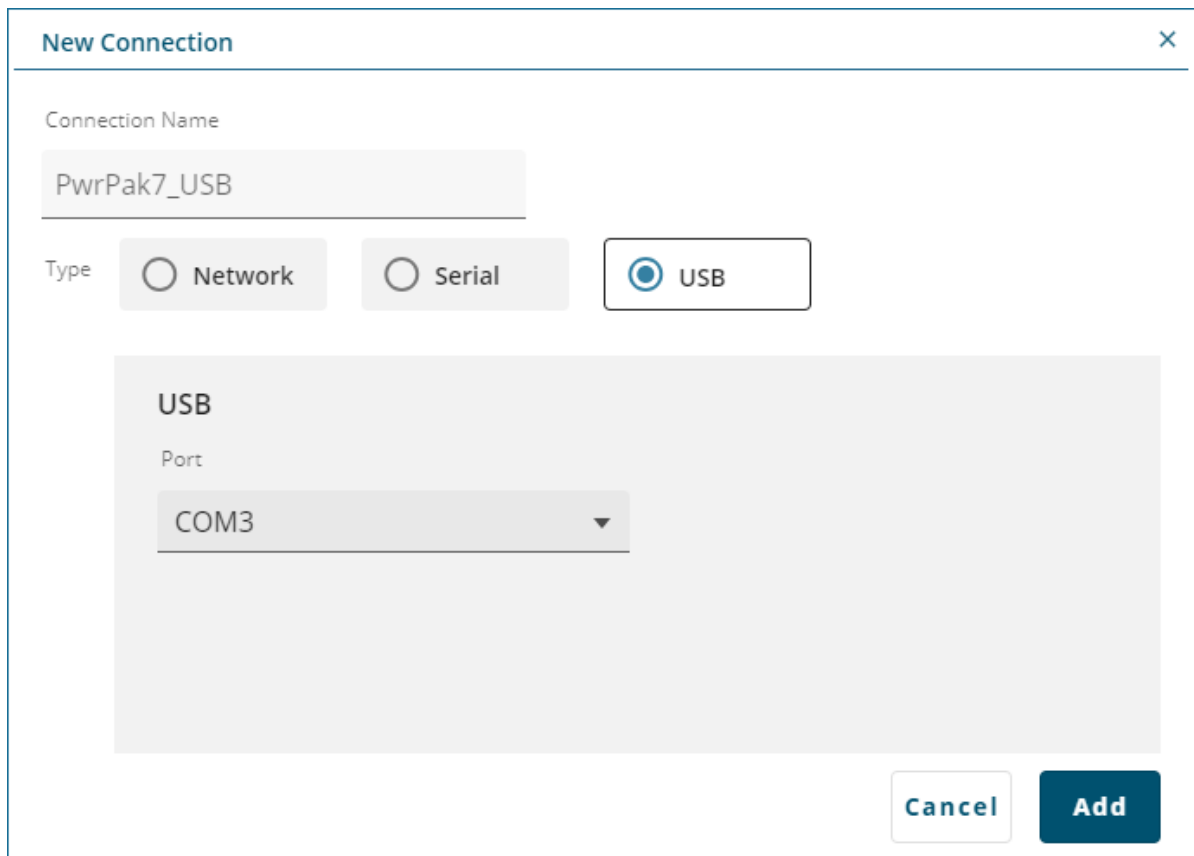

The 'New Connection' dialog box is shown in its expanded state. The 'Connection Name' field now contains the text 'PwrPak7_USB'. The 'Type' section shows the 'USB' radio button selected. Below this, a new section titled 'USB' is visible, containing a 'Port' label and a dropdown menu currently showing 'COM3'. The 'Cancel' and 'Add' buttons remain at the bottom right.

4. For each USB connection, the NovAtel USB drivers create three virtual COM ports. Click the **Port** drop menu and select the virtual COM port used for this receiver.
5. Click the **Add** button.

A new Device labeled with the name entered in the *Connection Name* box is added to the *Devices* window.



To communicate with a receiver using a USB port, the NovAtel USB drivers must be installed on the computer. For Windows 10/11 computers, the drivers are automatically downloaded. For other operating systems, these USB drivers are available on the NovAtel website at novatel.com/support/support-materials/software-downloads.

2.1.3 Add a Device – Ethernet Connection

This type of Device is used for a receiver connected to the Manage computer using an Ethernet port.

1. Click the **Add Device** button.

The *New Connection* dialog box opens.

The *New Connection* dialog box is shown with the following fields and controls:

- Connection Name:** A text input field.
- Type:** Three radio buttons labeled **Network**, **Serial**, and **USB**.
- Buttons:** **Cancel** and **Add** buttons at the bottom right.

2. In the *Connection Name* box, enter a name for the Device.

This name is used to identify this Device on the *Devices* window and on the *Status* and *Configuration* windows.

3. Click the **Network** button.

The *New Connection* dialog expands to show the network connection parameters.

The *New Connection* dialog box is shown in two states:

- Left Screenshot:** The **Network** section is expanded. The **IP Address** radio button is selected. Fields for **IP Address**, **Port**, and **Protocol** (TCP/UDP) are visible.
- Right Screenshot:** The **Network** section is expanded. The **Host Name** radio button is selected. Fields for **Host Name**, **Port**, and **Protocol** (TCP/UDP) are visible.

4. If specifying the connected device by its IP address, click the **IP Address** option and enter the IP address of the receiver in the **IP Address** box.

If specifying the connected device by its host name, click the **Host Name** option and enter the host name of the device in the **Host Name** box.

5. In the **Port** box, enter the port used to communicate with the receiver.

The default ports are 3001 to 3007.

- Click the button (**TCP** or **UDP**) for the protocol used for communication with the receiver.




TCP is the default for ICOM ports.

- Click the **Add** button.

A new Device labeled with the name entered in the *Connection Name* box is added to the *Devices* window.

2.1.4 Open/Close a Connection

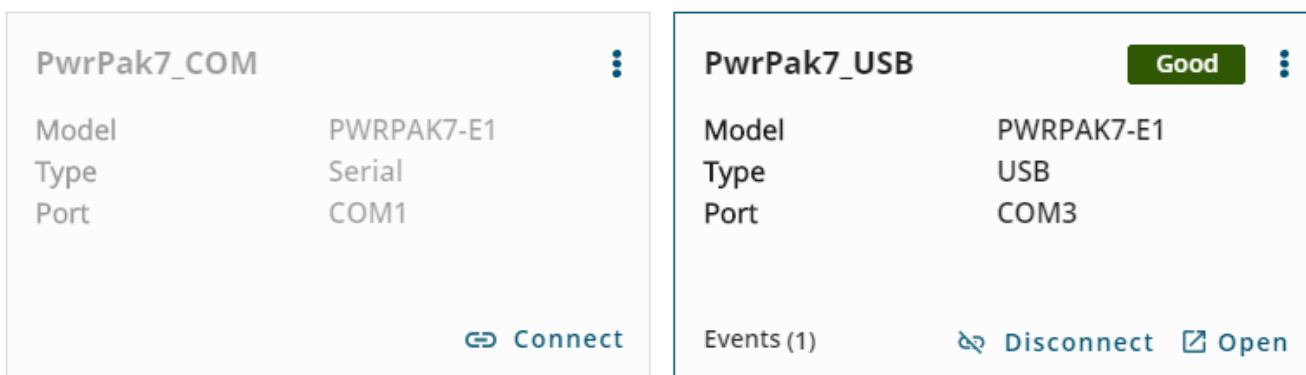

A connection to the receiver must be established before Manage can be used to monitor or configure the receiver.

To connect to the receiver, click the **Connect** button. The device box changes to show *Disconnect* and *Open* buttons.

To close a connection, click the **Disconnect** button. The device box changes to show the *Connect* button.

2.1.5 Open the Status and Configuration Windows for a Device

When Manage has a connection to the receiver, the *Status and Configuration* windows for the receiver can be viewed. To open the Status and Configuration windows, click the **Open** button.

See *Status and Configuration Window* on page 22 for more information.

2.1.6 Change the Communication Parameters of a Device

To change the communication parameters used to connect to a receiver:

- Click the menu button (⋮) on the Device to change.
- Click **Edit Device**.
- Change the communication parameters to match the new settings required to connect to the receiver.

2.1.7 Delete a Device

To delete a Device:

- Click the menu button (⋮) on the Device to delete.
- Click **Delete Device**.

A confirmation dialog box appears.

3. Click the **Yes** button.



The Delete Device option is not available when Manage is connected to the receiver.

2.1.8 Download and Load a Receiver Configuration

The configuration parameters of a receiver can be stored in a file on the NovAtel Application Suite computer. This file can be used to restore a configuration to a receiver or copy the configuration from one receiver to another.

To save a configuration file:

1. Click the **Connect** button on the Device to establish a connection to the receiver.
2. Click the menu button (☰).
3. Click **Download configuration**.

The configuration is saved.

The configuration file is stored at *Documents\NovAtel\Data\Download Configuration*. The file is named with the receiver serial number and the date and time the configuration was saved.



For enclosure type receivers (e.g. PwrPak7), the serial number used is the serial number of the GNSS card inside the enclosure.

To load a configuration file:

1. Click the **Connect** button on the Device to establish a connection to the receiver.
2. Click the menu button (☰).
3. Click **Load configuration**.

The *Open* dialog box appears.

4. Select the file to load and click the **Open** button.

A dialog box appears showing the loading status.

5. Click the **Done** button.

A responses text file is saved in the *Documents\NovAtel\Data\Download Configuration* folder. This text file contains a detailed status of the configuration loading. The text file is named with the configuration file name, the date and time the configuration was loaded and the term "responses".

2.1.9 Group the Devices

When NovAtel Application Suite is installed, the **ALL** group is the only group available. This group contains all of the Devices added.


The added Devices can be organized into additional groups to make it easier to find Devices or to put similar Devices in a single location.

Add a Group

To add a group:

1. Click the  button.


The *New Group* dialog box displays.

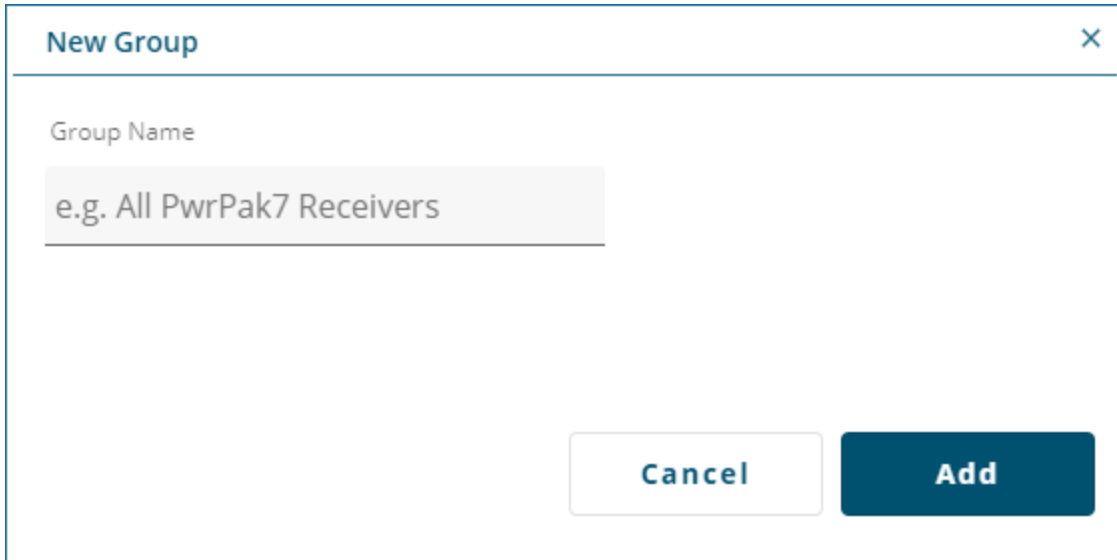The image shows a 'New Group' dialog box. It has a title bar with the text 'New Group' and a close button (X) on the right. Below the title bar is a text input field labeled 'Group Name'. Inside the input field, there is a placeholder text 'e.g. All PwrPak7 Receivers'. At the bottom of the dialog box, there are two buttons: 'Cancel' and 'Add'.

2. In the **Group Name** box, enter a name for the group.
3. Click the **Add** button.

The *Devices* window changes to show the new group and a new group icon (folder icon) is added to the left side of the window.

Open a Group

All of the groups available on the *Devices* window are shown on the left side of the *Devices* window. Each group is represented by a folder icon (e.g. .

To open a group, click the folder icon for the group. The *Devices* window changes to show only the devices that are in the selected group.

Add a Device to a Group

To add a new Device to a group:

1. Click the **Add Device** button.

The *New Connection* dialog box opens.

2. Enter the Device information.


See *Add a Device – Serial Connection* on page 12, *Add a Device – USB Connection* on page 14 or *Add a Device – Ethernet Connection* on page 16 for information about adding a Device.

Change the Devices Assigned to Group

To change the Devices in a group:

1. Click the folder icon for the group.

The *Devices* window changes to show the Devices currently in the group.

2. Click the menu button () beside the group name and click **Update Devices**.

A dialog box appears showing the Devices available to add to the group.

Update Devices in NW

☒ Select All

NW-PwrPak7D-E1	<input type="checkbox"/>	PwrPak7_2456	<input checked="" type="checkbox"/>
Model	PWRPAK7-E1	Model	PWRPAK7-E1
Type	USB	Type	Network
Port	COM3	IP Address	198.161.71.88
		Port	3001

Cancel Update

Devices that are already in the group have the check box selected.

3. To add a Device to the group, select the check box for the Device.

To remove a device from the group, clear the check box for the Device.

To select all available Devices, select the **Select All** check box.

4. Click the **Update** button.

Remove a Device from a Group

To remove a Device from a group:

1. Click the folder icon for the group.

The *Devices* window changes to show the Devices currently in the group.

2. Click the menu button (⋮) on the Device to remove.

3. Click **Remove from Group**.

A confirmation dialog box appears.


4. Click the **Yes** button.



Removing a Device from a group does not delete the Device from the *Devices* window. To delete a Device from the *Devices* window, see *Delete a Device* on page 171.


Change the Group Name

To change the name of the Group:

1. Click the menu button () beside the group name.
2. Click **Edit Group**.
The *Edit Group* dialog box appears.
3. In the **Group Name** box, enter the new name for the group.
4. Click the **Edit** button.

Delete a Group

To delete a group:

1. Click the menu button () beside the group name.
2. Click **Delete Group**.
A confirmation dialog box appears.
3. Click the **Yes** button.

2.2 Status and Configuration Window

When a connection to a receiver is opened, the Status and Configuration window is displayed. From this window, all of the status and configuration windows for the receiver can be accessed.

The screenshot shows the Manage window with the following components:

- Connections Bar:** Located at the top, it shows the current device 'NW-Pwr... (1)' and an 'Add Device' button.
- Menu Bar:** Located below the Connections Bar, it contains 'Status', 'Configuration', 'Settings', 'Tools', and 'Device'.
- Summary Bar:** Located on the right side, it contains a notification icon and a 'Summary' label.
- Positioning Section:** Shows 'Good' status. Details include Position (PPP Single), Latitude (51.1504369°), Longitude (-114.0306788°), SPAN Height (MSL) (1097.42 m), and Aiding (1097.42 m).
- Device Section:** Shows 'Good' status. Details include Model (PWRPAK7-E1), CPU Usage (41%), Storage Usage (0%), Temperature (60 °C), Antenna Voltage (5.2 V), and Antenna Current (0.1 mA).
- Interference Section:** Shows 'Good' status. Details include 'Not detected'.
- SPAN Section:** Shows 'Good' status. Details include Status (INS Solution Good), Position type (INS PPP), Alignment (User Command), Converged (Not Converged), and Azimuth (0.7677°).
- Satellite View:** Shows a map with 'Tracked' status and buttons for 'In Use', 'Not Used', and 'Missing'.

If there are any current status events for the receiver, notification boxes for the events will temporarily appear on the right side of the window. To view these events later, use the *Events* menu. See *Events* on page 50.

2.2.1 Connections Bar

The *Connections* bar appears at the top of all Manage windows. This bar shows all the Devices to which the computer currently has a connection.

The Device that is currently being viewed is black. To view a different Device, click the tab on the Connections bar for that Device.

To close a connection, click the **X** button on the Device tab.

To add a new Device, click the **Add Device** button on the *Connections* bar. The *New Connection* dialog box appears. See *Devices Window* on page 12 for information about adding a Device.

2.2.2 Menu Bar

The **Menu** bar provides access to other tools and settings available in Manage. For information about the Menu, see *Menu* on page 24.

2.2.3 Summary Bar

The Summary bar provides status information about the receiver.

Positioning Good				Device Good			
Position:	PPP Single	SPAN	Aiding	Model	PWRPAK7-E1	Time	21:26:26
Latitude	51.1504369°	Height (MSL)	1097.53 m	CPU Usage	36%	Storage Usage	0%
Longitude	-114.0306797°			Logging	Inactive	Interference	Not detected
						Spoofing	Not detected

Status Indicator

A colored bar with text indicates the status of the summary information shown.

Color	Text	Description
Green	Good	The receiver is functioning and there are no warnings or errors.
Amber	Warning	The receiver is functioning, but there are one or more issues that may require attention.
Red	Error	An issue is preventing the receiver from functioning. The Error state will remain until the situation is resolved.

If the receiver has a warning or error, click the status indicator to open a tooltip with more information about the warning or error. You can also check the status boxes on the *Status* tab. An amber or red status indicator appears on the status box where more information about the warning or error can be found. See *Status Window* on page 52 for more information.

Position

The *Position* field shows all of the positioning types configured on the receiver. The positioning type that is currently being used to calculate the position is highlighted in a box.

Latitude

The *Latitude* field shows the latitude of the calculated position in degrees.

Longitude

The *Longitude* field shows the longitude of the calculated position in degrees.

SPAN

The *SPAN* field shows the status of SPAN GNSS+INS technology.

Height

The *Height* field shows the height above mean sea level of the calculated position in metres.

Model

The *Model* field shows the receiver type.

CPU Usage

The *CPU Usage* field shows the amount of receiver computing (CPU) power currently being used.

Logging

The *Logging* field shows the status of logging to the computer or the receiver's internal memory.

Time

The *Time* field shows the current UTC time.

Storage Usage

The *Storage Usage* field shows the amount of receiver internal memory that has been used.

Interference

The *Interference* field indicates if the receiver has detected interference in the GNSS signal.

Spoofing

The *Spoofing* field indicates if the receiver has detected a spoofing signal.

2.2.4 Menu

The Manage menu is available on all Manage windows. It provides access to other Manage windows and settings for the Manage interface.



Click a menu item to access the options available.

Status

Click **Status** to display the Status window. See *Status Window* on page 52 for more information.

Configuration

Click **Configuration** to display the Configuration window. See *Configuration Window* on page 69 for more information.

Settings**General**

Click **General** to open the *General* window.

From the *General* window you can change the standard used for the height information shown. For more information about the general settings, see *General Settings* on page 26.

Networking

Click **Networking** to open the *Networking* window.

From the *Networking* window you can edit the Wi-Fi client, Ethernet and Wi-Fi Hotspot parameters for the receiver. For information about the networking parameters, see *Networking* on page 199.

Displays

Click **Displays** to open the *Vehicle Setup* window. See *Vehicle Setup* on page 30 for more information.

Tools**Terminal**

Click **Terminal** to open the *Terminal* window.

The *Terminal* window provides an interface to the receiver's command line interface. From the command line interface, you can access the entire suite of OEM7 commands and logs. For more information about the *Terminal* window, see *Terminal* on page 209.

Interference Toolkit

Click **Interference Toolkit** to open the *Interference Toolkit* window.

The Interference Toolkit is a feature that monitors, quantifies and removes interference sources to prevent interference from impacting receiver performance. For more information about the *Interference Toolkit* window, see *Interference Toolkit* on page 33.

Device

The options on the **Device** menu provide access to additional information about the receiver and perform actions on the receiver.

Details

Click **Details** to open the *Details* window.

From the *Details* window you can view information about the receiver hardware and enabled software options. For information about the *Details* window, see *Details* on page 44.

Storage

Click **Storage** to open the *Storage* window.

From the *Storage* window you can manage the log files stored on internal memory. For information about the *Storage* window, see *Storage* on page 47.

Update

Click **Update** to open the *Update* window.

From the *Update* window you can load new software on to the receiver. For information about the *Update* window, see *Update* on page 49.

Restart

Click **Restart** to open the *Restart* page.

The **Restart** page provides two restart options.

- **Factory Reset**
Click the **Factory Reset** button to set the receiver configuration parameters back to factory defaults and restart the receiver.
- **Restart**
Click the **Restart** button to restart the receiver without changing configuration parameters.

To erase all LUA scripts on the receiver, select the **Remove LUA Scripts on restart** option before clicking **Factory Reset** or **Restart**.




The *Remove LUA Scripts on restart* option is not available on MarinePak7 receivers.

Events

The *Events* menu is available only on the *Status* window. From the *Events* menu, you can view the events (warnings, errors or status messages) that apply to the receiver. For information about the *Events* menu, see *Events* on page 50.

2.2.5 General Settings

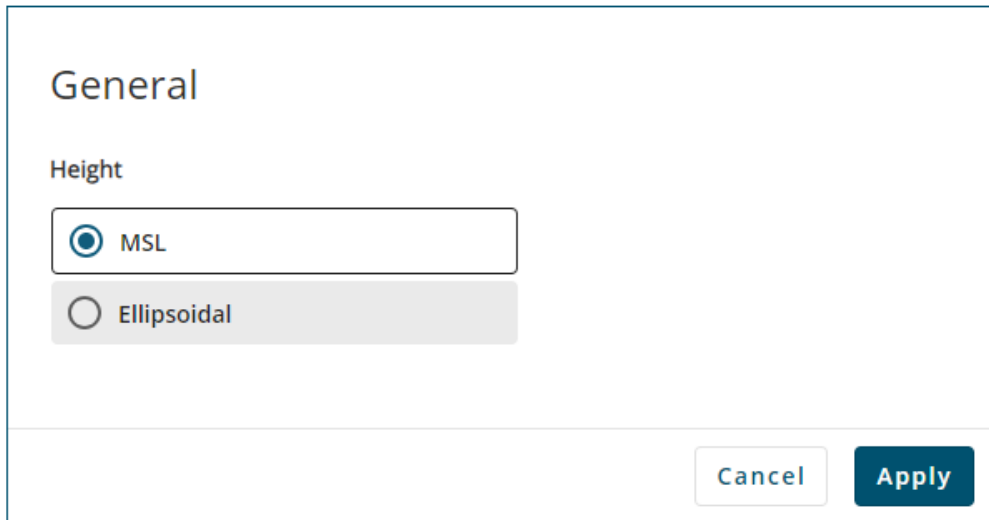The screenshot shows a window titled "General". Inside, there is a section labeled "Height". Below this label, there are two radio button options. The first option is "MSL" (Mean Sea Level), which is selected, indicated by a filled blue circle. The second option is "Ellipsoidal", which is not selected, indicated by an empty circle. At the bottom right of the window, there are two buttons: "Cancel" and "Apply".

Use the *General* window to configure the standard Manage uses for reporting the height of the receiver. This setting applies to all of the height fields.

Height

Select **MSL** to display the receiver height relative to mean sea level.

Select **Ellipsoidal** to display the ellipsoidal height of the receiver.




For OEM7 receivers, the default is MSL.
For MarinePak7 receivers, the default is Ellipsoidal.

2.2.6 Networking


Use the *Networking* window to configure the Wi-Fi and Ethernet interfaces on the receiver. Only the interfaces that are available on the receiver are shown.

Wi-Fi

Use the *Wi-Fi* tile to configure the receiver to connect to a Wi-Fi access point.

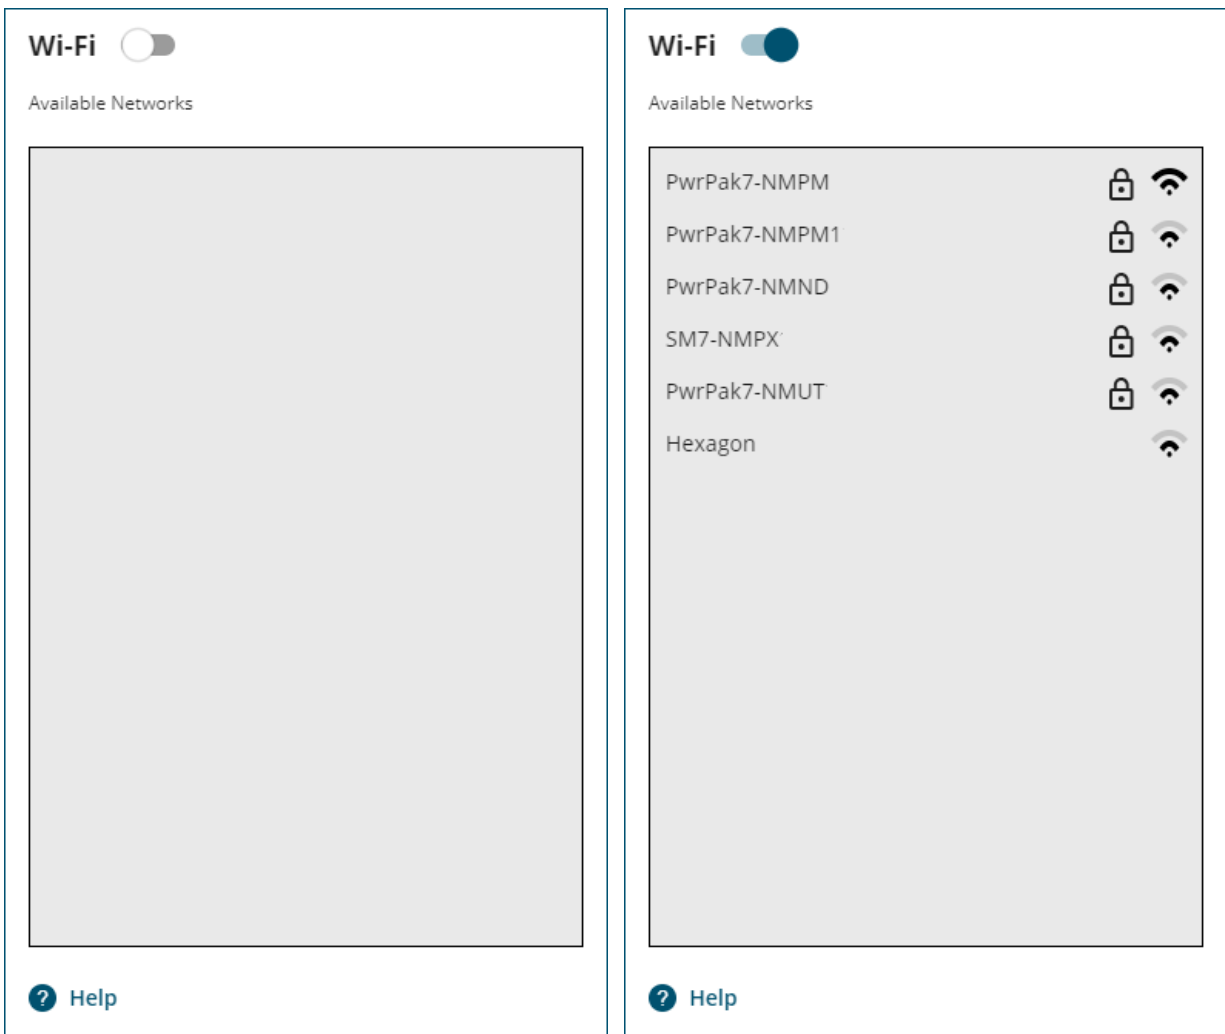

Off/On

Set the Wi-Fi switch to **On** () to enable the Wi-Fi client on the receiver.

Set the Wi-Fi switch to **Off** () to disable the Wi-Fi client.

Available Networks

The Available Networks box displays the Wi-Fi access points (hotspots) the receiver has detected.

Click the access point to which you want the receiver to connect. If the access point is secured, and this is the first time the receiver has attempted to connect, an access dialog box appears. Enter the user name and password for the selected Wi-Fi access point and click **Connect**.

When the receiver makes a connection to an access point, the connection details are stored on the receiver. Up to four access points are stored on the receiver. When the receiver gets into range of a stored access point, it will automatically connect.

To remove an access point from receiver memory:

1. Click the **X** button on the access point. A dialog box appears.
2. Click **Yes**.




NovAtel Application Suite does not support configuring the Wi-Fi interface on the MarinePak7.

Ethernet

Use the *Ethernet* tile to configure the Ethernet interface on the receiver.


The image shows two versions of the 'Ethernet' configuration window. The left window has the 'DHCP' toggle switch turned off (grey). Below it are four text input fields: 'IP Address', 'Subnet Mask', 'Gateway' (containing '0.0.0.0'), and 'DNS IP Address'. The right window has the 'DHCP' toggle switch turned on (blue). Below it are two text input fields: 'Wired IP Address' and 'Wireless IP Address', both containing a single dash '-'. Both windows feature a 'Help' icon (a question mark in a circle), a 'Cancel' button, and an 'Apply' button at the bottom.

If the receiver is connected to a network that uses DHCP:

1. Set the *DHCP* switch to **On** () to enable DHCP.
2. Click the **Apply** button.


The *IP Address* field displays the IP address assigned to the receiver.

If the receiver is being configured to use a static IP address:

1. Set the *DHCP* switch to **Off** () to disable DHCP.
2. In the *IP Address* box, enter the IP address for the receiver.
3. In the *Subnet Mask* box, enter the subnet mask for the receiver.
4. In the *Gateway* box, enter the IP address of the gateway.
5. In the *DNS IP Address* box, enter the IP address of the primary DNS server.
6. Click the **Apply** button.

Wi-Fi Hotspot

Use the Wi-Fi Hotspot window to configure the receiver to function as a Wi-Fi hotspot (access point). Devices, such as the device used to run Manage Web, can then access the receiver using Wi-Fi.

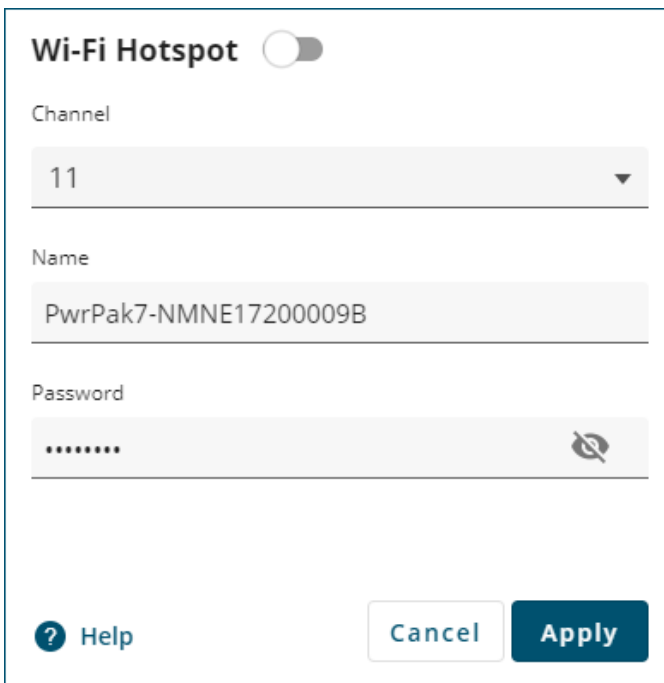

The image shows a 'Wi-Fi Hotspot' configuration window. At the top, there is a title 'Wi-Fi Hotspot' followed by a toggle switch that is currently turned off. Below the title, there are three input fields: 'Channel' with a dropdown menu showing '11', 'Name' with the text 'PwrPak7-NMNE17200009B', and 'Password' with a masked password '*****' and a toggle icon to show/hide the password. At the bottom left is a 'Help' link with a question mark icon. At the bottom right are 'Cancel' and 'Apply' buttons.

Wi-Fi Hotspot

Use the *Wi-Fi Hotspot* switch to enable or disable the Wi-Fi hotspot hosted by the receiver.



If you disable the Wi-Fi hotspot, Manage Web will not be able to access the receiver using Wi-Fi.

Channel

This parameter sets the 802.11 channel that the Wi-Fi hotspot uses.

To change the 802.11 channel used, click the **Channel** drop list and select the new channel.

Name

This parameter is the SSID that the receiver broadcasts from the Wi-Fi hotspot.

To change the SSID, enter the new SSID in the *Name* box. The SSID can be up to 33 characters long.

Password

This parameter is the password that Wi-Fi clients must enter to access the receiver's Wi-Fi hotspot.

To change the password, enter the new password in the *Password* box. The password must be between 8 and 64 characters long.



NovAtel Application Suite does not support configuring the Wi-Fi interface on the MarinePak7.

Click **Apply** to save the Wi-Fi Hotspot changes to the receiver.

2.2.7 Vehicle Setup

Use the *Vehicle Setup* window to configure the vehicle reference point. The vehicle reference point is used when configuring SPAN.



The Vehicle Setup window is only available on receivers with an internal IMU (CPT7, CPT7700, PwrPak7-E1, PwrPak7D-E1, PwrPak7-E2, PwrPak7D-E2 or SMART7-S) or receivers connected to a SPAN compatible IMU.

Vehicle Setup

Type

Boat

Car

Drone

Fixed Wing

Generic

Helicopter

Human

Tractor

Train

Van

Large Vessel

Dimensions*

Max Height	1.5 m	Reference Point (RP) Location**	From Base Line	0 m
Max Width	2 m		From Lateral Line	0 m
Max Length	4 m		From Rear Line	0 m

*These measurements can be approximate. These measurements only affect the visual representation of the chosen vehicle and have no effect on positioning.

**This reference point is only used to help position your IMU. It is never used as a positioning point.

To configure SPAN with this vehicle, use the [SPAN configuration wizard](#).

Type

Click the **Type** button for the vehicle type that best suits the vehicle on which the SPAN system is installed. The graphic representations of the vehicle and the default values in the *Dimensions* fields will change.

Dimensions

The *Dimensions* fields define the size of the vehicle in which the SPAN system is installed.



These fields are used to properly scale the visual representation of the vehicle. They are not used in the position solution.

Max Height

The maximum height of vehicle in metres.

Max Width

The maximum width of the vehicle in metres.

Max Length

The maximum length of the vehicle in metres.

Reference Point (RP) Location

The *Reference Point (RP) Location* is used on the *SPAN Configuration* window to show where the IMU is located in the vehicle.



These fields are used only to show the location of the IMU on the *SPAN Configuration* window. They are not used in the position solution.

The values entered for the Reference Point (RP) Location must be within the maximum dimensions defined for the vehicle.

From Base Line

Enter the distance from the Base Line to the Reference Point in metres.

From Lateral Line

Enter the distance from the Lateral Line to the Reference Point in metres.

From Rear Line


Enter the distance from the Rear Line to the Reference Point in metres.

When values are entered into the Reference Point Location fields, the Reference Point location shown on the graphic changes.

After the vehicle setup is complete, click the **SPAN configuration wizard** link to access the *SPAN Configuration* on page 104 window.

2.2.8 Terminal

Use the *Terminal* window to send commands to the receiver and display any receiver acknowledgments and outputs.

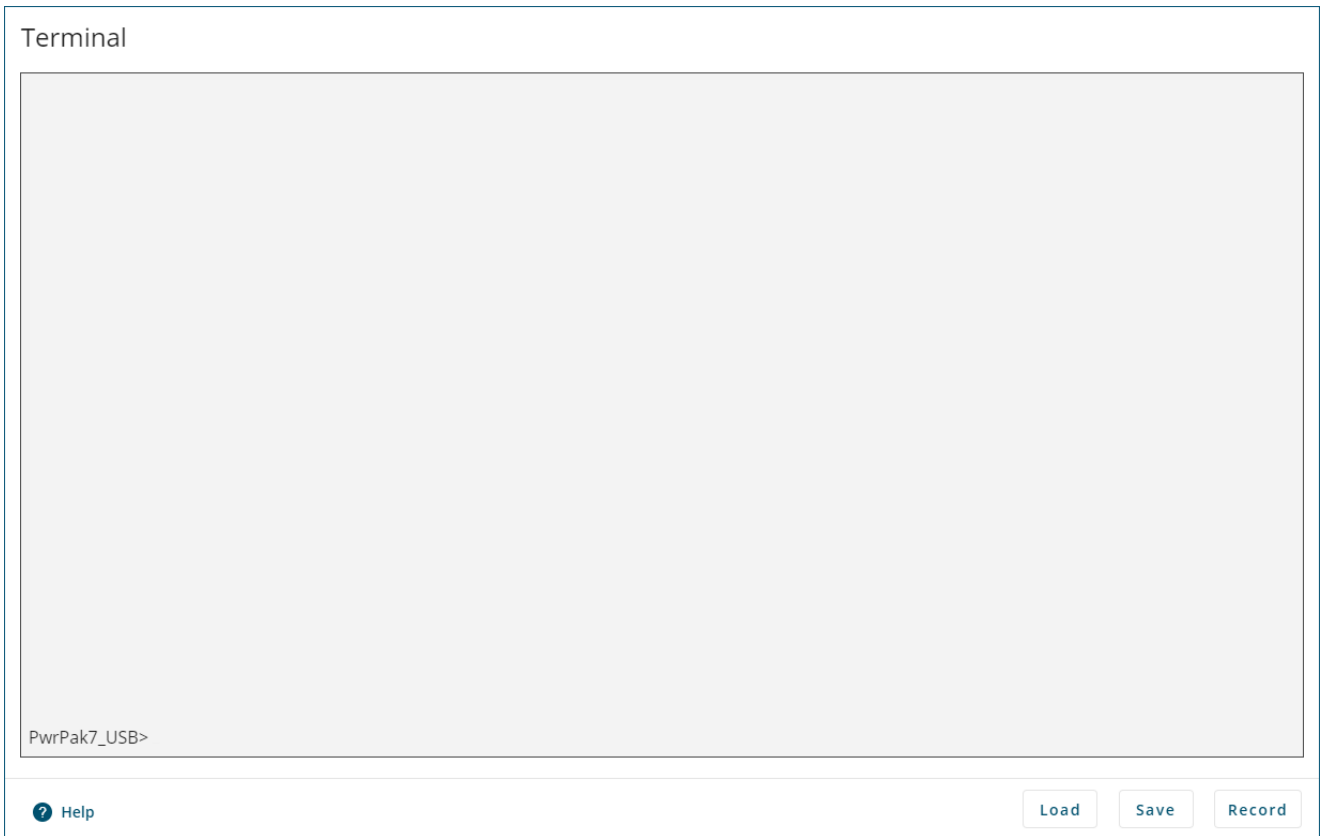

To enter a command:

1. Type the command and press **ENTER**.

For information about the commands available and commands parameters, refer to the OEM7 Receiver User Documentation Portal (docs.novatel.com/OEM7).

To re-issue a command:

1. Use the Up and Down arrow keys on the keyboard to select the command to re-issue.
2. Press **ENTER**.

Three buttons are also available on the *Terminal* window.

Load

The **Load** button is used to run a set of commands stored in a file on the computer. A typical use of this command file is to load a common configuration on to the receiver. To load a command file:

1. Click the **Load** button.
The *Open* dialog appears.
2. Navigate to the folder that contains the command file and select the file.
3. Click the **Open** button.

The commands in the file are sent to the receiver.



A semicolon (;) can be used to exclude (comment out) a line in the file being loaded. When a semicolon is added to the start of a line, the contents of that line will not be processed by the receiver.

Save

The **Save** button is used to save the commands issued in the current session of the terminal to a file. To save the contents of the *Terminal* window to a file:

1. Click the **Save** button.
The *Save File* dialog box appears.
2. Navigate to the folder where the command file will be stored
3. Enter a name for the file in the *File name* box.
4. Click the **Save** button.

Record

The **Record** button is used to record all activity in the Terminal starting when the button is clicked. To record a Terminal session:

1. Click the **Record** button.
All activity on the Terminal starts to be recorded.
2. After the Terminal activity to be recorded is finished, click the **Stop** button to stop recording.
The *Save file* dialog box appears
3. Navigate to the folder where the recording file will be stored
4. Enter a name for the file in the *File name* box.
5. Click the **Save** button.




Binary logs saved during a Terminal recording will have a "_28" Virtual Port identifier.

2.2.9 Interference Toolkit

The Interference Toolkit (ITK) feature monitors, quantifies and removes interference sources to prevent interference from impacting receiver performance.

Using the Interference Toolkit, you can monitor the Radio Frequency (RF) spectrum in a range of frequencies around the GNSS signals that are being received by the OEM7 receiver. If an interference signal is detected, information about the interference is displayed on the *Interference* status tile. To open the Interference Toolkit window, click the **Tools** menu and then click **Interference Toolkit**.

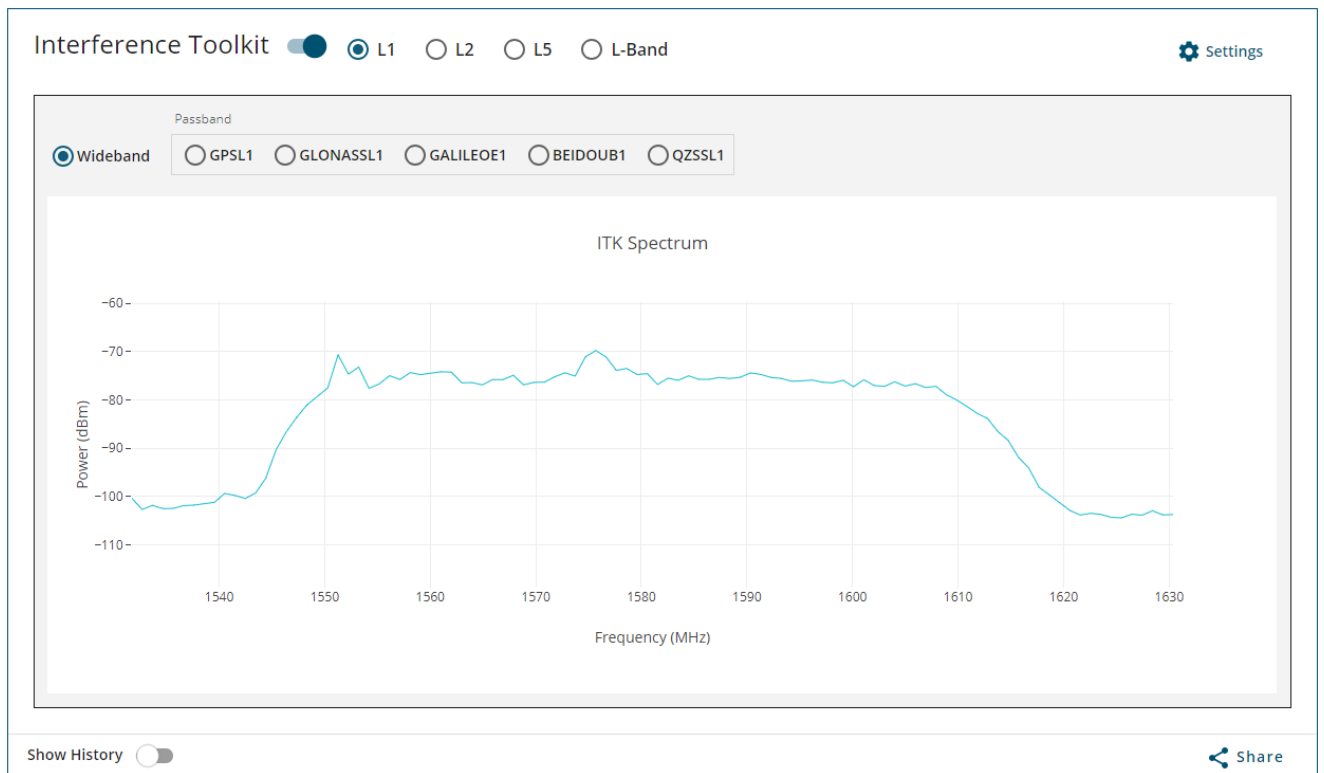


Due to the high volume of data, a higher bandwidth medium, such as USB or Ethernet, is recommended when monitoring signals using the Interference Toolkit.

When the *Interference Toolkit* window is opened, a plot that shows the detected power level of all of the frequencies in the selected band is shown. This is a dynamic plot that changes based on the signal received by the receiver. If there is an interference signal in the band, it will appear as an unexpected spike in the received power level.

Interference detection can be enabled or disabled using the Interference Toolkit switch. Set the **Interference Toolkit** switch to enabled (☒) , to enable interference detection. Set the **Interference Toolkit** switch to disabled (☐) , to disable interference detection.

Change the Frequencies Viewed


When the *Interference Toolkit* window is opened, the window shows a plot of the wideband L1 signal. This plot shows the detected power level of all of the frequencies in the L1 band. To view the plot of a specific signal within the band, click the button for the signal in the *Passband* box (for example, GPSL1).

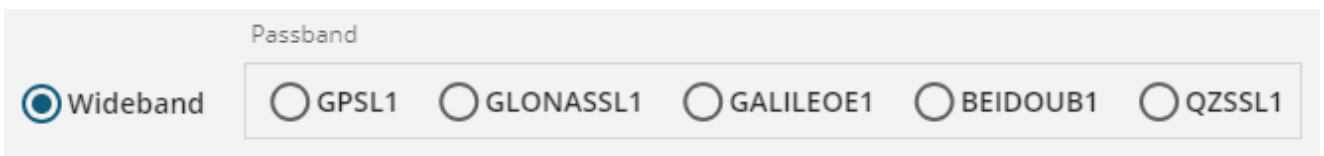

The plot changes to the set of frequencies specific to the selected signal (GPS L1 in this example).

To view of a different frequency band, click the tab for the desired band (for example, L2).

Interference Toolkit ☐ L1 ☒ L2 ☐ L5 ☐ L-Band

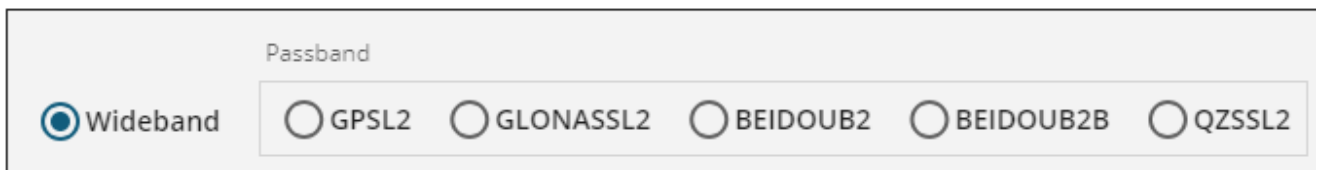


The plot changes to show the received power levels of the frequencies in the selected band (L2 in this example).

Display Options

There are several buttons on the *Interference Toolkit* window that change how the plot is shown.

Show History

The Show History plot shows a rolling history of the detected power levels.

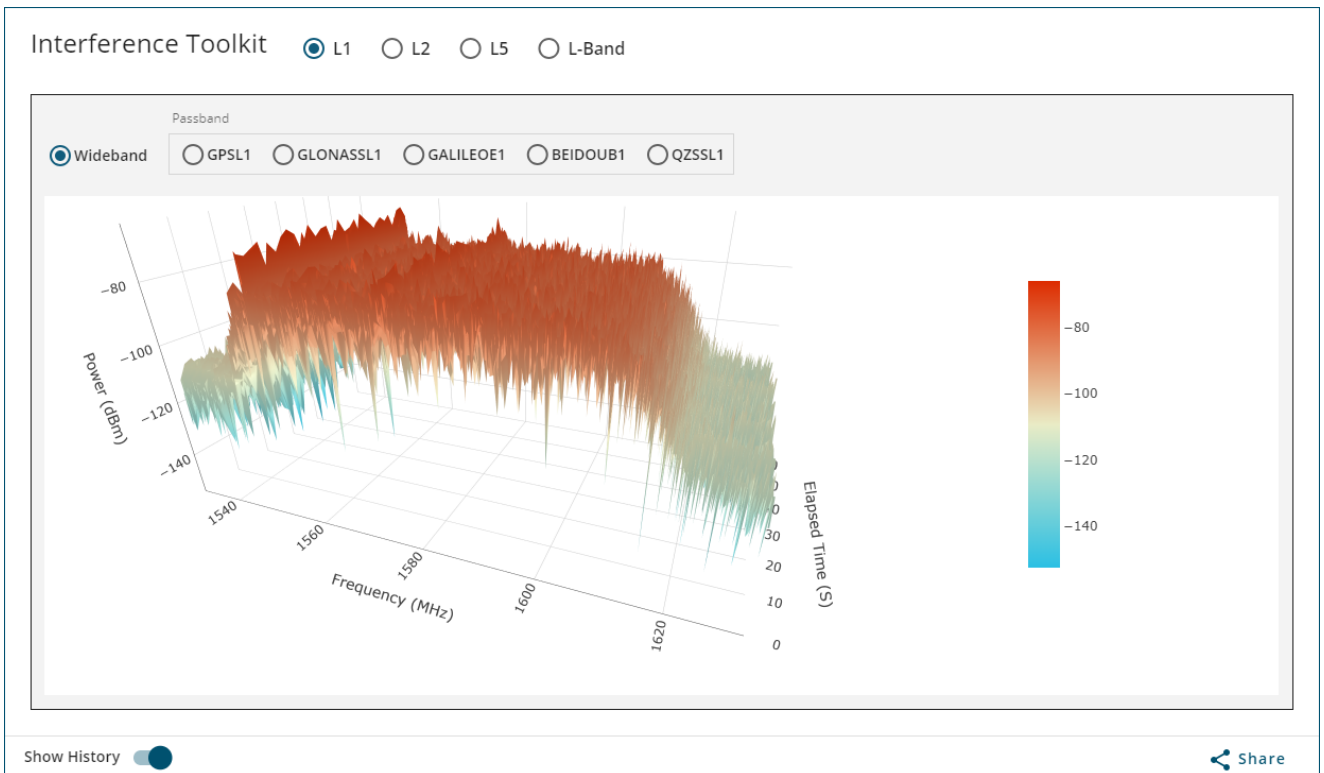


The Show History plot can be rotated by clicking and dragging the plot.

When the **Show History** option is on (☒) , the frequency plot shows a rolling history of the detected power levels.

When the **Show History** option is off (☐) , the plot shows the currently detected power levels.

Display Buttons

When the mouse pointer is moved over the frequency plot, the power level (blue) and frequency (dark gray) of the signal at that location are shown.

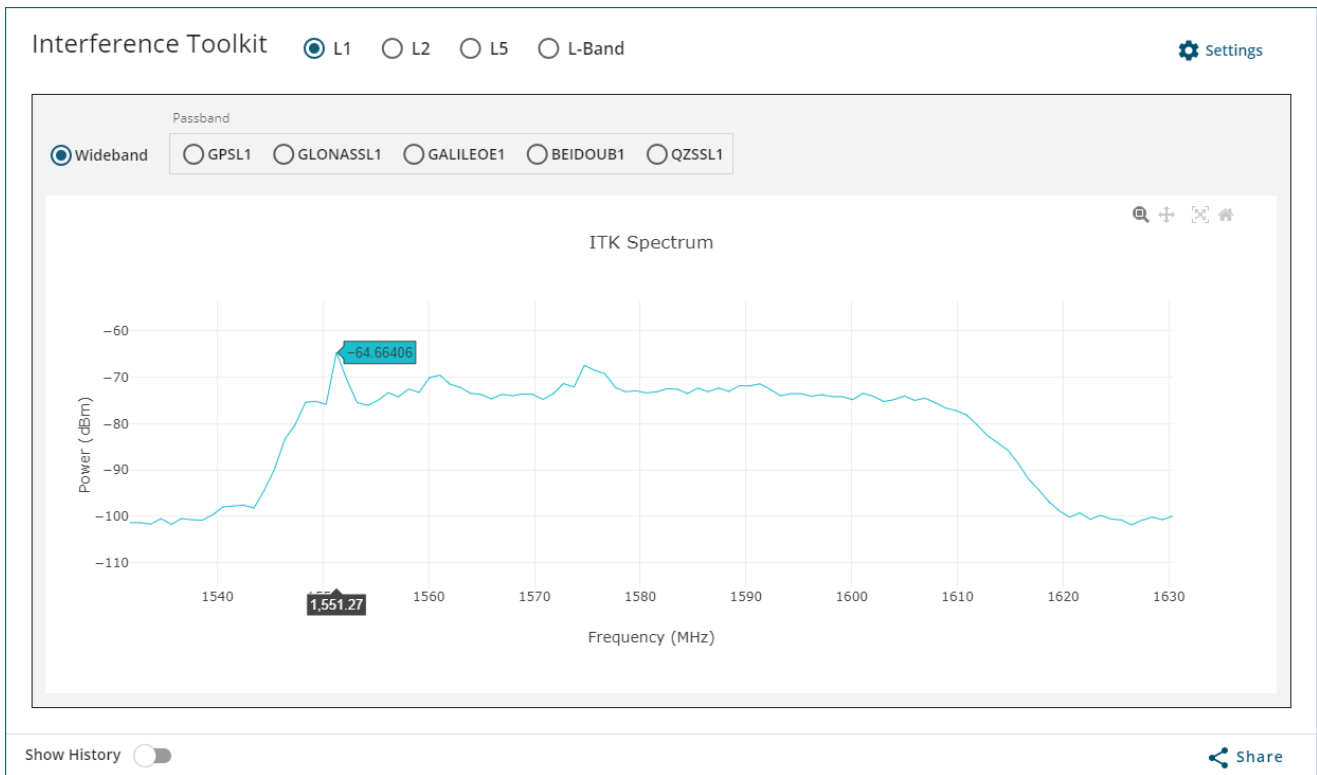

As well, several buttons appear at the top of the frequency plot. The functions of these buttons are described in the following table.

Icon	Name	Available on	Description
	Zoom	Real Time Plot History Plot	Use this button to zoom in on an area of the plot. 1. Click the button. 2. Click and drag to select an area of the plot. The zoom level changes to show the selected area. On the History Plot, the plot zooms as the mouse is dragged.
	Pan	Real Time Plot History Plot	Use this button to move around in the plot. 1. Click the button. 2. Click and drag on the plot to move the plot.
	Turntable Rotation	History Plot	Click the button to rotate the plot.
	Reset axes	Real Time Plot	On the real time plot, click the button to change the zoom level to the default value.
	Reset camera to default	History Plot	On the history plot, click the button to change the zoom level and orientation of the plot to the default values.
	Autoscale	Real Time Plot	Use this button to automatically adjust the horizontal and vertical axes scales so the signal fills both axes.

Save a Copy of the Plot

A copy of the plot currently being viewed can be saved to a file or copied to an application, such as a word processor.

To save the plot to a file:

1. Click the **Share** button.
2. Click **Save graph as image**.
The *Save File* dialog box appears.
3. Navigate to the folder in which the plot will be saved.
4. Enter a name in the *File name* box.
5. Click the **Save** button.


To copy the plot to another application:

1. Click the **Share** button.
2. Click **Copy graph to clipboard**.
3. Open the application, such as a word processor.
4. Paste the image.


Enable HDR Mode

The High Dynamic Range (HDR) mode enables special signal processing to remove distortions from the spectrum, providing a cleaner signal. This optimizes the Automatic Gain Control (AGC) to prevent interfering signals from drowning out the GNSS signals. HDR mode works well against wide band and out-of-band interferers. HDR mode can be combined with bandpass and notch filters, but does draw more power.

To disable HDR mode:

1. Click the **Settings** menu.
2. Set the **Enable HDR Mode** option to off ().

To enable HDR mode

1. Click the **Settings** menu.
2. Set the **Enable HDR Mode** option to on ().

Filters

If an interference signal is present, the Interference Toolkit can reduce or eliminate the impact on GNSS tracking using the programmable bandpass or notch filters.

If there are any filters active, a button for the filter is shown above signal plot.


Notch Filter

The Interference Toolkit notch filter reduces the signal power in a narrow frequency band. This type of filter is useful for reducing the signal power of a single, narrow band interference signal. Note that the narrowest possible filter should be used to maintain the maximum amount of overall signal power.

To add a notch filter:


1. Click the **Settings** menu.
2. Click the **Add Filter** link.

The *Add Filter* dialog box appears.

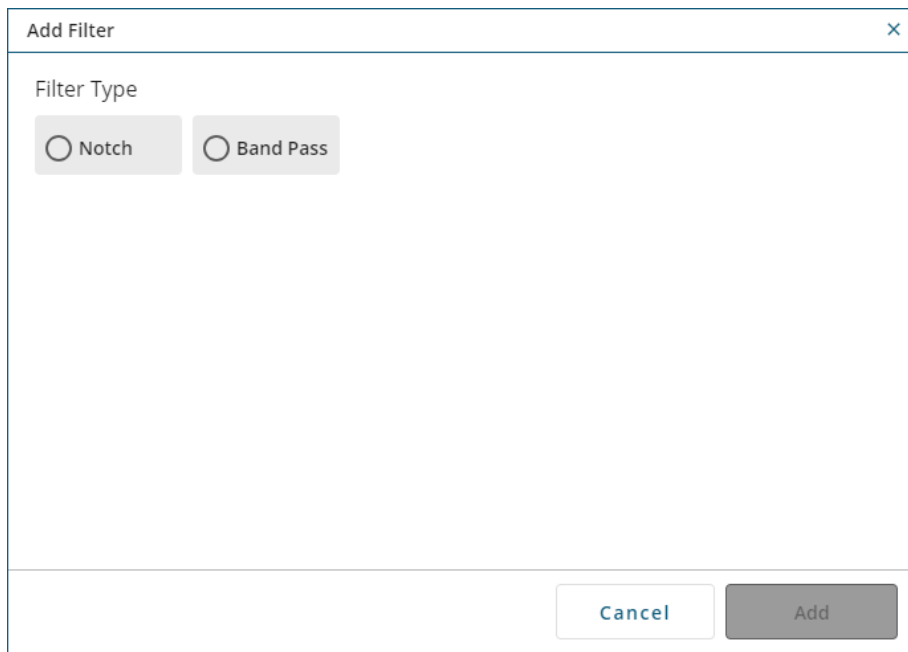


The 'Add Filter' dialog box has a title bar with 'Add Filter' and a close button. Inside, the 'Filter Type' section contains two radio button options: 'Notch' and 'Band Pass'. At the bottom right, there are 'Cancel' and 'Add' buttons.

3. Click the **Notch** button.

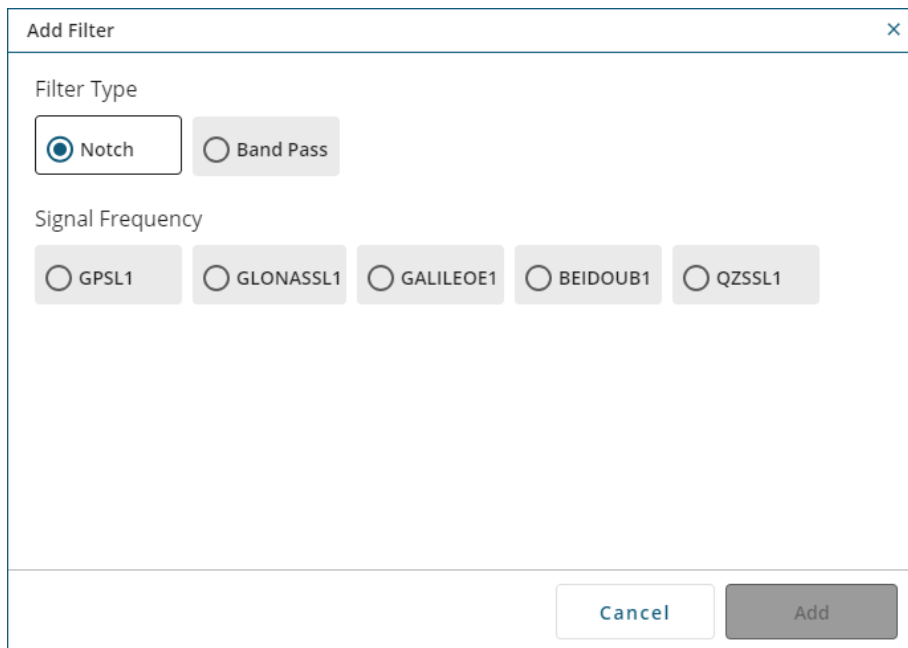

The 'Add Filter' dialog box is shown with the 'Notch' radio button selected under 'Filter Type'. Below this, the 'Signal Frequency' section contains five radio button options: 'GPSL1', 'GLONASSL1', 'GALILEOE1', 'BEIDOU1', and 'QZSSL1'. The 'Cancel' and 'Add' buttons are at the bottom right.

4. Click the button for the GNSS signal to which the filter will be applied.

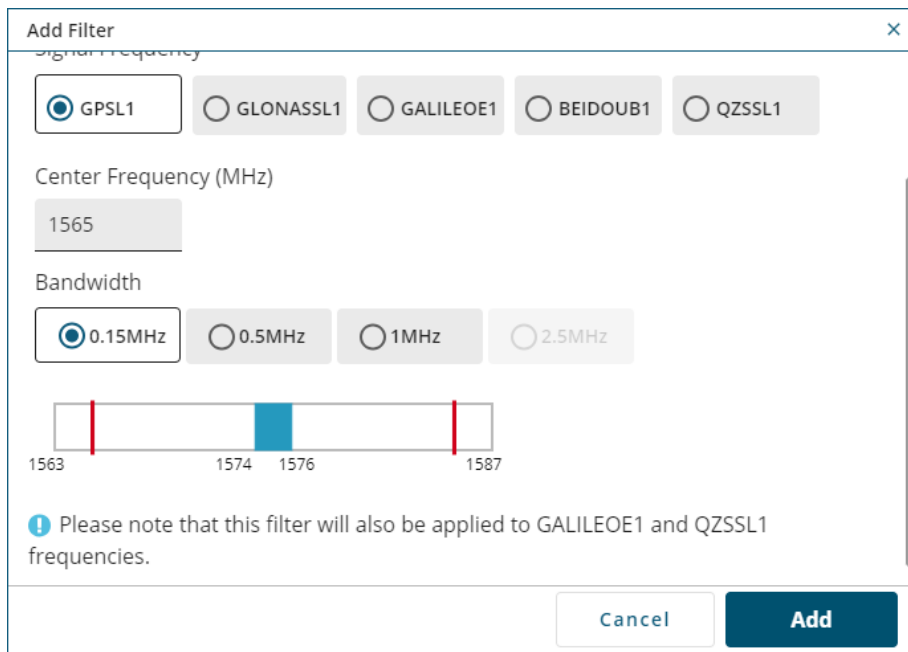

Add Filter

Signal Frequency

☒ GPSL1 ☐ GLONASSL1 ☐ GALILEOE1 ☐ BEIDOU1 ☐ QZSSL1

Center Frequency (MHz)

1565

Bandwidth

☒ 0.15MHz ☐ 0.5MHz ☐ 1MHz ☐ 2.5MHz


1563 1574 1576 1587

! Please note that this filter will also be applied to GALILEOE1 and QZSSL1 frequencies.

Cancel Add

5. Enter the center frequency for the filter in the **Center Frequency** box.
 - The frequency selected must be in the range shown on the frequency bar. For the example shown above, the value must be between 1563 and 1587 MHz.
 - The selected frequency can not be within the central frequencies, represented by the blue bar. In this example, the frequency cannot be between 1574 and 1576 MHz.
6. Click one of the **Bandwidth** buttons to select the bandwidth for the notch filter.
 - Select the narrowest bandwidth that will remove the interference signal.
 - Two notch filters are added which are equal distance from the center frequency. The configured filter is represented by red bars on the frequency bar.
7. Click the **Add** button.

A box for the new filter is added to the **Settings** menu, a new button for the filter is added to the *Interference Toolkit* window and the filtered signal is shown on the ITK Spectrum plot.

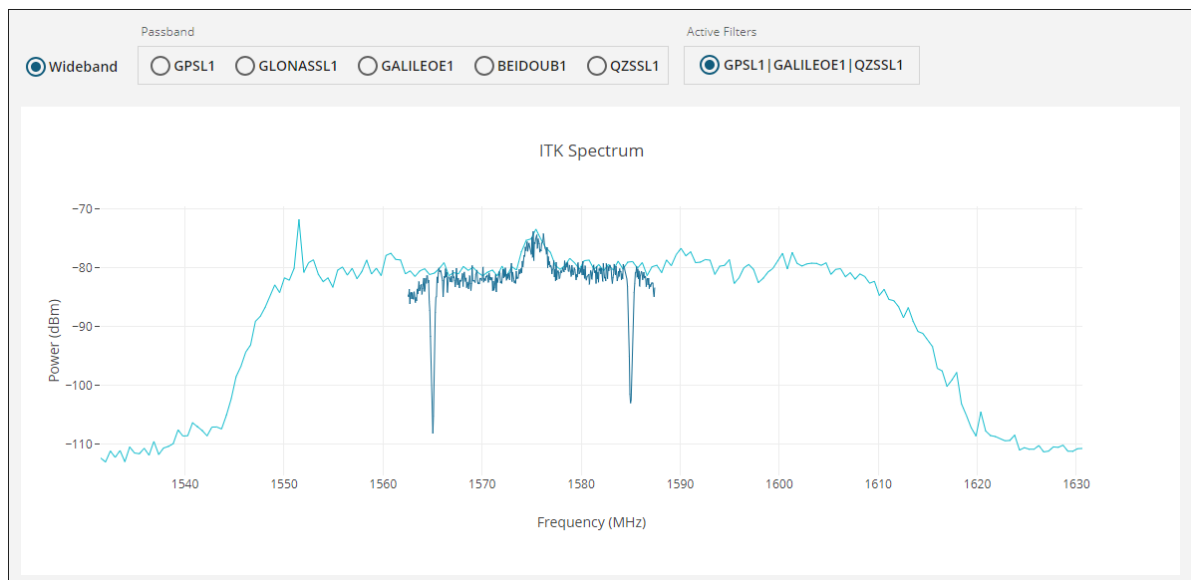

When the filter button is selected, the filtered signal is updated.

When the filter button is not selected, the unfiltered signal is updated.

Bandpass Filter


The Interference Toolkit bandpass filter reduces the signal power of all incoming signals at the upper and lower end of the GNSS signal band starting at the configured cut-off frequency. This type of filter is good for reducing single or multiple interference signals at the edges of the signal band.

When a bandpass filter is applied to the signal, the upper and lower ends of the signal band are filtered out to reduce the signal power of the interference signal.

To add a bandpass filter:

1. Click the **Settings** menu.
2. Click the **Add Filter** link.

The *Add Filter* dialog box appears.

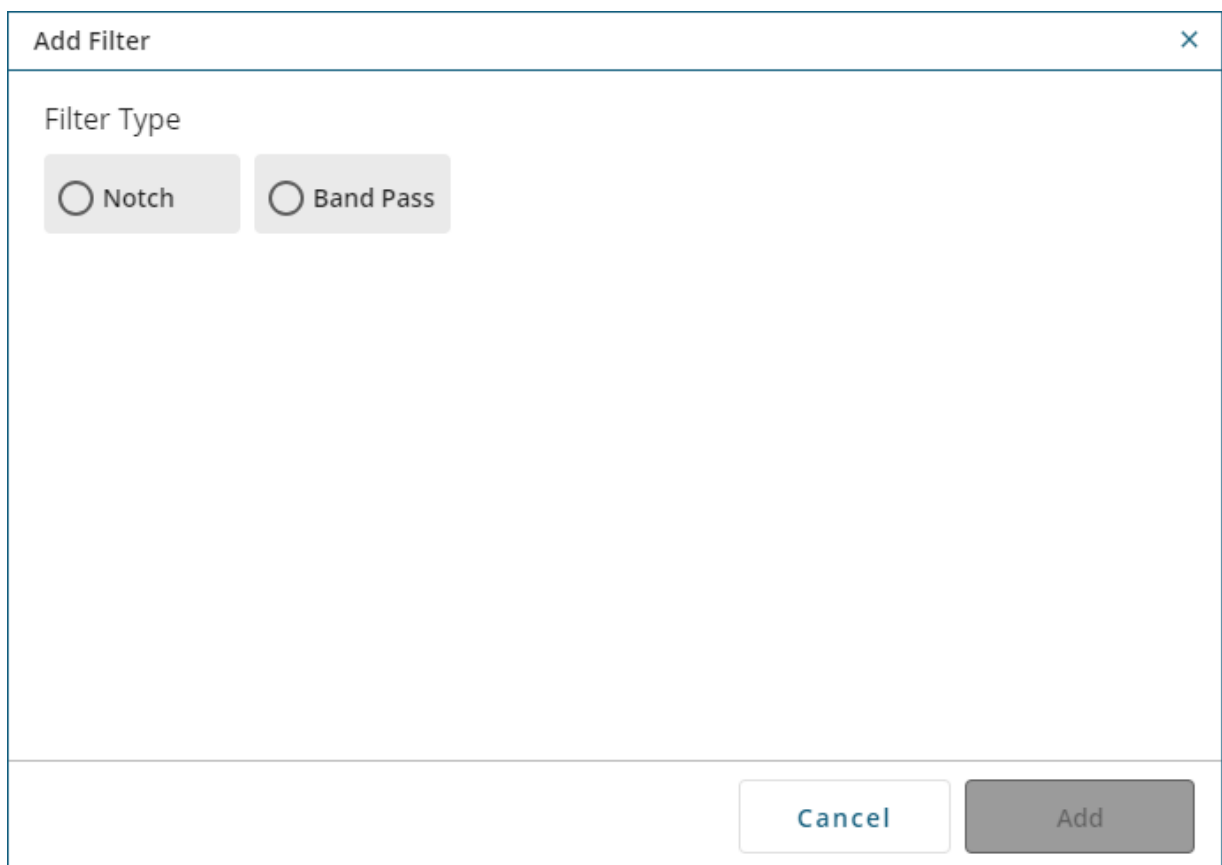

The screenshot shows a dialog box titled "Add Filter" with a close button (X) in the top right corner. Below the title bar, the text "Filter Type" is displayed. Underneath, there are two radio button options: "Notch" and "Band Pass". The "Band Pass" option is selected, indicated by a filled circle. At the bottom right of the dialog, there are two buttons: "Cancel" and "Add".

3. Click the **Band Pass** button.

Add Filter [X]

Filter Type

☐ Notch ☒ Band Pass

Frequency

☐ GPSL1 ☐ GLONASSL1 ☐ GALILEOE1 ☐ BEIDOU1 ☐ QZSSL1

[Cancel] [Add]

- Click the button for the GNSS signal to which the filter will be applied.

Add Filter [X]

☐ Notch ☒ Band Pass

Frequency

☐ GPSL1 ☐ GLONASSL1 ☒ GALILEOE1 ☐ BEIDOU1 ☐ QZSSL1

Cut-off Frequency (MHz)

1567


1563.75 1572.5 1577.5 1586.25

ⓘ Please note that this filter will also be applied to GPSL1 and QZSSL1 frequencies.

[Cancel] [Add]

- Enter the cut-off frequency for the filter in the **Cut-off Frequency** text box.
 - The frequency selected must be in the range shown on the frequency bar. For the example shown above, the value must be between 1563.75 and 1586.25 MHz.
 - The selected frequency can not be within the central frequencies, represented by the blue bar. In this example, the frequency cannot be between 1572.5 and 1577.5 MHz.
 - Two band pass filters are added which are equal distance from the center frequency. The configured filter is represent by red bars at the upper and lower end of the frequency bar.
- Click the **Add** button.

A box for the new filter is added to the **Settings** menu, a new button for the filter is added to the **Interference Toolkit** window and the filtered signal is displayed on the ITK Spectrum plot.

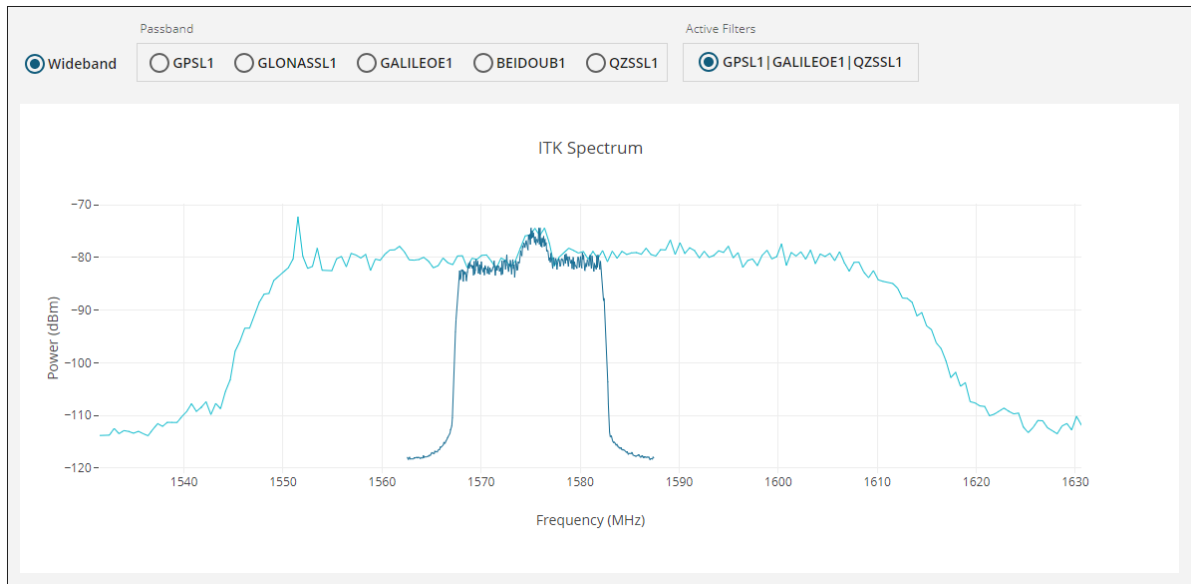


When the filter button is selected, the filtered signal is updated.

When the filter button is not selected, the unfiltered signal is updated.


Activate/Deactivate a Filter

When a filter is activated, the filter is applied to the incoming signal. To activate a filter:

1. Click the **Settings** menu.
2. Set the **Active** button to on ().

The filtered signal and a button for the filter appear on the **Interference Toolkit** window.


When a filter is deactivated, the filter is not applied to the incoming signal. To deactivate a filter:

1. Click the **Settings** menu.
2. Set the **Active** button to off ().


The filtered signal and the button for the filter are removed from the **Interference Toolkit** window.

Edit a Filter

To edit a filter:

1. Click the **Settings** menu.
2. Click the menu button () on the filter to edit and click **Edit Filter**.

The **Edit Filter** dialog box appears.

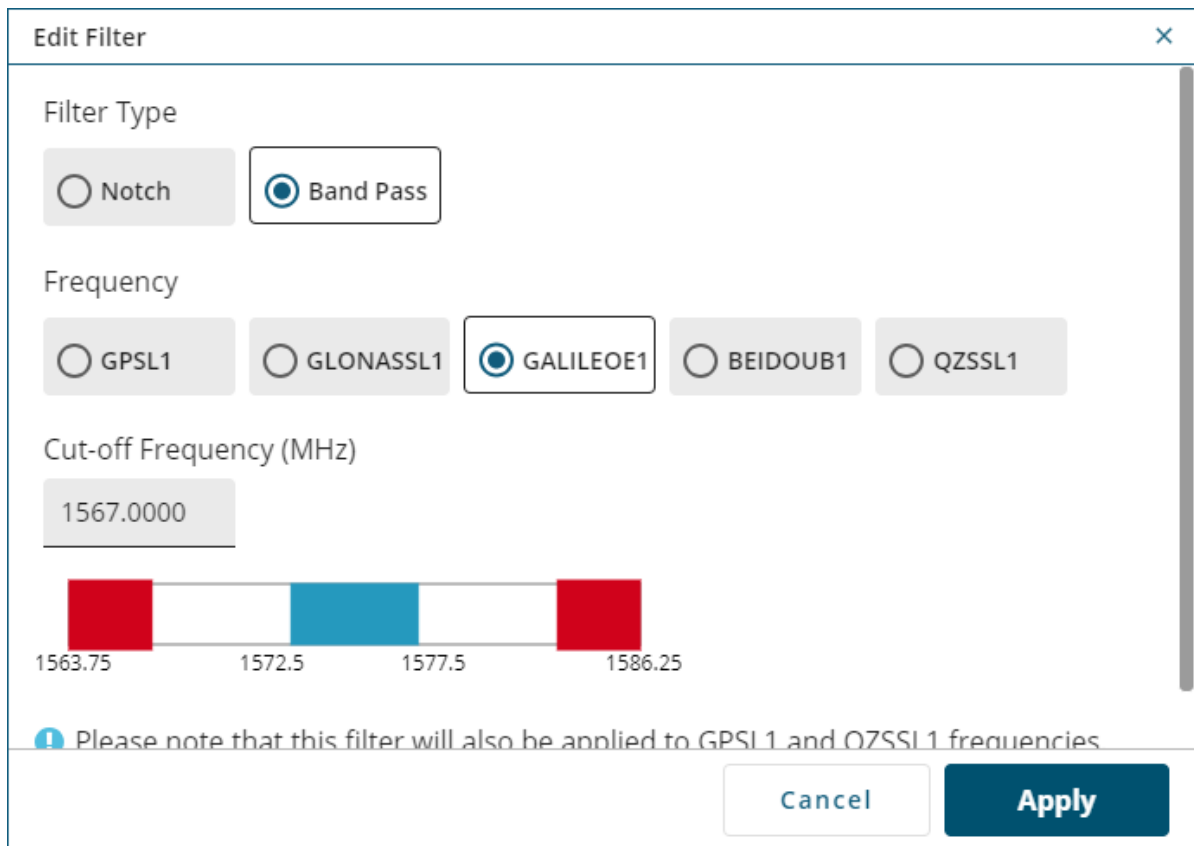

Edit Filter [X]

Filter Type

☐ Notch ☒ Band Pass

Frequency

☐ GPSL1 ☐ GLONASSL1 ☒ GALILEOE1 ☐ BEIDOU B1 ☐ QZSSL1

Cut-off Frequency (MHz)

1567.0000

1563.75 1572.5 1577.5 1586.25

Please note that this filter will also be applied to GPSL1 and QZSSL1 frequencies.

Cancel **Apply**

3. Change the filter parameters to the desired settings.
4. Click the **Apply** button.

Delete a Filter

To delete a filter:

1. Click the **Settings** menu.
2. Click the menu button (⋮) on the filter to delete and click **Delete Filter**.

Advanced Settings

The Advanced Settings configure the parameters used to generate the plot. To access the Advanced Settings, click the **Settings** link.



Decreasing the Update Rate or increasing the Spectrum Resolution will impact receiver idle time. The idle time should be monitored to prevent adverse effects on receiver performance.



The Advanced Settings are not available when connected to the receiver using a serial connection.

Update Rate (Secs)

This parameter sets the spectrum update rate in seconds. It determines how quickly the plot is updated.

The update interval is limited by the FFT size chosen. For 32k, the minimum update period is 0.1 seconds and for 64k, the minimum update period is 0.2 seconds.

Spectrum Resolution (K)

This parameter sets the frequency resolution of the spectrum.

Time Averaging (Secs)

This parameter sets the time averaging window in seconds. 0 means no time averaging.

Detection Sensitivity (Bins)


This parameter sets the integration window size of FFT samples. 1 means no integration.

To reset the Advanced Settings to the factory default values, click the **Restore Settings Defaults** button.

2.2.10 Details

Use the *Details* windows to view information about the receiver.

Device

Device	
Serial Number	NMNE17200009B
Wi-Fi Receiver	RS9113
Wi-Fi Software Version	1.6.8
Region	US
 Help	

The *Device* tile provides information about the receiver.

Serial Number

This is the serial number for the receiver enclosure. For example, on a PwrPak7 this is the serial number for the PwrPak7 enclosure, not the serial number of the GNSS card in the enclosure.

Wi-Fi Receiver

This is the model number for the Wi-Fi radio in the receiver.


Wi-Fi Software Version

This is the version of the software running on the Wi-Fi radio in the receiver.

Region

This is the regulatory region the Wi-Fi radio has been configured to comply with.

GNSS

GNSS Card	
Serial Number	BMHR17090005E
Model Number	FFNRNNCBES1
Hardware Version	OEM7700-1.00
Software Version	OM7CR0704RN0000
Boot Version	OM7BR0001RBG000
 Help	

The *GNSS Card* tile provides information about the GNSS receiver card (e.g. OEM7700). For enclosure style receivers, such as PwrPak7, the information is about the receiver card in the PwrPak7.

Serial Number

This is the serial number for the receiver card.

Model Number

This is the model number for the receiver card. The model indicates the receiver's current model functionality.

Hardware Version

This parameter provides information about the receiver card hardware. The hardware version is in the format of **P-R**, where:

P = hardware platform

R = hardware revision

Example: OEM7720-1.00

Software Version

This is the version of software (firmware) that is running on the receiver card.

Boot Version

This is the version of boot code running on the receiver card.

Authorizations

Authorizations

GNSS

GPS	L1, L2, L5
GLONASS	L1, L2
BDS	B1, B2
GALILEO	E1, E5
QZSS	L1, L2, L5

Corrections

RTK	Fixed
	Float
	Tx
	DGPS Tx
	DGPS Rx
PPP	High Accuracy Enabled
SBAS	

Other

Output Rate	100 Hz
-------------	--------

Apply New Auth Code

e.g Your code will look like: 7WBMBK,887CB
6,K5J3FH,5DF5P2,42PW8G,D1SB0GTT0

Help
Apply

The *Authorizations* tile provides information about the functionality enabled on the receiver. The information shown varies depending on the receiver model number and any Auth Codes installed on the receiver.

An Auth Code (authorization code) enables additional functionality on the receiver, such as access to additional constellations or positioning modes. The *Authorizations* tile can be used to add new Auth Codes, and thus new functionality, to the receiver.



If an L model is loaded on the receiver, the PPP value is Basic Enabled.

If a P model is loaded on the receiver, the PPP value is Basic High Accuracy Enabled.

If an R model is loaded on the receiver, the PPP value is Basic High Accuracy Enabled.

If an N model is loaded on the receiver, the PPP label is not be shown.

To add an Auth Code:

1. Obtain the new Auth Code from NovAtel Sales or your local NovAtel dealer.
2. Enter the new Auth Code in the *Apply New Auth Code* box.
3. Click the **Apply** button to save the changes to the receiver.

The receiver will restart when a new Auth Code is applied.



If a demonstration Auth Code has been applied to the receiver, the expiry date for the Auth Code is shown in the *Auth Expiry Date* field.

The *Auth Expiry Date* field is shown only if a demonstration Auth Code has been applied.

Subscription Information

The *Subscription Information* tile provides information about the correction services enabled on the receiver.

When the receiver has an Ethernet connection and internet access, the *Subscription Information* tile shows the subscription information retrieved from the NovAtel eStore. When the receiver does not have internet access, the *Subscription Information* tile shows the subscription information stored in the receiver.

When there is no active subscription, this tile displays *no contract found*.



The *Subscription Information* tile appears only if the receiver has PPP services enabled.

Service Level

This is the type of correction service enabled on the receiver.

Start Date

This is the start date for the correction services subscription.

This field also shows the number of days remaining in the correction services subscription and the end date of the subscription. The progress bar shows percentage of time remaining in the current subscription.

Coverage

This indicates whether the correction services subscription enables access to 3 L-Band beams (Regional) or all L-Band beams (Global).

Subscription Resend

Click this button to request the NovAtel website resend the correction services subscription information to the receiver.

If the **Subscription Resend** button is clicked and the resend is successful, the *Subscription successfully resent* message is displayed.

If the **Subscription Resend** button is clicked and there is no Internet connection, the *No internet connection. Please connect and try again.* message is displayed.

If the **Subscription Resend** button is clicked more than 3 times, the *PSN Resend Limit Reached* message is displayed.

When the receiver does not have internet access, the **Subscription Resend** button is disabled.

2.2.11 Storage

Use the *Storage* window to manage the log files saved on the receiver's internal storage.




Logs

Active

NMNE17200009B_1.LOG	1.38 MB	Edit
---------------------	---------	----------------------

Available Log Files

Select one or more logs to download, copy to USB or delete.

 Download
  Copy to USB
  Remove

<input type="checkbox"/> Files (18)	Size
<input type="checkbox"/> NMNE17200009B_2022-12-05_21-48-41	1.42 KB
<input type="checkbox"/> NMNE17200009B_2022-12-05_21-48-21	5.08 KB
<input type="checkbox"/> NMNE17200009B_2022-05-05_23-03-19	642.05 KB
<input type="checkbox"/> NMNE17200009B_2022-05-05_22-11-29	1.78 MB
<input type="checkbox"/> NMNE17200009B_2022-05-05_22-06-23	1.74 MB
<input type="checkbox"/> NMNE17200009B_2022-05-05_17-57-25	1.16 MB

Edit Active Log File

To edit the active log file, click the **Edit** link beside the active log file. The *Logging* configuration window displays. Make any changes required to the messages being stored in the active log file.

If you click the **Stop All** button on the *Logging* configuration window, the log file will be closed and added to the *Available Log Files* list.

Download

Log files stored on the receiver's internal memory can be downloaded to the computer running NovAtel Application Suite. To download files:

1. Select the check box of one or more of the log files in the **Available Log Files** box.
To select all of the log files stored on internal memory, click the **Files** option.
2. Click **Download**.
3. Navigate to the folder on the computer where the file will be saved.
4. Click the **Save** button.

Copy to USB

Log files stored on the receiver's internal memory can be copied to a storage device connected to the receiver's USB Host port (Transfer port on PwrPak7). To copy files to a USB device:

1. Connect a storage device, such as a USB memory key, to the receiver's USB Host port.
2. Select the check box of one or more of the log files in the *Available Log File* box.
To select all of the log files stored on internal memory, click the **Files** option.
3. Click **Copy to USB**.

Remove

To delete log files from the receiver's internal memory:

1. Select the check box of one or more of the log files in the *Available Log Files* list.
To select all of the log files stored on internal memory, click the **Files** option.
2. Click **Remove**.
A confirmation dialog displays.
3. Click **Yes** to delete the log files.

2.2.12 Update

Use the *Update* window to view the software currently loaded on the receiver and to load new software onto the receiver.

Update Firmware or Software

Current Firmware Version OM7CR0810RN0000

Current Setup and Monitor (Web) Version 1.12.0

Select File

Update files have a ".hex" or ".shex" file extension.

Browse

? Help

Apply

The *Current Firmware Version* field shows the version of the software loaded on the receiver. The *Current Manage Web Version* field shows the version of the Manage Web software loaded on the receiver.



The new software must be copied onto the computer used to run NovAtel Application Suite before starting this procedure.

To load new software on the receiver:

1. Click the **Browse** button.
The *Open* dialog box appears.
2. Navigate to the folder in which the new software to load is stored and select the software file.
The selected file appears in the *File name* field.
3. Click the **Open** button.

The *Update* window appears with the name of the selected file in the *Select File* field.

4. Click the **Apply** button


After the new software is loaded, the receiver will restart.



The Firmware Update feature is not available on the MarinePak7.


2.2.13 Events

From the *Events* menu, you can view the current events on the receiver and a history of the events that have occurred since the last receiver restart.

To view the events that currently apply to the receiver, click the **Events** icon .

To close the Events menu, click the **X** button.

To temporarily turn off event notification banners:

1. Click the **Turn Off Notifications** icon .
2. Select how long the event notification banners will be turned off.

Notifications can be turned off for a duration of 30 minutes, 1 hour, 2 hours or for the entire session.

A message appears on the Event menu indicating how long the event notification banners will be turned off.

To turn the event notification banners on before the selected time, click the **Turn Off Notifications** icon and click **Clear Notification Settings**.

Current

The *Current* tab shows all of the warning, errors and status messages that currently apply to the receiver.

Historic

The *Historic* tab shows all of warning, errors and status messages that have occurred on the receiver since the last receiver restart.



To view a history of the events that have occurred on the receiver, click the **Events** menu and then click **Historic**.

Limit Display

The Limit Display option sets the maximum number of events to show on the Events menu.


To change the number of events that can display, click the **Limit Display** drop menu and select the maximum.

Filter


Use the Filter button () to view only the events of a specific severity. To filter the events, click the Filter button () and select the event severity to view.


Save

Use the Save button () to save the event history of a file. To save the event history:

1. Click the Save button ()
The Save File dialog box appears.
2. Navigate to the folder in which the event history file will be saved.
3. Click the **Save** button.

Clear

Use the Clear button () to remove events from the event history. To clear events:

1. Click the Clear button ()
2. Select the type of event to clear.
3. Click the **Clear** button.

2.3 Status Window

The *Status* window provides access to all the status information available for the receiver. The status information is organized onto several tiles.

- *Positioning Status* on the next page
- *Satellite View* on page 56
- *Ports Status* on page 57
- *Logging Status* on page 58
- *Device Status* on page 59
- *Interference Status* on page 59
- *ALIGN Status* on page 60
- *SPAN Status* on page 61
- *Radio Status* on page 65
- *Satellite Tracking* on page 65

The tiles available vary depending on the type of receiver and the software features enabled.

Positioning

Tracking

Positioning

Good

Operating Mode: Receive
Position: PPP SBAS Single
Latitude: 51.1504369°
Longitude: -114.0306793°
Height (MSL): 1097.37 m
2d-SD: 0.05 m
SPAN: Aiding
Azimuth: 1.1097°
Datum: WGS84

Help

Device

Good

CPU Usage: 40%
Storage Usage: 0%
Temperature: 60 °C
Antenna Voltage: 5.2 V
Antenna Current: 0.1 mA

Help

Interference

Good

Not detected

Help


Satellite View

Good

Tracked

In Use: 10, Not Used: 0, Missing: 0

GPS: 10, 0, 0
GLO: 9, 0, 0
GAL: 8, 0, 0
BDS: 11, 0, 1

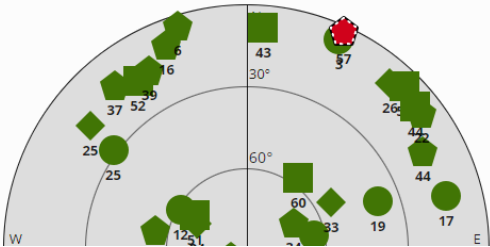

SPAN

Good

Status: INS Solution Good
Position type: INS PPP
Alignment: User Command
Converged: Converged
Azimuth: 1.1097° 0.20°
Pitch: 0.3114° 0.04°
Roll: -0.3800° 0.03°
North Veloc...: 0.0017 m/s 0.00 m/s
East Velocity: 0.0003 m/s 0.00 m/s
Up Velocity: 0.0014 m/s 0.00 m/s
Latitude: 51.1504236° 0.04 m
Longitude: -114.0306869° 0.03 m

There are two pages on the *Status* window. To change the page being viewed, click either **Positioning** or **Tracking**. The *Satellite Tracking* tile is on the *Tracking* page. All other tiles are on the *Positioning* page. Each tile has a color coded bar with text to indicate the overall status of the information on that tile.

NovAtel Application Suite User Manual v2.5

52

Color	Text	Description
Green	Good	The receiver is functioning and there are no warnings or errors.
Amber	Warning	The receiver is functioning, but there are one or more issues that may require attention.
Red	Error	An issue is preventing the receiver from functioning. The Error state will remain until the situation is resolved.
Gray	Off	The feature has been disabled or has not yet been configured.

If the receiver has a warning or error, click the status indicator on the status box to open a tooltip with more information about the warning or error.

2.3.1 Change the Status Tile Layout

The tiles on the *Status* window can be moved to group the receiver information into an arrangement that best suites your needs.

To move a tile:

1. Move the mouse cursor over the title bar of the tile to move.

The title bar darkens and the mouse cursor changes to a move cursor (⛶).

2. Click the mouse button and drag the tile to the desired location.

A dotted blue box shows where the tile will be moved to.

3. Release the mouse button.

The tile is moved to the new location and other tiles on the *Status* window are rearranged.

The customized tile layout is maintained for each connection.

To change the tile arrangement back to default, click the **Reset layout to default** link.

2.3.2 Positioning Status

The *Positioning* tile displays information about the position calculated by the receiver.

Positioning

Good

Operating Mode

Receive

Position

PPP SBAS Single

SPAN

Aiding

Latitude

51.1504369°

Longitude

-114.0306792°

Height (MSL)

1097.34 m

Azimuth

8.7872°

2d-SD

0.04 m

Datum

WGS84

?

Help

Operating Mode

The receiver operating mode.

- **Transmit**

The receiver is configured as a base station, but is not yet transmitting corrections. A base station receiver generates differential corrections and sends that data to rover receivers. The receiver can operate as an RTK base station.

- **Transmit (FIXEDPOS)**

The receiver is configured as a base station, has determined its fixed position and is transmitting corrections.

- **Receive**

The receiver is configured to receive GNSS correction data from an RTK base station, an RTK network, a correction service such as TerraStar, or from SBAS to calculate a more accurate position.

- **Standalone**

The receiver is configured to calculate a position using observed GNSS data only. This is the default operating mode.

Position

The positioning type used to calculate the position.

This field shows all of the position types configured on the receiver. The position type being used is highlighted with a box.

- **None**

A position solution has not been calculated.

- **Single**

A GNSS code based position is being calculated without the use of any correction sources. This is the default positioning type.

- **SBAS**

A GNSS code based position is being calculated using corrections provided by an SBAS system, such as WAAS.

- **FIXEDPOS**

The fixed position of the receiver has been configured in the receiver, but the receiver is not configured as an RTK base station.

- **PPP**

A carrier based position is being calculated using corrections provided by TerraStar or Oceanix.

- **RTK**

A carrier based position is being calculated using the Real Time Kinematic (RTK) method. If the Operating Mode is Transmit, this receiver is acting as the base station and is providing corrections to a rover receiver. If the Operating Mode is Receive, this receiver is acting as the rover receiver and is receiving corrections from a base station.

- **PSR DIFF**

A GNSS code based position is being calculated using corrections provided by differential GNSS base station.

SPAN

SPAN is a GNSS+INS navigation technology that provides a reliable position, velocity and attitude solution.

- **Off**

SPAN IMU type is not configured.

- **Inactive**

SPAN IMU type is configured and the *Inertial Solution Status* is any status other than INS_SOLUTION_GOOD.

- **Ready**

The *Inertial Solution Status* is INS_SOLUTION_GOOD and the INS position type is any status other than INS positions.

- **Aiding**

The *Inertial Solution Status* is INS_SOLUTION_GOOD and the INS position type is any status of INS positions.

Latitude

Latitude of the receiver position in degrees.

Longitude

Longitude of the receiver position in degrees.

Height

The height of the receiver in metres.

The height is shown as height above mean sea level (MSL) or as ellipsoidal height. When the height set to show height above sea level, "(MSL)" is included in the field name.

To change the format used for height, refer to *General Settings* on page 26.

Height Accuracy

The vertical standard deviation in metres (RMS). (MarinePak7 only)

Azimuth

Left-handed rotation around the z-axis in degrees clockwise from North. (0° to 359.99°)

This is the inertial azimuth calculated from the IMU gyros and the SPAN filters.

Azimuth is available only if SPAN is active.

Heading

Heading in degrees clockwise from North. (0° to 359.99°)

Heading is determined from the positions of two GNSS antennas. This can be antennas connected to two ALIGN capable receivers configured to communicate with each other or a dual antenna receiver such as the PwrPak7D or OEM7720.

Heading is available only on ALIGN capable receivers.

- If ALIGN is not configured, this field displays --.
- If ALIGN is configured and Heading data is not available, this field displays --.
- If ALIGN is configured and Heading data is available, this field displays the Heading in degrees.

2d-SD

The horizontal standard deviation of the position.

Datum

The datum in which the Latitude, Longitude and Height are reported. The default is WGS84.

Reference Station


The reference station from which the receiver is getting correction data. (MarinePak7 only)

Correction Age

The age of the last correction data received from the reference station. (MarinePak7 only)

2.3.3 Satellite View

The *Satellite View* tile displays each satellite the receiver is tracking in graphical format. Concentric circles from 0° to 90° represent elevations from the horizon to directly overhead.

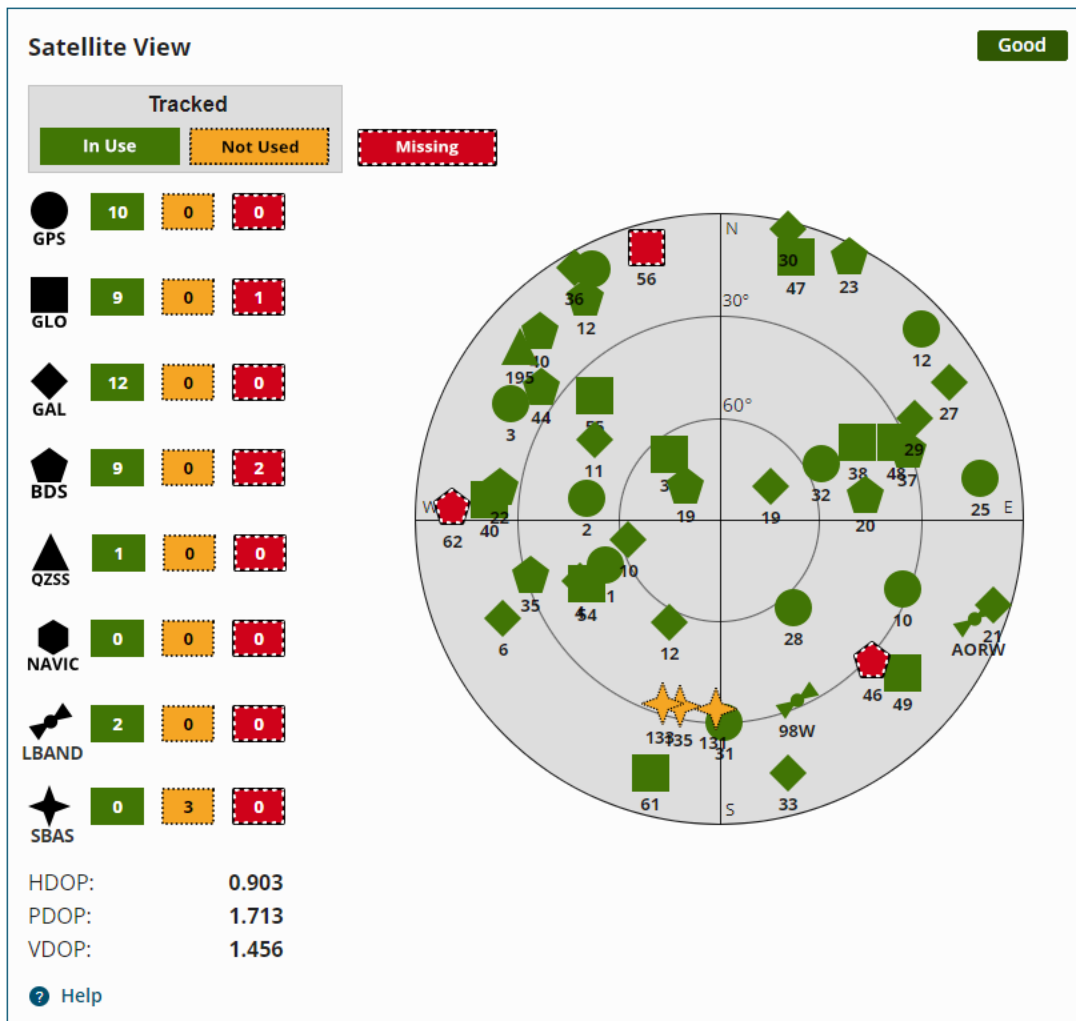

The satellites being tracked are represented with icons according to their satellite system. The PRN of the satellite tracked appears below the Satellite icon.

- If the Satellite icon is green, the satellite is used in the positioning solution.
- If the Satellite icon is amber, the satellite is being tracked but is not used in the positioning solution.
- If the Satellite icon is red, the satellite is missing.

A legend on the *Satellite View* tile identifies the icon used for the satellites for each GNSS constellation and LBand. Beside each icon is the number of satellites used in the solution, the number tracked but not used and the number missing.

The Dilution Of Precision (DOP) values for the position solution are shown.

- HDOP – Horizontal Dilution Of Precision
- PDOP – Position Dilution Of Precision
- VDOP – Vertical Dilution of Precision

To view information about a specific satellite, click on the Satellite icon. A pop up box displays PRN, azimuth, elevation and tracking information about the satellite.

2.3.4 Ports Status

Ports Warning ⓘ		
Port	Input	Output
COM1	No Data	No Data
COM2	No Data	No Data
COM3	No Data	No Data
ICOM1	No Data	No Data
ICOM2	No Data	No Data
ICOM3	No Data	No Data
ICOM4	No Data	No Data
ICOM5	No Data	No Data
ICOM6	No Data	No Data
ICOM7	No Data	No Data
NCOM1	No Data	Off
NCOM2	No Data	Off
NCOM3	No Data	Off
USB1	No Data	Active
USB2	No Data	No Data
USB3	No Data	No Data

[? Help](#)

The *Ports* status tile displays the communication ports available on the receiver and indicates if the port is configured to receive messages (Input), send messages (Output) or both.

- Green – Configured and active
- Amber – Configured and not active
- Red – Error. An issue is impeding port function.
- Gray – Not configured

If the status indicator on the *Ports* title is gray, no ports are configured.



The MarinePak7 does not support COM4, COM5 or USB ports.

2.3.5 Logging Status

The *Logging* status window displays the current status of logging to the internal memory of the receiver or the computer running NovAtel Application Suite.

Logging - Off

Off

[Switch on via configuration](#)

Help

Logging

Good

Active

Log File Size

302 KB

Log File Name

NMNE17200009B_...

Messages

RAWEPHEM
BESTPOS
RANGE
PORTSTATS
ALMANAC
RXSTATUS
GLORAWEPHEM
HWMONITOR
BESTSATS
PASSTHROUGH
PROFILEINFO
ITDETECTSTATUS

Help

Status

The status of logging.

Active if logging information is being stored on the receiver's internal memory or a computer.

Logging-Off if logs are not being stored.

Log File Size

The size of the file in which logs are being stored.

Log File Name

The name of the file in which logs are being stored.


Messages

The logs that are being stored in the log file.

2.3.6 Device Status

The *Device* tile provides hardware status information about the receiver. The color of the icon beside each parameter indicates the status of the parameter: Green = OK, Yellow = Warning, Red = Error.

Device		Good
CPU Usage	37%	Good
Storage Usage	0%	Good
Temperature	57 °C	Good
Antenna Voltage	5.2 V	Good
Antenna Current	0.1 mA	Good

 [Help](#)

CPU Usage

The percentage of computing power currently being used by the receiver.

Storage Usage

The amount of internal storage used by the receiver.

Temperature

The approximate temperature of the PCB surface near critical components of the receiver.

Antenna Voltage


The voltage provided by the receiver to the GNSS antenna.

Antenna Current

The amount of current being drawn by the active antenna (mA).

2.3.7 Interference Status


The *Interference* status tile displays whether the receiver has detected interference in the received GNSS signal.

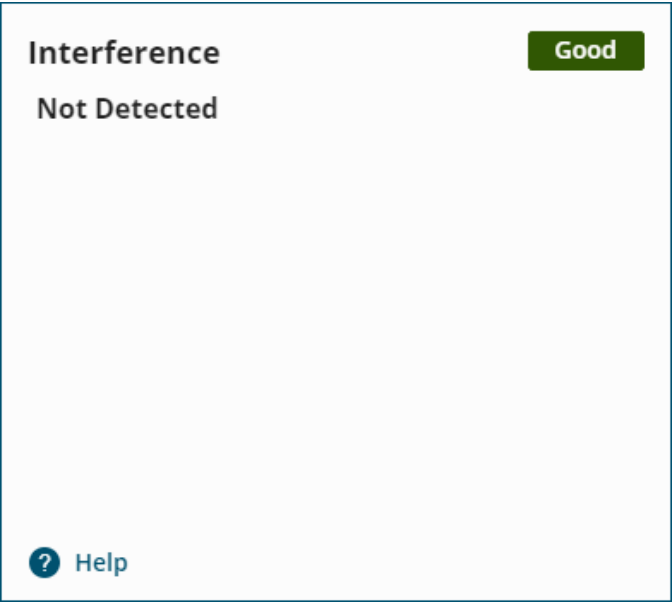

If interference is detected, the *Interference* tile displays the signals in which interference is being detected. To view more information about the interference, or to configure a filter to mitigate the interference, use the *Interference Toolkit* on page 33.

2.3.8 ALIGN Status

The *ALIGN* tile provides position information about the ALIGN solution.
Two ALIGN capable receivers, or a dual antenna receiver, are required to use ALIGN.

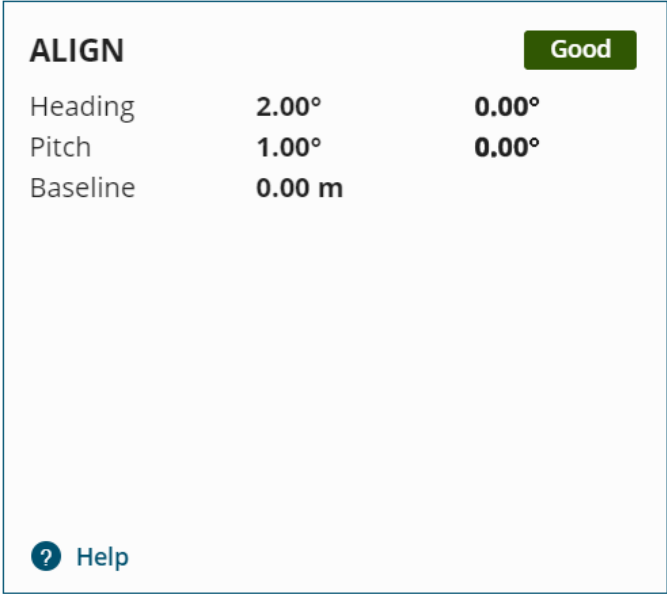

Heading
The heading in degrees from true north. (0° to 359.99°)
To the right of the heading value is the standard deviation of the heading in degrees.

Pitch
The pitch in degrees. (±90)

To the right of the pitch value is the standard deviation of the pitch in degrees.

Baseline

The baseline length is the distance between the two GNSS antennas in metres.

For ALIGN Heading models with position access, this field is -1.

For ALIGN Heading models without position access, this field is only the decimal portion of the baseline in metres.

For ALIGN Relative Positioning models receiving corrections from a master with a fixed position, this field is -1.

For ALIGN Relative Positioning models receiving corrections from a master in moving baseline mode, this field is the complete baseline length in metres.

2.3.9 SPAN Status

The *SPAN* tile shows position information from the SPAN solution.

SPAN		Good
Status	INS Solution Good	
Position type	INS PPP	
Alignment	User Command	
Converged	Converged	
Azimuth	6.4335°	0.06°
Pitch	0.9983°	0.27°
Roll	-1.4202°	0.28°
North Veloc...	0.0274 m/s	0.01 m/s
East Velocity	0.0126 m/s	0.01 m/s
Up Velocity	-0.0142 m/s	0.01 m/s
Latitude	51.1503600°	0.08 m
Longitude	-114.0308324°	0.07 m
Height (MSL)	1086.90 m	0.09 m
? Help		

Status

The current status of the SPAN solution.

Position Type

The position type used to calculate the position.

Alignment

Alignment Indication status. The status can be Incomplete, Static, Kinematic, Dual Antenna, User Command or NVM Seed.

Converged

Status of the INS solution convergence. This field can be Converged or Not Converged.

Azimuth

Left-handed rotation around the z-axis in degrees clockwise from North. This is the inertial azimuth calculated from the IMU gyros and the SPAN filters.

To the right of the azimuth value is the standard deviation of the azimuth in degrees.

Pitch

Right-handed rotation from local level around the x-axis in degrees.

To the right of the pitch value is the standard deviation of the pitch in degrees.

Roll

Right-handed rotation from local level around the y-axis in degrees.

To the right of the roll value is the standard deviation of the roll in degrees.

North Velocity

The velocity in a northerly direction. A negative (-) value implies a southerly direction. The velocity is in m/s.

To the right of the north velocity value is the standard deviation of the velocity in m/s.

East Velocity

The velocity in an easterly direction. A negative (-) value implies a westerly direction. The velocity is in m/s.

To the right of the east velocity value is the standard deviation of the velocity in m/s.

Up Velocity

The velocity in an upward direction. A negative (-) value implies a downward direction. The velocity is in m/s.

To the right of the up velocity value is the standard deviation of the velocity in m/s.

Latitude

The latitude of the receiver position in degrees.

To the right of the latitude value is the standard deviation of the latitude in metres.

Longitude

The longitude of the receiver position in degrees.


To the right of the longitude value is the standard deviation of the longitude in metres.

Height (MSL)

The height above mean sea level of the receiver position in metres.

To the right of the height value is the standard deviation of the height in metres.

2.3.10 PPP Corrections Status

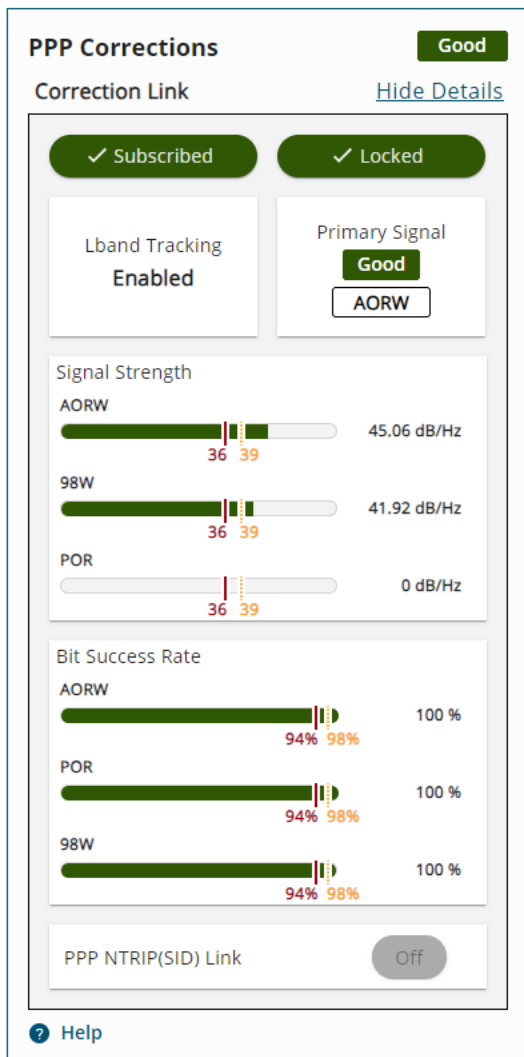

The *PPP Corrections* tile shows information about the PPP corrections.

Subscribed

Displays *Subscribed* on a green background when there is a valid TerraStar or Oceanix subscription.

Displays *Unsubscribed* on a red background if there is no valid TerraStar or Oceanix subscription.

Locked

Displays *Locked* on a green background when the receiver has successfully locked onto at least one L-Band beam.

Displays *Unlocked* on an amber background while the decoder is in searching state.

Displays *Unlocked* on a gray background when PPP is off.

Lband Tracking

Displays **Enabled** when L-Band tracking is enabled on the receiver.

Displays **Off** when L-Band tracking is disabled on the receiver.



The *Lband Tracking* field is not shown when PPP is off.

Primary Signal

Displays the access status and name of the primary L-Band beam.

The status button displays **Enabled** (green) if the receiver has a valid subscription to access the primary L-Band beam. The button displays **Error** (red) if the receiver does not have access.



The *Primary Signal* field is not shown when PPP is off.

Signal Strength

Displays a status bar that shows the carrier to noise ratio (C/No) of the primary L-Band signal. The bar also displays the thresholds at which there are C/No warnings and errors. Beside the status bar, the real-time C/No level (in dB-Hz) of the transmission beam is displayed.

When the **Show Details** link is clicked, the *Signal Strength* field expands to show the C/No status for all of the L-Band signals the receiver is tracking. Click the **Hide Details** link to return to showing only the C/No status for the primary L-Band signal.

Bit Success Rate

Displays a status bar that shows the percentage of bits successfully received from the primary L-Band signal. The bar also displays the thresholds at which there are bit rate warnings and errors. Beside the status bar, the real-time bit rate success of the transmission beam is displayed.

When the **Show Details** link is clicked, the *Bit Success Rate* field expands to show success rate for all of the L-Band signals the receiver is tracking. Click the **Hide Details** link to return to showing only the success rate for the Primary L-Band signal.

PPP NTRIP (SID) Link

Displays the status of the NTRIP link configured for the receiver.

Displays **Good** (green) when the decoder is locked using the PPP NTRIP link.

Displays **Error** (red) when PPP NTRIP is enabled, but the decoder is not locked.

Displays **Off** (gray) when PPP NTRIP has not been enabled.



The *PPP Corrections* tile is not available for OEM718D receivers.



If the receiver is loaded with a model number with an N as the 4th character, the *PPP Corrections* tile is not shown.

2.3.11 Radio Status

● Radio

No further information available

Need Help?

The *Radio* tile provides the operating status of radio module.

Color	Text	Description
Green	Good	The radio is functioning and there are no warnings or errors.
Amber	Warning	The radio is functioning, but there are one or more issues that may require attention.
Red	Error	An issue is preventing the radio from functioning. The Error state will remain until the situation is resolved.
Gray	Off	The radio has been disabled or has not yet been configured.

This window is available only on systems with an external transmission radio connected.

2.3.12 Satellite Tracking

The *Satellite Tracking* window displays the carrier to noise ratio and lock time for the GNSS signals the receiver is tracking. This tile is on the *Tracking* page of the *Status* window.



To view the tracking information from the primary GNSS antenna, click the **1** button.

To view the tracking information from the secondary GNSS antenna, click the **2** button

On single antenna receivers, only the **1** button is available.

Constellation

The graphs on the *Satellite Tracking* tile display tracking information from the satellites of a single constellation (e.g. GPS). The button of the constellation currently being viewed is dark. To change the constellation being viewed, click the button for the constellation.

Graphs

There are two graphs available on the *Satellite Tracking* tile: Carrier-to-Noise and Lock Time.

Carrier-to-Noise

To view the *Carrier-to-Noise* graph, click the **Carrier-to-noise** button.

The *Carrier-to-Noise* graph displays the current carrier-to-noise ratio values for all of the satellites (PRNs) being tracked for the currently selected constellation and antenna. A carrier-to-noise bar is shown for each of the frequencies available on the PRN. If there are no frequencies being tracked for the PRN, the text "no signal" is shown for the PRN. If there are more PRNs tracked than can be shown on the tile, a scroll bar appears at the bottom of the graph.

The status of the signal is indicated by the color of the carrier-to-noise bar.

Green	Good
Yellow	Warning
Red	Poor

A legend for the carrier-to-noise status is shown on the right side of the graph. To hide or show the legend, click the arrow button on the legend.

Lock Time

To view the *Lock Time* graph, click the **Lock Time** button.

The *Lock Time* graph displays the number of seconds of continuous tracking for all of the satellites (PRNs) being tracked for the currently selected constellation and antenna. A lock time bar is shown for each of the frequencies available on the PRN. If there are no frequencies being tracked for the PRN, the text "no signal" is shown for the PRN. If there are more PRNs tracked than can be shown on the tile, a scroll bar appears at the bottom of the graph.

A legend for the lock time status is shown on the right side of the graph. To hide or show the legend, click the arrow button on the legend.

View Satellite Details


To view details about a specific satellite, hover the mouse pointer over one of the signals bars. A pop up window appears showing information for the frequencies tracked on that satellite. The signal that the mouse pointer is over is highlighted.

Satellite Number (PRN)	9	Channel	0
Frequency	Carrier-to-noise	Lock Time	
GPS L1CA	41 dB-Hz	00:49:55	
GPS L2PCL	41 dB-Hz	00:49:27	
GPS L2CM	42 dB-Hz	00:49:29	
GPS L5Q	45 dB-Hz	00:49:31	

The details pop up window is available on the *Carrier-to-Noise* graph and the *Lock Time* graph.

Show

Elevation Mask

When the **Elevation Mask** option is enabled () , satellites below the configured elevation mask for the constellation have a gray bar at the top of the graph. The gray bar has the text "Below X Mask" where X is the elevation mask for the constellation.

When the **Elevation Mask** option is disabled () , the gray bar is not shown.

Highest/Lowest Values

When the **Highest/Lowest Values** option is enabled () , marks are added to each signal bar to indicate the highest and lowest Carrier to Noise values recorded in the last 30 seconds.

When the **Highest/Lowest Values** option is disabled () , the highest and lowest marks are hidden.



The **Highest/Lowest Values** option is available only on the *Carrier to Noise* graph.

Sort By

The information on the Satellite Tracking graphs can be sort by PRN or satellite elevation.

PRN

Select this option to sort the graph by satellite PRN number in ascending order.

Elevation 0°>90°

Select this option to sort the graph by elevation angle starting with 0° (horizon).



Elevation 90°>0°

Select this option to sort the graph by elevation angle starting with 90° (directly overhead).

View all satellite information

To view the satellite tracking information for all of the satellites in a constellation:

1. Click the button for the constellation to view (e.g. GPS).
For dual antenna receivers, also click the button for the antenna.
2. Click the **View all satellite information** link.
The *All satellite information* dialog box appears.

All satellite information						✕	
Antenna	1	Constellation	GPS	Elevation Mask	5.0°		
PRN	Elevation	Channel	Frequency	Carrier-to-noise	Lock Time		
29	72°	2	GPS L5Q	no signal	-		
			GPS L1CA	53 dB-Hz	00:54:19		
			GPS L2PCL	48 dB-Hz	00:53:52		
			GPS L2CM	51 dB-Hz	00:53:56		
5	62°	4	GPS L5Q	no signal	-		
			GPS L2PCL	48 dB-Hz	00:53:54		
			GPS L1CA	53 dB-Hz	00:54:20		
			GPS L2CM	52 dB-Hz	00:53:56		
20	53.1°	6	GPS L1CA	50 dB-Hz	00:54:19		
			GPS L2PCL	45 dB-Hz	00:53:54		
			GPS L2CM	no signal	-		
			GPS L5Q	no signal	-		
25	41.0°	13	GPS L1CA	50 dB-Hz	00:54:19		
 Copy to Clipboard							

This dialog box shows the PRN, Elevation, Channel, Frequencies available, Carrier-to-Noise ratio and Lock Time for each satellite tracked from the selected constellation. It also shows the Elevation Mask set for the constellation.

- 3. To copy the satellite information to another application, click the **Copy to clipboard** link. The information can then be pasted into any application that can accept CSV formatted information.
- 4. When finished viewing the information, click the **Done** button to close the dialog box.

Status Indicator

The status indicator shows the overall satellite tracking status of the receiver.

Green	The receiver is tracking five or more satellites and the <i>GNSS Tracked Status</i> field in the <i>RXSTATUS</i> log is set to 0.
Yellow	The receiver is tracking five or more satellites and the <i>GNSS Tracked Status</i> field in the <i>RXSTATUS</i> log is set to 1.
Red	The receiver is tracking 4 or less satellites or the <i>GNSS Tracked Status</i> field in the <i>RXSTATUS</i> log is set to 2.

2.4 Configuration Window

The *Configuration* window provides access to all of the configuration parameters available for the receiver.

Positioning Ports Logging SPAN

Positioning

Current Operating Mode Receive (Rover)

Select new operating mode:

☐ Transmit (Base) ☒ Receive (Rover) ☐ Standalone (Single Point)

? Help Next

The configuration parameters are organized onto several configuration tabs.

- *Positioning Configuration* below
- *Ports Configuration* on page 85
- *Logging Configuration* on page 93
- *ALIGN Configuration* on page 101
- *SPAN Configuration* on page 104
- *Radio Configuration* on page 111
- *GNSS Configuration* on page 112

To view all of the parameters on a configuration tab, click the Configuration tab.

The configuration tabs available on the *Configuration* window varies depending on the type of receiver and the software features enabled.

2.4.1 Positioning Configuration

Use the *Positioning* tab to change the positioning method the receiver uses to calculate a position. This tab is also used to set whether the receiver sends or receives corrections.

Positioning

Current Operating Mode Receive (Rover)

Select new operating mode:

☐ Transmit (Base) ☒ Receive (Rover) ☐ Standalone (Single Point)

? Help Next

The **Current Operating Mode** displays the current receiver configuration.

To change the positioning mode, click one of the three buttons to select a new operating mode and then click the **Next** button.

- *Transmit (Base)* below

Click this button to configure the receiver as a base station receiver. A base station receiver generates differential corrections and sends that data to rover receivers.

- *Receive (Rover)* on page 78

Click this button to configure the receiver as a rover receiver. A rover receiver uses correction data received from either a base station receiver, an SBAS system or TerraStar to calculate a more accurate position.

- *Standalone (Single Point)* on page 85

Click this button to configure the receiver to calculate a position using observed measurements only. No correction data will be used to improve position accuracy. This is the default mode for a receiver.

Transmit (Base)

After clicking **Transmit (Base)** and the **Next** button, the *Positioning* window changes to show the Transmit options.

To configure the receiver to transmit corrections, set the parameters for Survey Type, Output Format and Output Destination.

Survey Type

The GNSS position calculated by a receiver is located at the phase center of the GNSS antenna. A receiver acting as a base station must know the location of the GNSS antenna phase center accurately to generate accurate differential correction data for the rover receiver. If the GNSS antenna is installed in a location with a well known position, use the Manual option to enter the position of the GNSS antenna phase center into the receiver. If the GNSS antenna is not installed in a well known position, use the Auto option to have the receiver calculate the antenna position.

Auto

Positioning

Current Operating Mode
Receive (Rover)

New Operating Mode
Transmit (Base)

Survey Type

What type of survey are you setting up?

☒ Auto
☐ Manual

Time (Minutes)
1440

Accuracy (Meters)
0.1

Next

Output Format

Output Destination

☐ Base Antenna Phase Centre Offset

The Auto option uses position averaging to determine the position of the GNSS antenna phase center. The position averaging starts when the Positioning configuration is applied. The position averaging continues until a specified accuracy level is met or until the specified survey time expires. When position averaging is complete, the averaged position is saved as the fix position for the base station. This fix position is then used when calculating differential corrections for the rover.



The calculated base station position is in WGS84.

On subsequent power ups or resets, the receiver uses position averaging to determine if the base station has moved. The average position calculated is compared to the saved fix position. If the average position is within tolerance, the receiver assumes it has not moved and uses the previously saved fix position. If the average position is outside of the tolerance, the receiver assumes it has moved and will continue calculating a position average until the accuracy level is met or until the specified survey time expires.

Click the **Auto** button to show the auto survey options.

Time

Enter the maximum amount of time allowed for the receiver to perform an automatic survey. The allowable time can be a value from 1 to 6000 minutes, the default is 1400 minutes.

Accuracy

Enter the desired horizontal standard deviation in metres. Accuracy can be a value from 0 to 100 metres. The default is 0.1 metres.

After setting the Survey Type parameters, click the **Next** button to show the Output Format parameters.

Manual

Positioning

Current Operating Mode

Receive (Rover)

New Operating Mode

Transmit (Base)

Survey Type

What type of survey are you setting up?

☐ Auto
 ☒ Manual

Enter Position (WGS84)

Latitude

51.150437105258376

Longitude

-114.03067863642316

Height (MSL) (Meters)

1097.3868

Next

Output Format

Output Destination

Help

Cancel

Apply

Use the Manual option to set the fix position of the base station receiver. The position entered using the Manual option should be as accurate as possible. The receiver uses this position to generate the differential correction data, so the accuracy of this position directly impacts the accuracy of the differential corrections sent to the rover receiver.

Click **Manual** to show the fix position options.

Latitude

Enter the latitude of the GNSS antenna phase center. The latitude can be -90 to +90 degrees where a '-' sign denotes south and a '+' sign denotes north.

Longitude

Enter the longitude of the GNSS antenna phase center. The longitude can be -360 to +360 degrees where a '-' sign denotes west and a '+' sign denotes east.

Height

Enter the height of the GNSS antenna phase center above Mean Sea Level (MSL). The height can be -1000 to +20000000 metres.

For the MarinePak7, enter the ellipsoidal height of the GNSS antenna phase center.

After setting the Survey Type parameters, click the **Next** button to show the Output Format parameters.

Output Format

Positioning

Current Operating Mode

Receive (Rover)

New Operating Mode

Transmit (Base)

Survey Type

Output Format

☐ CMR
 ☐ NOVATELX
 ☐ RTCA

☐ RTCM
 ☐ RTCMV3

Next

Output Destination

Help

Cancel

Apply

Use the Output Format parameters to set the message format the receiver uses for the differential corrections messages sent to the rover receiver.

CMR

The receiver sends differential correction messages in CMR format.

NOVATELX

The receiver sends differential correction messages in NOVATELX format.

RTCA

The receiver sends differential correction messages in RTCA format.

RTCM

The receiver sends differential correction messages in RTCM format.

RTCMV3

The receiver sends differential correction messages in RTCM Version 3.0 format.

Click the button for the message format to use and then click **Next**.

Output Destination

Positioning

Current Operating Mode

Receive (Rover)

New Operating Mode

Transmit (Base)

Survey Type

▼

Output Format

▼

Output Destination

^

Serial

☐ COM1
 ☐ COM2
 ☐ COM3

ICOM

☐ ICOM1
 ☐ ICOM2
 ☐ ICOM3
 ☐ ICOM4
 ☐ ICOM5
 ☐ ICOM6
 ☐ ICOM7

NTRIP

☐ NCOM1
 ☐ NCOM2
 ☐ NCOM3

FILE

☐ FILE

Done

The Output Destination is the communication port, or ports, through which the receiver sends differential corrections to the rover receiver.

Serial

Click the COM buttons to select the serial ports used to send differential corrections. The number of COM ports available varies depending on the type of NovAtel receiver.

When a COM button is selected, the button changes to show a settings icon. Set the serial communication parameters to match the parameters used by the device to which the receiver is communicating.

To change COM port communication parameters:

1. Click the settings icon (⚙️).

The *COM Configuration* window appears.

2. Click the **Baud Rate** drop list and then click the baud rate (bps) used by this serial port. The default baud rate is 9600.
3. In the **Parity** field, click **N**, **E** or **O** to select the parity used by this serial port.
N = No parity, E = Even parity, O = Odd parity
The default parity is N (No Parity).
4. In the **Data Bits** field, click **7** or **8** to select the number of data bits used for each data message transmitted. The default is 8 bits.
5. In the **Stop Bits** field, click **1** or **2** to select the number of stops bits used for each data message transmitted.
6. After setting the communication parameters, click the **Done** button to save the new settings.

ICOM

Click the ICOM buttons to select the network ports used to send differential corrections over the receiver's Ethernet connection.

When an ICOM button is selected, the button changes to show a settings icon. Click the settings icon to change the communication parameters used for the ICOM port.

To configure an ICOM port

1. Click the settings icon (⚙️) and set the communication parameters used for the ICOM port.

The *ICOM Configuration* window appears.

The image shows a window titled "ICOM1 Configuration" with a close button (X) in the top right corner. Inside the window, there are three main sections: "Domain" with a text input field, "Port" with a text input field containing "3001", and "Protocol" with three radio button options: "Disabled", "TCP" (which is selected), and "UDP". At the bottom right of the window, there are two buttons: "Cancel" and "Done".

2. In the **Domain** box, enter the hostname or IP address of the device
3. In the **Port** box, enter the TCP/UDP port number used by this ICOM port.
4. Click one of the following buttons to select the protocol used by this ICOM port.
 - **Disabled** – Disable this ICOM port.
 - **TCP** – Use raw TCP on this port.
 - **UDP** – Use raw UDP on this port.
5. After setting the communication parameters, click the **Done** button to save the new settings.

NTRIP

Click the NCOM buttons to select the network ports used to send differential corrections. Network ports are used when the receiver is acting as an NTRIP server. The receiver must have an Ethernet connection to use NCOM ports.

When an NCOM button is selected, the button changes to show a settings icon. Click the settings icon to change the communication parameters used for the NCOM port.

To configure an NCOM port:

1. Click the settings icon (⚙️).

The *NCOM Configuration* window appears.

NCOM1 Configuration

End Point

Domain: Port:

Search for mountpoint

No results found for this endpoint

Mountpoint:

Username:

Cancel **Done**

2. In the **Domain** box, enter the hostname or IP address of the Endpoint.
3. In the **Port** box and enter the TCP/UDP port number of the Endpoint.
4. Click the **Search for mountpoint** button.
5. Click the **Mountpoint** drop menu and click the mountpoint to use.
6. Click the **Username** box and enter the login user name. The username can be up to character 30 characters long.
7. Click the **Password** box and enter the login password. The Password can be up to 30 characters long.
8. To enable GGA output to the NTRIP caster, select the **GGA OUTPUT** check box.
9. After setting the communication parameters, click the **Done** button to save the new settings.

File

Click the **FILE** button to save the differential corrections to a file.

Base Antenna Phase Center Offset

Configuring the phase center offset of the antenna used by the RTK base receiver improves RTK accuracy.

Antenna Type

There are several predefined antenna types taken from the IGS ANTEX file. To choose one of the predefined antennas, click the **Antenna Type** drop down menu and select the type of antenna connected to the base receiver that is providing RTK corrections.

Frequency

Select the **GPS L1** check box to enter phase center offset values for the GPS L1 signal.

Select the **GPS L2** check box to enter phase center offset values for the GPS L2 signal.

ARP to APC

For each frequency selected in **Frequency** field, enter the distance in millimetres from the Antenna Reference Point (ARP) to the Antenna Phase Center (APC).

East

Enter the East phase center offset in millimetres.


North


Enter the North phase center offset in millimetres.

Up

Enter the Up phase center offset in millimetres.

Phase Center Variation

To use the phase center variation defined for the antenna, set the switch to enabled ().

To ignore the phase center variation defined for the antenna, set the switch to the disabled (.

When Output Destination ports have been selected, click **Done**.

When all of the Transmit parameters have been set, click **Apply**.

Receive (Rover)

After clicking **Receive (Rover)** and **Next**, the Positioning window changes to show the receive operating modes options.

Positioning

Current Operating Mode
Receive (Rover)

New Operating Mode
Receive (Rover)

☐ RTK

Input Format

☐ AUTO
☐ CMR
☐ NOVATELX

☐ RTCA
☐ RTCM
☐ RTCMV3

Input Ports

Serial

☐ COM1
☐ COM2
☐ COM3

ICOM

☐ ICOM1
☐ ICOM2
☐ ICOM3

☐ ICOM4
☐ ICOM5
☐ ICOM6

☐ ICOM7

NTRIP

☐ NCOM1
☐ NCOM2
☐ NCOM3

☒ PPP
Region Selection
Auto

The receiver can be configured to receive three types of corrections: RTK, PPP and SBAS.

RTK

To use RTK corrections, the receiver must have a communications link to an RTK base station. Use the *Input Format* and *Input Ports* pages to configure the receiver as an RTK rover.

To enable RTK, select the **RTK** checkbox and configure the Input Format and Input Ports settings.

To disable RTK, clear the **RTK** checkbox.

Input Format

Use the Input Format parameters to set the message format for the differential corrections message received from the RTK base station.

Auto

Set the receiver to automatically detect the format of the incoming RTK corrections.

CMR

Set the receiver to accept RTK correction messages in CMR format.

NovAtel Application Suite User Manual v2.5

79

NOVATELX

Set the receiver to accept RTK correction messages in NOVATELX format.

RTCA

Set the receiver to accept RTK correction messages in RTCA format.

RTCM

Set the receiver to accept RTK correction messages in RTCM format.

RTCMV3

Set the receiver to accept RTK correction messages in RTCM Version 3.0 format.

Click the button for the message format to use.

Input Ports

The Input Ports set the communication port, or ports, through which RTK correction messages are received.

Serial Ports

Click the COM buttons to select the serial ports used to receive RTK corrections. The number of COM ports available varies depending on the type of NovAtel receiver.

When a COM button is selected, the button changes to show a settings icon. Set the serial communication parameters to match the parameters used by the device to which the receiver is communicating.

To change COM port communication parameters:

1. Click the settings icon (⚙️).

The *COM Configuration* window appears.

The screenshot shows a window titled "COM1 Configuration" with a close button (X) in the top right corner. The window contains the following settings:

- Baud Rate:** A dropdown menu currently showing "115200".
- Parity:** Three radio buttons labeled "N", "E", and "O". The "N" button is selected.
- Data Bits:** Two radio buttons labeled "7" and "8". The "8" button is selected.
- Stop Bits:** Two radio buttons labeled "1" and "2". The "1" button is selected.

At the bottom right of the window are two buttons: "Cancel" and "Done".

2. Click the **Baud Rate** drop list and then click the baud rate (bps) used by this serial port. The default baud rate is 9600.
3. In the **Parity** field, click **N**, **E** or **O** to select the parity used by this serial port.
N = No parity, E = Even parity, O = Odd parity

The default parity is N (No Parity).

4. In the **Data Bits** field, click **7** or **8** to select the number of data bits used for each data message transmitted. The default is 8 bits.
5. In the **Stop Bits** field, click **1** or **2** to select the number of stops bits used for each data message transmitted.
6. After setting the communication parameters, click the **Done** button to save the new settings.

ICOM

Click the ICOM buttons to select the network ports used to receive differential corrections over the receiver's Ethernet connection.

When an ICOM button is selected, the button changes to show a settings icon. Click the settings icon to change the communication parameters used for the ICOM port.

To configure an ICOM port

1. Click the settings icon (⚙️) and set the communication parameters used for the ICOM port.

The *ICOM Configuration* window appears.

ICOM1 Configuration

Domain

Port

Protocol

☐ Disabled ☒ TCP ☐ UDP

Cancel Done

2. In the **Domain** box, enter the hostname or IP address of the device
3. In the **Port** box, enter the TCP/UDP port number used by this ICOM port.
4. Click one of the following buttons to select the protocol used by this ICOM port.
 - **Disabled** – Disable this ICOM port.
 - **TCP** – Use raw TCP on this port.
 - **UDP** – Use raw UDP on this port.
5. After setting the communication parameters, click the **Done** button to save the new settings.

NTRIP

Click the NCOM buttons to select the network ports used to receive differential corrections. Network ports are used when the receiver is acting as an NTRIP client. The receiver must have an Ethernet connection to use NCOM ports.

When an NCOM button is selected, the button changes to show a settings icon. Click the settings icon to change the communication parameters used for the NCOM port.

To configure an NCOM port:

1. Click the settings icon (⚙️).

The *NCOM Configuration* window appears.

2. In the **Domain** box, enter the hostname or IP address of the Endpoint.
3. In the **Port** box and enter the TCP/UDP port number of the Endpoint.
4. Click the **Search for mountpoint** button.
5. Click the **Mountpoint** drop menu and click the mountpoint to use.
6. Click the **Username** box and enter the login user name. The username can be up to character 30 characters long.
7. Click the **Password** box and enter the login password. The Password can be up to 30 characters long.
8. To enable GGA output to the NTRIP caster, select the **GGA OUTPUT** check box.
9. After setting the communication parameters, click the **Done** button to save the new settings.

Internal



The Internal ports are available only on MarinePak7 receivers.

Click the **UHF** option if the MarinePak7 receives differential corrections over the receiver's UHF radio interface.

Click the **GSM** option if the MarinePak7 receives differential corrections over the receiver's GSM cellular radio interface.

PPP

To use PPP positioning, a subscription to a correction service (TerraStar or Oceanix) is required. To obtain a subscription, contact your local NovAtel sales representative. The NovAtel product serial number (PSN) is needed to obtain a subscription.

To enable PPP positioning:

1. Select the **PPP** checkbox.
2. Select the button for the L-Band beam to use.

If **Auto** is selected, the receiver searches for multiple L-Band beams on the L-Band channels. If the receiver position is known, the selection criteria is a ranking of granted access L-Band beams by descending elevation angle. If the receiver position is not known, the selection criteria is a ranking of granted access L-Band beams in the order they appear in the stored beam table.


To disable PPP positioning:

1. Clear the **PPP** checkbox.

Manually Configure the L-Band Beam

The L-Band beam used to receive PPP corrections can be manually configured.

To enable PPP and manually configure the L-Band beam:

1. Select the **PPP** checkbox.
2. Select the **Manual** option.
3. Click the settings icon (.

The *Manual Configuration* dialog box appears.

4. In the **Frequency** box, enter the transmit frequency of the L-Band beam.

The frequency must be between 1525 and 1560 MHz.

5. Select the **Baud Rate** used for the correction messages.
6. Click the **Apply** button.

PPP Corrections over NTRIP

TerraStar or Oceanix PPP corrections can be received over an NTRIP connection.

To enable PPP corrections over NTRIP:

1. Select the **PPP** checkbox.
2. Select the NCOM ports over which PPP corrections are received.
3. Click the **Apply** button.

SBAS

To enable SBAS positioning on the receiver, select the **SBAS** checkbox and select the appropriate region on the *Region Selection* window.

To disable SBAS positioning, clear the **SBAS** checkbox.

Auto

The receiver automatically determines the satellite system to use based on the receiver's position and prevents the receiver from using satellites from outside of the service area.

EGNOS

The receiver uses only EGNOS satellites.

GAGAN

The receiver uses only GAGAN satellites.

MSAS

The receiver uses only MSAS satellites.

QZSS

The receiver uses only QZSS SAIF signals.

WAAS

The receiver uses only WAAS satellites.

Base Antenna Phase Center Offset

Configuring the phase center offset of the antenna used by the RTK base receiver improves RTK accuracy.

Antenna Type

There are several predefined antenna types taken from the IGS ANTEX file. To choose one of the predefined antennas, click the **Antenna Type** drop down menu and select the type of antenna connected to the base receiver that is providing RTK corrections.

Frequency

Select the **GPS L1** check box to enter phase center offset values for the GPS L1 signal.

Select the **GPS L2** check box to enter phase center offset values for the GPS L2 signal.

ARP to APC

For each frequency selected in **Frequency** field, enter the distance in millimetres from the Antenna Reference Point (ARP) to the Antenna Phase Center (APC).

East

Enter the East phase center offset in millimetres.

North

Enter the North phase center offset in millimetres.

Up

Enter the Up phase center offset in millimetres.

Rover Antenna Phase Center Offset

Configuring the phase center offset of the antenna used by the RTK rover receiver improves RTK accuracy.

Antenna Type

There are several predefined antenna types taken from the IGS ANTEX file. To choose one of the predefined antennas, click the **Antenna Type** drop down menu and select the type of antenna connected to the receiver that is receiving RTK corrections.

To use custom phase center offsets, select **Custom** from the **Antenna Type** drop down menu. The **Frequency** and **ARP to APC** fields are added to the tile.

Frequency

Select the **GPS L1** check box to enter phase center offset values for the GPS L1 signal.

Select the **GPS L2** check box to enter phase center offset values for the GPS L2 signal.

ARP to APC

For each frequency selected in **Frequency** field, enter the distance in millimetres from the Antenna Reference Point (ARP) to the Antenna Phase Center (APC).

East

Enter the East phase center offset in millimetres.


North


Enter the North phase center offset in millimetres.

Up

Enter the Up phase center offset in millimetres.

Phase Center Variation

To use the phase center variation defined for the antenna, set the switch to enabled ().

To ignore the phase center variation defined for the antenna, set the switch to the disabled ().

Click the **Apply** button to save the configuration on the receiver.

Standalone (Single Point)

Click **Standalone (Single Point)** and then **Next** to configure the receiver to use standalone mode to calculate the position.

Click the **Apply** button to save the configuration on the receiver.

2.4.2 Ports Configuration

Click the *Ports* tab to open the *Ports* configuration window. The communication ports that are currently configured are listed on the Ports page. Ports that are not listed can be configured by clicking the '+' icon.

Ports				
Input Format	Port	Output Format	Messages	
NOVATEL	COM1	NOVATEL	Start typing the message name	⊗
NOVATEL	COM2	NOVATEL	Start typing the message name	⊗
NOVATEL	COM3	NOVATEL	Start typing the message name	⊗
NOVATEL	ICOM1	NOVATEL	Start typing the message name	⊗
NOVATEL	ICOM2	NOVATEL	Start typing the message name	⊗
NOVATEL	ICOM3	NOVATEL	Start typing the message name	⊗
NOVATEL	ICOM4	NOVATEL	Start typing the message name	⊗
NOVATEL	ICOM5	NOVATEL	Start typing the message name	⊗
NOVATEL	ICOM6	NOVATEL	Start typing the message name	⊗
NOVATEL	ICOM7	NOVATEL	Start typing the message name	⊗
RTCMV3	NCOM1	NONE	To add messages, first choose an output format	⊗
RTCMV3	NCOM2	NONE	To add messages, first choose an output format	⊗
RTCMV3	NCOM3	NONE	To add messages, first choose an output format	⊗
NOVATEL	USB1	NOVATEL	Start typing the message name	⊗

Use the *Ports* configuration window to configure the communication ports on the receiver. The *Ports* configuration window is also used to configure the logs that are output from a specific communications port.

To add a port, set the Input Format, Port, Output Format and Messages parameters for the blank entry. To edit a port, change the parameters of an existing port configuration.

Input Format

The input format sets the type of message the port will accept. To set the input format, click the **Input Format** drop menu and select the format to use.

Auto

Set the port to automatically detect the format of the incoming RTK corrections.

CMR

Set the port to accept RTK correction messages in CMR format.

NONE

Disable input on the port.

NOVATEL

Set the port to accept NovAtel commands.

NOVATELX

Set the port to accept RTK correction messages in NOVATELX format.

RTCA

Set the port to accept RTK correction message in RTCA format.

RTCM

Set the port to accept RTK correction messages in RTCM format.

RTCMV3

Set the port to accept RTK correction messages in RTCM Version 3.0 format.

VERIPOS

Set the port to accept PPP correction messages over IP.



The MarinePak7 does not support Veripos correction messages over IP.

Port

There are several types of communication port that can be configured.



The MarinePak7 does not support COM4, COM5 or USB ports.

COM port

A COM port is a serial communication port. The number of COM ports available varies depending on the type of receiver. To add a COM port configuration:

1. Click the **Port** drop menu and select the COM port to configure.
2. Click the settings icon (⚙️) and set the communication parameters to match the device connected to the port.

3. Click the **Baud Rate** drop list and then click the baud rate (bps) used by this serial port. The default baud rate is 9600.
4. Click **N**, **E** or **O** to select the parity used by this serial port.
N = No parity, E = Even parity, O = Odd parity

The default parity is N (No Parity).

5. Click **7** or **8** to select the number of data bits used for each data message transmitted. The default is 8 bits.
6. Click **1** or **2** to select the number of stops bits used for each data message transmitted.
7. After setting the communication parameters, click the **Done** button to save the new settings.

ICOM

ICOM ports are virtual ports used for Ethernet or Wi-Fi connections. To add an ICOM port:

1. Click the **Port** drop menu and select the ICOM port to configure.
2. Click the settings icon (⚙️) and set the communication parameters used for the ICOM port.

The screenshot shows the 'ICOM1 Configuration' dialog box. It has a title bar with the text 'ICOM1 Configuration' and a close button (X). The main area contains two input fields: 'Domain' and 'Port'. The 'Port' field has the value '3001' entered. Below these fields is a 'Protocol' section with three radio buttons: 'Disabled', 'TCP' (which is selected), and 'UDP'. At the bottom right of the dialog are two buttons: 'Cancel' and 'Done'.

3. In the **Domain** box, enter the hostname or IP address of the device
4. In **Port** box, enter the TCP/UDP port number used by this ICOM port.
5. Click one of the following buttons to select the protocol used by this ICOM port.
 - **Disabled** – Disable this ICOM port.
 - **TCP** – Use raw TCP on this port.
 - **UDP** – Use raw UDP on this port.
6. After setting the communication parameters, click the **Done** button to save the new settings.

NCOM

Network ports are used when the receiver is acting as an NTRIP server or client. The receiver must have an Ethernet connection to use NCOM ports.

To add a NCOM port:

1. Click the **Port** drop menu and select the NCOM port to configure.
2. Click the settings icon (⚙️) and set the communication parameters used for the NCOM port.

NCOM1 Configuration

End Point

Domain: Port:

Search for mountpoint

No results found for this endpoint

Mountpoint:

Username:

Cancel **Done**

3. In the **Domain** box, enter the hostname or IP address of the Endpoint.
4. In the **Port** box, enter the TCP/UDP port number of the Endpoint.
5. Click the **Search for mountpoint** button.
6. Click the **Mountpoint** drop menu and click the mountpoint to use.
7. In the **Username** box, enter the login user name. The username can be up to character 30 characters long.
8. In the **Password** box, enter the login password. The Password can be up to 30 characters long.
9. Click the **Done** button.
10. After setting the communication parameters, click the **Done** button to save the new settings.

USB

A USB port is used to communicate with a device using a USB cable. To add a USB port, click the **Port** drop menu and select one of the USB ports.

Output Format

The output format sets the type of message the port will send. To set the output format, click the **Output Format** drop menu and select the format to use.

CMR

Set the receiver to send RTK correction messages in CMR format.

NMEA

Set the port to send NMEA format logs.

NONE

Disable output on the port.

NOVATEL

Set the port to send NovAtel logs.

NOVATELX

Set the receiver to send RTK correction messages in NOVATELX format.

RTCA

Set the receiver to send RTK correction messages in RTCA format.

RTCM

Set the receiver to send RTK correction messages in RTCM format.

RTCMV3

Set the receiver to send RTK correction messages in RTCM Version 3.0 format.

Messages

The *Messages* box shows the logs being sent out of this port.

To add a log:

1. Click the *Messages* box and start typing the name of the log to add.
A list of logs that start with the letters typed appears.
2. Click the name of the log to add.

Message Settings

To edit the collection parameters of the log:

1. Click the settings icon (⚙️).
The *Message Settings* dialog box appears.

Message Settings

NMEA Log Prefix
☒ GP ☐ AUTO

Precision
☒ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8

Quality Indicator
☐ 2 ☐ 5

Messages	Format	Trigger	Period
BESTPOS	Binary ▼	ONTIME ▼	1 s
RANGE	Binary ▼	ONTIME ▼	1 s
INSPVAS	Binary ▼	ONTIME ▼	1 s
GGA		ONTIME ▼	1 s

Cancel Apply

2. Adjust the setting for the log.

To change the logging settings for a log, select the parameter from the drop menus beside the log.

Format

Click **ASCII**, **Binary** or **Abbr ASCII** to select the format in which this log is generated.

Trigger

The trigger determines when the log is generated. Only triggers valid for the log are shown.

- **ONTIME**

Outputs the log at a regular interval. The number of seconds between log generation is set in the Period option.

- **ONCHANGED**

Outputs the current message and then continues to output when the message is changed.

- **ONCE**

Outputs the current message. If no message is currently present, the next message is output when available.

- **ONNEW**

Does not output the current message, but outputs when the message is updated (not necessarily changed).

- **ONALL**

Outputs the current message and then continues to output when the message is updated (not necessarily changed).



The ONALL trigger is available on firmware versions 7.09.01 and higher.

The triggers available depend on the log type.

Table 1: Log Type Triggers

Type	Recommended Trigger	Illegal Triggers
Synch	ONTIME	ONNEW, ONCHANGED
Asych	ONCHANGED or ONCE	–
Polled	ONCE or ONTIME	ONNEW, ONCHANGED

Period

The log period (for ONTIME trigger) in seconds.

Valid values for the high rate logging are 0.01, 0.02, 0.05, 0.1, 0.2, 0.25 and 0.5. For logging slower than once per second, any integer value is accepted.

If the value entered is lower than the minimum measurement period, the value will be rejected.

3. Repeat these steps to adjust the message settings for each log being collected.
4. Click the **Apply** button to save the changes for all of the logs.

Message Settings NMEA Logs

To edit the collection parameters of a NMEA log:

1. Click the settings icon (⚙️).
The *Message Settings* dialog box appears.

Message Settings

NMEA Log Prefix
☒ GP ☐ AUTO

Precision
☒ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8

Quality Indicator
☐ 2 ☐ 5

Messages	Format	Trigger	Period
BESTPOS	Binary ▼	ONTIME ▼	1 s
RANGE	Binary ▼	ONTIME ▼	1 s
INSPVAS	Binary ▼	ONTIME ▼	1 s
GGA		ONTIME ▼	1 s

Cancel Apply

2. Select the **NMEA Log Prefix** option for this log.
 - **GP**
The NMEA log will have prefix of GP and the NMEA log will include information only about the GPS satellites, even when the receiver is tracking multiple constellations.
 - **Auto**
The NMEA log prefix changes as per the constellations enabled on the receiver. When there is one constellation in the solution and SPAN is disabled, the NMEA Talker ID is output as: GP for GPS, GL for GLONASS, GA for Galileo, and GB/BD for BeiDou. If more than one constellation is in the solution, the prefix is GN with the exception of GPGSV.
3. If *Auto* was selected as the *NMEA Log Prefix*, select the **BeiDou Log Prefix**.
 - Select **GB** to use the current NMEA ID for BeiDou.
 - Select **BD** to use the legacy NMEA ID for BeiDou.
4. Click one of the **Precision** buttons to select the number of decimal places used for the latitude and longitude values in this log.
5. Click one of the **Quality Indicator** buttons to select the quality indicator that will be used for this log.
6. Click the **Trigger** drop menu and select the trigger used for the log.
7. Enter the log **Period** in seconds.

Valid values for the high rate logging are 0.01, 0.02, 0.05, 0.1, 0.2, 0.25 and 0.5. For logging slower than once per second, any integer value is accepted. If the value entered is lower than the minimum measurement period, the value will be rejected.

8. Set the Trigger and Period for each NMEA log.
9. Click the **Apply** button to save the changes for all of the logs.

To remove a log from this port, click the **X** icon on the button for the log.

Click the **Apply** button to save the configuration on the receiver.

2.4.3 Logging Configuration

Use the *Logging* configuration window to set the logs that will be saved on the computer running NovAtel Application Suite or the receiver's internal storage.



Use the *Ports* configuration window to configure the logs that will be output from a specific port.

Logging to the NovAtel Application Suite computer

NovAtel Application Suite can be used to save logs on a storage device in the computer used to run NovAtel Application Suite.



The Local File System option is available for all OEM7 receivers.

Click the *Logging* tab to open the *Logging* window.

Destination

☐ Onboard Storage

☒ Local File System

C:\Users\rmunro\Documents\NovAtelData\DataLogger **Browse**

Message Sets

☒ NONE

Troubleshooting

☐ General ☐ Interference/Tracking ☐ Oceanix

☐ RTK Base ☐ RTK Rover ☐ SPAN

☐ TerraStar

Post Processing

☐ GrafNav ☐ Inertial Explorer ☐ Playback

☐ Rinex

Custom Messages

Start typing the message name

? Help **Next**

To configure the logs to be saved to the computer running NovAtel Application Suite:

1. Click **Browse**.

The Open Folder dialog box appears.

2. Navigate to the folder in which you want to store the logs.

The default folder is: <Current User APPDATA>/Documents/Novatel Data/DataLogger/.

3. Click **Select Folder**.

The *Logging* configuration window appears with the path name of the selected folder displayed in the *Local File System* box.

4. In the **File Name** box, enter the name of the file in which the logs will be stored.

5. In the *Message Sets* section, click the button for one of the message sets. The logs contained in the selected message set will be collected.

6. To add other logs, click the *Custom Messages* box and start typing the name of the log. A list of logs with names that start with the typed letters appears.

7. Click the name of the log to add it to the logs collected.

8. Repeat steps 5 and 6 for each log to add.
9. Click **Next**. A dialog box appears.



The **Next** button is disabled until a Message Set other than *None* is selected or logs are entered in the *Custom Messages* box.

10. If you want to collect the logs with the current message settings, click **Start** to start collecting logs.
If you want to change the message settings for the logs, click **Edit Optional Settings**. The *Optional Settings* page appears.
11. Adjust the Optional Settings as required. See the following sections for information about the settings.
12. Click **Start** to start collecting logs.

Message Sets

The Logging page has several *Message Sets*. A Message Set is a group of logs recommended for a specific purpose. When a Message Set is selected, all of the logs in the set are added to the list of logs to save on the receiver's storage device.

None

No logs are selected to be saved. This is the default Message Set.

ALIGN

The recommended logs to collect for troubleshooting issues with the ALIGN heading feature.

General

A set of logs useful for troubleshooting issues on the receiver.

Interference/Tracking

The recommended logs to collect for troubleshooting issues with interference and tracking incoming GNSS signals.

Oceanix

The recommended logs to collect for troubleshooting issues when using Oceanix corrections to generate a PPP position.

RTK Base

The recommended logs to collect for troubleshooting issues when the receiver is acting as an RTK base station.

RTK Rover

The recommended logs to collect for troubleshooting issues when the receiver is acting as an RTK rover.

SPAN

The recommended logs to collect for troubleshooting issues when the receiver is part of a SPAN GNSS+INS system.

TerraStar

The recommended logs to collect for troubleshooting issues when using TerraStar corrections to generate a PPP position.



The TerraStar message set is not available on MarinePak7 receivers.

GrafNav

The recommended logs to save when the data collected will be post-processed using Waypoint GrafNav software.

Inertial Explorer

The recommended logs to save when the data collected will be post-processed using Waypoint Inertial Explorer software.

Playback

The recommended logs to collect if you plan to review or analyze the collected data using the Playback feature.

Rinex

The recommended logs to collect a complete set of RINEX data from a NovAtel receiver.

Logging to the Receiver Internal Storage

NovAtel Application Suite can be used to save logs on to the receiver's internal storage.



The Onboard Storage option is available only on receivers with internal storage, such as the PwrPak7 and CPT7 receivers.

Click the *Logging* tab to open the *Logging* window.

The screenshot shows a configuration window with the following sections:

- Destination:** Two radio buttons are present: **Onboard Storage** (selected) and **Local File System**. Below them is a text field containing the path `C:\Users\rmunro\Documents\NovAtelData\DataLogger` and a **Browse** button.
- Message Sets:** A single button labeled **NONE** is selected.
- Troubleshooting:** A grid of radio buttons for selecting troubleshooting options: **General**, **Interference/Tracking**, **Oceanix**, **RTK Base**, **RTK Rover**, **SPAN**, and **TerraStar**.
- Post Processing:** A grid of radio buttons for selecting post-processing options: **GrafNav**, **Inertial Explorer**, **Playback**, and **Rinex**.
- Custom Messages:** A text input field with the placeholder text "Start typing the message name".

At the bottom of the window, there is a **Help** button (with a question mark icon) on the left and a **Next** button on the right.

To configure the logs to be save on internal storage:

1. Ensure the Onboard Storage option is selected.
2. In the *Message Sets* section, click the button for one or more message sets. The logs contained in the selected message sets will be collected.
3. To add other logs, click the *Custom Messages* box and start typing the name of the log. A list of logs with names that start with the typed letters appears.
4. Click the name of the log to add it to the logs collected.
5. Repeat steps 3 and 4 for each log to add.
6. Click **Next**. A dialog box appears.



The **Next** button is disabled until a Message Set other than *None* is selected or logs are entered in the *Custom Messages* box.

7. If you want to collect the logs with the current message settings, click **Start** to start collecting logs.

If you want to change the message settings for the logs, click **Edit Optional Settings**. The *Optional Settings* page appears.

8. Adjust the Optional Settings as required. See the following sections for information about the settings.
9. Click **Start** to start collecting logs.

Optional Settings

The Optional Settings window has two tabs: *File Setting* and *Message Settings*.

File Settings

The screenshot shows the 'Logging' window with 'Optional Settings' selected. The 'File Settings' tab is active, displaying 'Full Disk Action' with 'STOP' selected and 'OVERWRITE' as an alternative. Below, 'File Rotation (Hour)' has 'NONE' selected, with other options including 1, 2, 4, 8, 12, 16, 20, and 24. The 'Message Settings' tab is visible below. At the bottom, there is a 'Help' link, a 'Cancel' button, and a 'Start' button.

The File Settings configure how the receiver handles the files in which the logs are stored.

Full Disk Action

The Full Disk Action options determine how the receiver acts when the file storage device is full.

- **STOP**

The receiver stops logging when the file storage device has 1 MB of free space or less.

When logging to the computer running NovAtel Application Suite (local computer), logging stops when the disk space is less than 10 MB.

- **OVERWRITE**

The receiver deletes the oldest log file when the file storage device has 10 MB of free space or less.

When logging to the local computer, the oldest log file is deleted when there is 10 MB of disk space or less. To be deleted, the log file must have the default naming scheme, exist in the current logging folder and be created by this receiver.

File Rotation

The File Rotation options determine when the receiver closes the current log file and start storing logs in a new file. There is no data loss when the receiver changes log files and individual logs within the file are not spread between log files.

When logging to the local computer, NovAtel Application Suite closes the log file.

To enable File Rotation, click one of the numbered buttons to select the number of hours that a log file is kept open.

To disable File Rotation, click **None**.

Message Settings

Logging

Optional Settings

File Settings

Message Settings

Message	Format	Trigger	Period
BESTGNSSPOS	Binary	ONTIME	1 s
BESTPOS	Binary	ONTIME	1 s
GLORAWEPHEM	Binary	ONNEW	s
INSCONFIG	ASCII	ONCHANGED	s
INSPVAX	Binary	ONTIME	1 s
INSUPDATESTATUS	Binary	ONCHANGED	s
ITDETECTSTATUS	Binary	ONCHANGED	s
RANGE	Binary	ONTIME	1 s
RAWEPHEM	Binary	ONNEW	s
RAWIMUSX	Binary	ONNEW	s
RXCONFIG	Binary	ONCE	s
RXSTATUS	Binary	ONCHANGED	s

The Message Settings tab lists the logs being saved to the file storage device.

To change the logging settings for a log, use the drop menus and text box beside the log.

Format

Click **ASCII**, **Binary** or **Abbr ASCII** to select the format in which this log is generated.

Trigger

The trigger determines when the log is generated.

- **ONTIME**

Outputs the log at a regular interval. The number of seconds between log generation is set in the Period option.

- **ONCHANGED**

Outputs the current message and then continues to output when the message is changed.

- **ONCE**

Outputs the current message. If no message is currently present, the next message is output when available.

- **ONNEW**

Does not output the current message, but outputs when the message is updated (not necessarily changed).

- **ONALL**

Outputs the current message and then continues to output when the message is updated (not necessarily changed).



The ONALL trigger is available on firmware versions 7.09.01 and higher.

The triggers available depend on the log type.

Table 2: Log Type Triggers

Type	Recommended Trigger	Illegal Triggers
Synch	ONTIME	ONNEW, ONCHANGED
Asych	ONCHANGED or ONCE	–
Polled	ONCE or ONTIME	ONNEW, ONCHANGED

Period

The log period in seconds (for ONTIME trigger).

Valid values for the high rate logging are 0.01, 0.02, 0.05, 0.1, 0.2, 0.25 and 0.5. For logging slower than once per second, any integer value is accepted.

If the value entered is lower than the minimum measurement period, the value will be rejected.

Logging Active

Logging

Active Log File Size **560 KB**

Stop All

Pause All

BESTGNSSPOS	STOP
BESTPOS	STOP
GLORAWEPHEM	STOP
INSCONFIG	STOP
INSPVAX	STOP
INSUPDATESTATUS	STOP
ITDETECTSTATUS	STOP
RANGE	STOP
RAWEPHEM	STOP
RAWIMUSX	STOP
RXSTATUS	STOP

If logging to a storage device is already active, the *Logging Configuration* page shows the size of the active log file and the list of logs being collected.

If logging to NovAtel Application Suite computer, the Destination field is displayed indicating that log files are being stored to the Local File System. Clicking the **Open** button will open the folder in which the log file is stored.

To stop collecting a log, click **Stop** beside the log.

To stop collecting all logs, click **Stop All**.

To temporarily suspend the collection of logs, click **Pause All**. Click the button again to resume logging.

2.4.4 ALIGN Configuration

ALIGN technology combines two or more receivers to generate high precision heading and pitch angles between two receivers for real-time navigation.

Use the ALIGN configuration window to enable ALIGN on a dual antenna receiver or set up an ALIGN master station with an ALIGN capable rover receiver for applications that require heading output. The ALIGN configuration should be run from the ALIGN rover receiver.



Dual antenna receivers, such as the OEM7720, PwrPak7D, PwrPak7D-E1, PwrPak7D-E2 and CPT7, can provide an ALIGN solution without additional receivers or configuration.




A dual frequency capable GNSS antenna is required to use ALIGN.

Click the *ALIGN* tab to open the *ALIGN* configuration window.

The content on the *ALIGN* configuration window varies depending on the type of receiver and how the rover receiver is connected to the master receiver.

The top view of the ALIGN configuration window shows a tabbed interface with 'Positioning', 'Ports', 'Logging', 'ALIGN', 'SPAN', and 'Radio'. The 'ALIGN' tab is active. It features a toggle switch labeled 'Off' and 'On', currently set to 'Off'. At the bottom right, there are three buttons: 'Need Help?' (text), 'Cancel' (white), and 'Apply' (blue).

The bottom view of the ALIGN configuration window shows the same tabbed interface. The 'ALIGN' tab is active. It features two buttons: 'Off' and 'Onboard', with 'Onboard' selected. Below these are two input fields: 'Heading Offset (°degrees)' and 'Pitch Offset (°degrees)', both containing '0.0'. Below these are five buttons for 'Heading Output Rate (Hz)': '1', '2', '4', '5', and '10', with '1' selected. At the bottom right, there are three buttons: 'Need Help?' (text), 'Cancel' (white), and 'Apply' (blue).

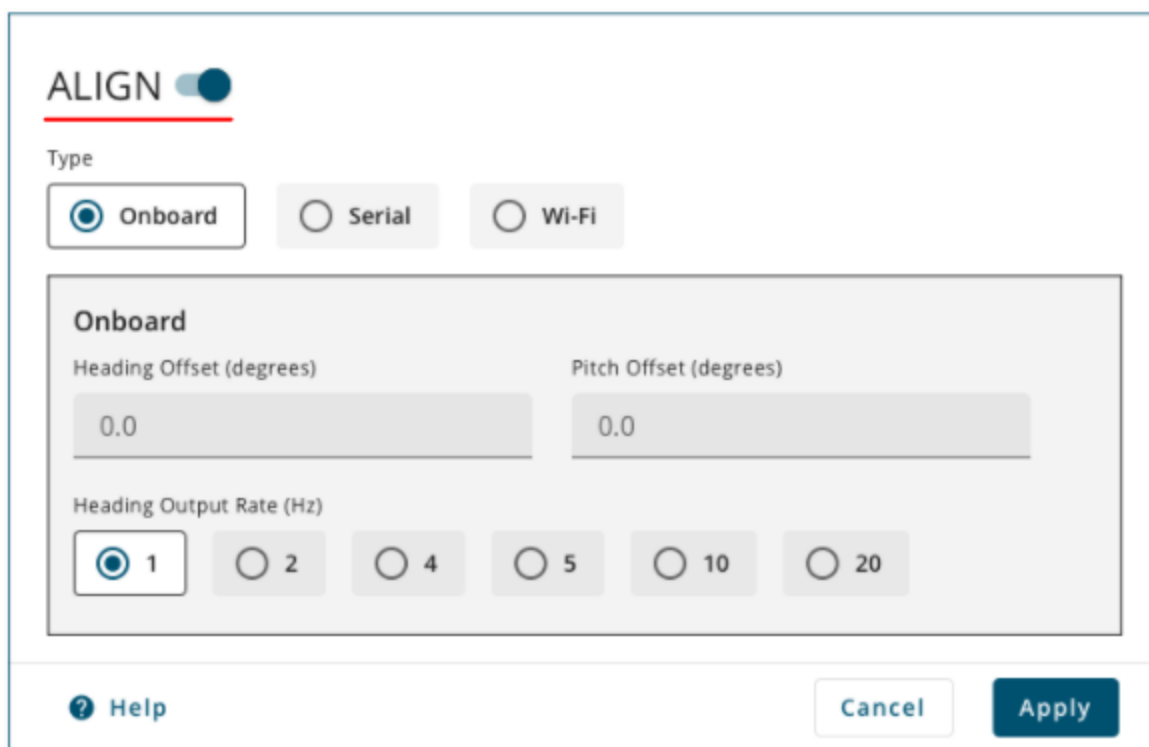

ALIGN ☒

Type

☒ Onboard ☐ Serial ☐ Wi-Fi


Onboard

Heading Offset (degrees) Pitch Offset (degrees)

Heading Output Rate (Hz)

☒ 1 ☐ 2 ☐ 4 ☐ 5 ☐ 10 ☐ 20

[? Help](#) [Cancel](#) [Apply](#)

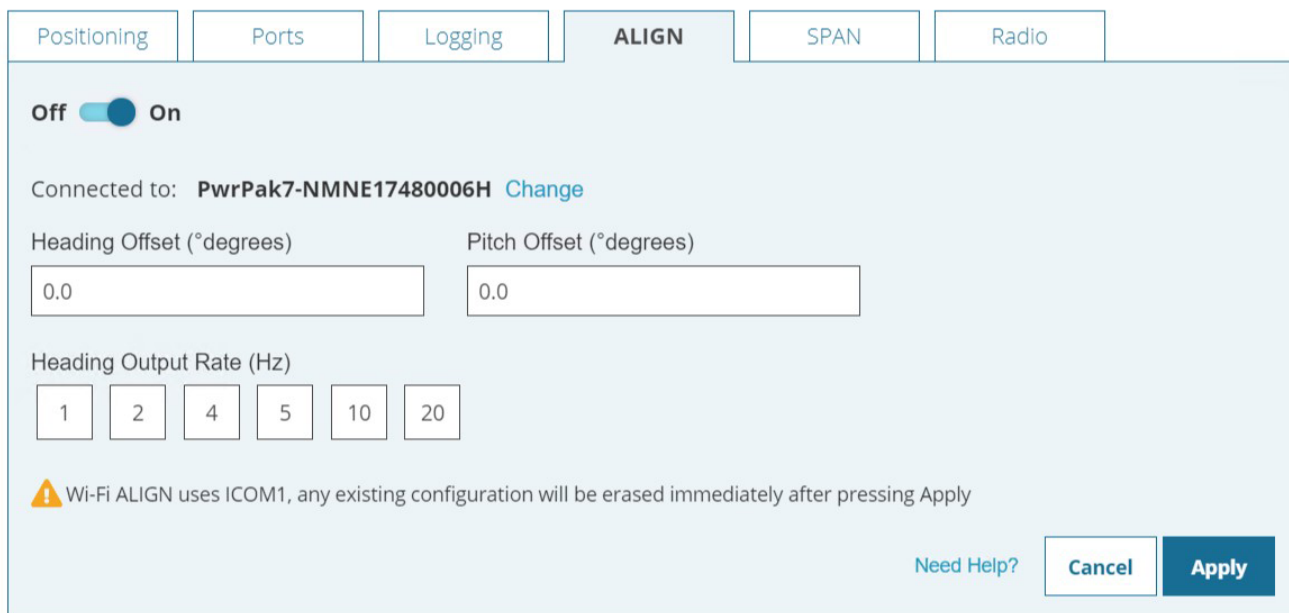


Positioning Ports Logging **ALIGN** SPAN Radio

Off ☒ On

Connected to: **PwrPak7-NMNE17480006H** [Change](#)

Heading Offset (°degrees) Pitch Offset (°degrees)

Heading Output Rate (Hz)

 Wi-Fi ALIGN uses ICOM1, any existing configuration will be erased immediately after pressing Apply

[Need Help?](#) [Cancel](#) [Apply](#)

ALIGN Switch

Set the ALIGN switch to On (☒) to configure the receivers to pass ALIGN messages and enable ALIGN. If ALIGN is already enabled, set the ALIGN switch to Off (☐) to disable ALIGN.

On dual antenna receivers, the *Type* options appear below the ALIGN switch.

- Click the **Onboard** option to calculate an ALIGN solution using the two GNSS antennas connected to the receiver.

- Click the **Serial** option to use the COM2 serial port to pass ALIGN messages between the rover and master receivers.
- Click the **Wi-Fi** option to use a Wi-Fi connection to pass ALIGN messages between the rover and master receivers.

Connected to

Displays the name of the receiver with which ALIGN messages are exchanged.

To connect to a different receiver, click **Change** and select the master receiver to connected to.

This option is available only if a Wi-Fi connection is used to exchange ALIGN messages and the master and rover receivers are both Wi-Fi capable receivers.

Heading Offset

Enter a value in the **Heading Offset** box to add an offset, in degrees, to the heading value displayed on the ALIGN status page and the heading logs (HEADING2 and GPHDT).

The receiver determines heading based on the relative location of the two GNSS antennas. This offset is used to align the heading determined by the receiver with the forward motion of the vehicle.

Pitch Offset

Enter a value in the **Pitch Offset** box to add an offset, in degrees, to the pitch value displayed on the ALIGN status page and the heading logs (HEADING2 and GPHDT).

The receiver determines pitch based on the relative location of the two GNSS antennas. This offset is used to align the pitch determined by the receiver with the pitch of the vehicle.

Heading Output Rate

Click one of the numbered buttons to set the rate (in Hz) at which heading data is output. The default is 10 Hz.

After setting the ALIGN parameters, click the **Apply** button to save the configuration on the receiver.

2.4.5 SPAN Configuration

Use the SPAN configuration window to configure SPAN GNSS+INS technology on the receiver.



To use SPAN, the receiver must have an internal IMU (CPT7, CPT7700, PwrPak7-E1, PwrPak7D-E1, PwrPak7-E2, PwrPak7D-E2 or SMART7-S) or be connected to a SPAN compatible IMU.



A dual frequency capable GNSS antenna is required to use SPAN.

Click the *SPAN* tab to open the *SPAN* configuration window.

The *SPAN* configuration window shows the **SPAN** switch and the current SPAN configuration.

SPAN

IMU Installation

Type	EPSON_G320
Port	SPI
Installation Location (m)	Not configured



IMU Installation Rotations

Rotation Offsets (°)	X: 0.00	3.00
	Y: 0.00	3.00
	Z: 0.00	3.00

Antenna Offsets

Frame	IMU Frame
Primary Antenna (m)	X: 10.00 1.00 Y: 10.00 1.00 Z: 10.00 1.00
INS Position Report Location	IMU

[? Help](#)
[Configure](#)

Click the **SPAN** switch to enable () or disable () the SPAN configuration.

To change the SPAN configuration, click the **Configure** button. The *IMU Installation* window opens.


IMU Installation

1. IMU Installation
2. IMU Rotations
3. Antenna Offsets

IMU Installation

Type
Port

EPSON_G320
SPI

Installation Location* (relative to the Reference Point )


X
1
m

Y
0.5
m

Z
0.5
m

*These measurements can be approximate. These measurements only affect the visual representation of the chosen vehicle and have no effect on positioning.

You can change the vehicle type image from the [Vehicle Setup](#).

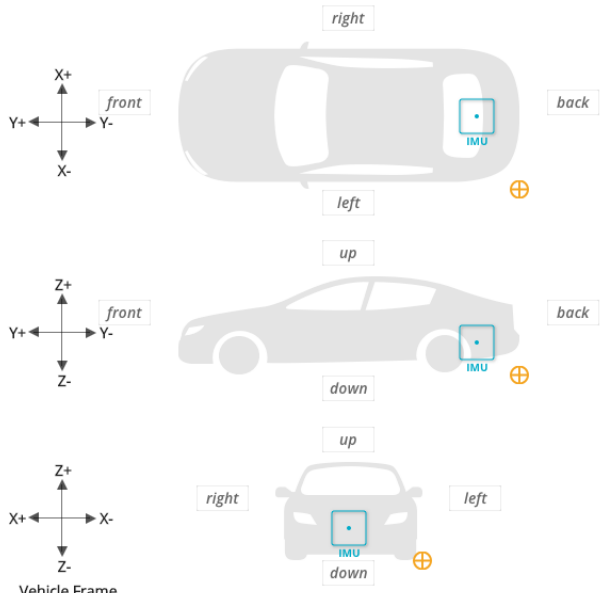

[? Help](#)
[Previous](#)
[Next](#)

For receivers with an internal IMU (e.g. CPT7, CPT7700, PwrPak7-E1, PwrPak7D-E1, PwrPak7-E2, PwrPak7D-E2, SMART7-S), do not change the IMU Type or Port. The correct IMU Type and Port are configured at the factory.

Type

Click the *Type* drop menu and click on the IMU connected to the receiver.

The Vehicle Setup graphic displays after the IMU type is selected. To change the Vehicle Setup graphic or Reference point, see *Vehicle Setup* on page 30.

Port

Click the *Port* drop menu and click on the communication port to which the IMU is connected.

X

Enter the distance along the vehicle frame X axis from the Reference Point to the IMU.

Y

Enter the distance along the vehicle frame Y axis from the Reference Point to the IMU.

Z

Enter the distance along the vehicle frame Z axis from the Reference Point to the IMU.



The values entered for X, Y and Z are used only to locate the IMU on the Vehicle Setup graphic. These values are not used for the position solution.



The IMU installation location can also be changed by clicking on the IMU icon in the Vehicle Setup graphic and dragging the IMU to the correct location.

Click **Next**. The *IMU Rotations* tab opens.

IMU Rotations

1. IMU Installation
>
2. IMU Rotations
>
3. Antenna Offsets

IMU Rotations

Installation Orientation

Which way is the IMU's X+ pointing? Right

Which way is the IMU's Y+ pointing? Front

Which way is the IMU's Z+ pointing? Up

☒ Show Installation Rotation Offsets

Rotation Offsets (°)

X	0	°(degrees)	Xα	3	°(degrees)
Y	0	°(degrees)	Yα	3	°(degrees)
Z	0	°(degrees)	Zα	3	°(degrees)

Help
Previous
Next

Which way is the IMU's X+ pointing?

Click the drop down menu and select the direction the X+ axis of the IMU is pointing relative to the vehicle frame (as shown in the Vehicle Setup graphic). The X+ axis of the IMU is shown on the enclosure of the IMU or receiver.

Which way is the IMU's Y+ pointing?

Click the drop down menu and select the direction the Y+ axis of the IMU is pointing relative to the vehicle frame (as shown in the Vehicle Setup graphic). The Y+ axis of the IMU is shown on the enclosure of the IMU or receiver.

Which way is the IMU's Z+ pointing?

Click the drop down menu and select the direction the Z+ axis of the IMU is pointing relative to the vehicle frame (as shown in the Vehicle Setup graphic). The Z+ axis of the IMU is shown on the enclosure of the IMU or receiver.



Only two IMU axes need to be selected. After two IMU axes are configured, NovAtel Application Suite automatically selects the correct third axis direction.



The IMU frame axes shown on the Vehicle Setup graphic are updated based on the IMU directions entered.

Show Installation Rotation Offsets

Select this option to show the IMU Rotation Offsets.

Rotation Offsets (°)

The values in the **X**, **Y** and **Z** boxes are the IMU Rotation Offsets, in degrees, of the current IMU rotation configuration. These values are view only.

The values in the **Xσ**, **Yσ** and **Zσ** boxes are the default values for the standard deviation of the IMU Rotation Offsets in degrees. These values can optionally be changed to the anticipated standard deviation values for the installation.

Click **Next**. The *Antenna Offsets* tab opens.

Antenna Offsets

For OEM7 receivers, the antenna offsets can be entered relative to the IMU frame or the vehicle frame.

Antenna Offsets in IMU Frame

Select the **Use IMU frame** option to enter the antenna offsets relative to the IMU Body frame.

1. IMU Installation
>
2. IMU Rotations
>
3. Antenna Offsets

Antenna Offsets
relative to the IMU

☒ Use IMU frame
☐ Use vehicle frame

Primary Antenna

X
0
m

Y
1.1
m

Z
1
m

Xσ
0.1
m

Yσ
0.1
m

Zσ
0.1
m

By default, INS position is reported at the centre of the IMU.
Would you like to report your position (INS logs only) from an alternate location?

☒ IMU
☐ Antenna 1
☐ Custom

Help

Previous
Apply

Primary Antenna

The Primary Antenna offset is the three dimensional distance from the IMU to the GNSS antenna. The primary antenna offsets are required for all SPAN systems.

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the GNSS antenna phase center. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the IMU Body frame. The direction of the IMU Body frame axes are shown in the Vehicle Setup graphic.

In the **Xσ**, **Yσ** and **Zσ** boxes, enter the offset standard deviation in metres. The standard deviation settings are optional.



The measurements for the offsets should be done as accurately as possible, preferably to within millimetres especially for RTK operation. Any error in the offsets will translate into an error in the INS position.



Large standard deviations can lead to an inaccurate position solution. Therefore, it is highly recommended to measure translation offsets as accurately as possible and to manually enter translation offset standard deviations that reflect that accuracy.

Secondary Antenna

If the SPAN system supports two GNSS antennas, the secondary antenna offset parameters are shown.

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the phase center of the secondary GNSS antenna. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the IMU Body frame. The direction of the IMU Body frame axes are shown in the Vehicle Setup graphic.

In the **X σ** , **Y σ** and **Z σ** boxes, enter the offset standard deviation in metres. The standard deviation settings are optional.

To view the secondary antenna on the Vehicle Setup graphic, select the **Show Antenna** option.

Antenna Offsets in Vehicle Frame

Select the **Use vehicle frame** option to enter the antenna offsets relative to the vehicle frame.

Primary Antenna

The Primary Antenna offset is the three dimensional distance from the IMU to the GNSS antenna. The primary antenna offsets are required for all SPAN systems.

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the GNSS antenna phase center. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the vehicle frame. The direction of the vehicle frame axes are shown in the Vehicle Setup graphic.

In the **X σ** , **Y σ** and **Z σ** boxes, enter the offset standard deviation in metres. The standard deviation settings are optional.



The measurements for the offsets should be done as accurately as possible, preferably to within millimetres especially for RTK operation. Any error in the offsets will translate into an error in the INS position.



Large standard deviations can lead to an inaccurate position solution. Therefore, it is highly recommended to measure translation offsets as accurately as possible and to manually enter translation offset standard deviations that reflect that accuracy.

Secondary Antenna

If the SPAN system supports two GNSS antennas, the secondary antenna offset parameters are shown.

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the phase center of the secondary GNSS antenna. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the vehicle frame. The direction of the vehicle frame axes are shown in the Vehicle Setup graphic.

In the **X σ** , **Y σ** and **Z σ** boxes, enter the offset standard deviation in metres. The standard deviation settings are optional.

To view the secondary antenna on the Vehicle Setup graphic, select the **Show Antenna** option.

Position Center for INS Logs

The position and velocity information in the INSPVA, INSPOS, INSVEL, INSATT, and INSSPD logs, along with their short header and extended versions, can be output relative to the IMU, primary antenna, secondary antenna or a custom location.

IMU

Select this option to set center of the position and velocity information to the IMU center of navigation. IMU is the default option.

Antenna 1

Select this option to set the center of the position and velocity information to the primary GNSS antenna phase center.

Antenna 2

Select this option to set the center of the position and velocity information to the secondary GNSS antenna phase center.

Custom

Select this option to set the center of the position and velocity information to a custom location. When this option is selected, *Custom* offset parameters are shown.

Antenna Offsets

relative to the IMU

☒ Use IMU frame
 ☐ Use vehicle frame

Primary Antenna

X 0 m

Xσ 0.1 m

Y 1.1 m

Yσ 0.1 m

Z 1 m

Zσ 0.1 m

By default, INS position is reported at the centre of the IMU.
Would you like to report your position (INS logs only) from an alternate location?

☐ IMU
 ☐ Antenna 1
 ☒ Custom

User(Optional)

X 0 m

Y 0 m

Z 0 m

[? Help](#)
[Previous](#)
[Apply](#)

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the custom location. The offsets are measured in three directions, X axis, Y axis and Z axis, and are relative to either the IMU Body frame (if the **Use IMU frame** option is selected) or the vehicle frame (if the **Use vehicle frame** option is selected).

The custom location is displayed on the Vehicle Setup graphic.

Click **Apply** to save the changes to the receiver.

2.4.6 Radio Configuration

Radio

Connected Radio: **EASy**
Connected Port: **COM2**

Compatibility Mode

Compatibility

☐ Pacific Crest
 ☐ Pacific Crest FST
 ☐ Satel 3AS
 ☐ Trimtalk

Power & Frequency

Transmit Power (mW)

☐ 100
 ☐ 200
 ☐ 500
 ☐ 1000

Transmit Frequency (MHz)

[? Help](#)
Cancel
Apply

Use the *Radio* configuration window to configure the radio connected to the receiver.

The settings on the *Radio* configuration window are saved on the radio module, not on the receiver.



Do not interrupt power while the radio is being configured.

Click the *Radio* tab to open the *Radio* configuration window.

If the radio has not been configured, the **Detect Radio** button displays. Click the **Detect Radio** button. If the receiver finds a radio, the *Radio* configuration window displays the type of radio detected and the configuration parameters for that radio.

Connected Radio

Displays the type of radio connected to the receiver.

Connected Port

Displays the communication port to which the radio is connected.



The compatibility mode settings vary depending on the radio module installed.

Compatibility Mode (450 MHz)

1. Click the button for the *Compatibility* (protocol) that the radio will use. The Modulation options appear.
2. Click the button for the modulation the radio will use. The Link Rate options appear.
3. Click the button for the link rate, in bps, the radio will use. The Channel Spacing options appear.
4. Click the button for the channel spacing the radio will use. The FEC options appear.
5. Click the button to enable or disable Forward Error Correction (FEC).

Power & Frequency (450 MHz)

1. Click one of the *Transmit Power* buttons to select the power at which the radio transmits.
2. In the *Transmit Frequency* box, enter the transmit frequency, in MHz, the radio will use. The valid frequency range is 403 MHz to 473 MHz.
3. Click the **Apply** button to save the changes to the radio.

Compatibility Mode and Transmit Power (900 MHz)

1. Click one of the *Compatibility Mode* buttons to select the protocol the radio will use.
2. Click one of the *Transmit Power* buttons to select the power at which the radio transmits.
3. In the *Channel* box, enter the channel number the radio will use.
4. Click the **Apply** button to save the changes to the radio.

2.4.7 GNSS Configuration

Use the GNSS configuration window to configure elevation mask and Pulse Per Second (PPS) output.

Elevation Mask

The Elevation Mask is the elevation cut-off angle for tracked satellites in degrees. The receiver does not start searching for a satellite until it rises above the cut-off angle (when the satellite position is known). Tracked satellites that fall below the cut-off angle are no longer tracked.

Enter a value between 1 and 90 degrees, where 1 degree is just above the horizon and 90 degrees is directly overhead.

Pulse per Second

To enable the PPS output signal, set the **Pulse per Second** switch to enable ()

To disable the PPS output signal, set the **Pulse per Second** switch to disable ()

Polarity

Select **Positive** to use a positive polarity on the pulse generated on the PPS output

Select **Negative** to use a negative polarity on the pulse generated on the PPS output

2.4.8 Spoofing Configuration

For the receiver to detect a spoofing signal, a calibration procedure must be run. The *Spoofing* configuration window provides access to the spoofing calibration feature.



The Spoofing configuration window is available for MarinePak7 receivers only. For other receivers, use the Spoofing feature in GRIT Monitor.


To access the *Spoofing* configuration window, click the **Spoofing** tab.

To calibrate the receiver for spoofing detection, click the **Calibrate** button.



Before starting a calibration, ensure the receiver is in a good signal environment (no interference, spoofing or obstructions are present).

When the calibration procedure is complete, the *Spoofing* window changes to show the calibration is complete.

To disable spoofing detection, set the **Spoofing** option to disabled ()

If required, the receiver can be re-calibrated by clicking the **Re-Calibrate** button.

2.5 PIM222A

When connected to a PIM222A receiver, the tiles available on NovAtel Application Suite are different than the tiles available for other receivers. The following sections describe the tiles available for the PIM222A.

2.5.1 Positioning Status

The *Positioning* tile displays information about the position calculated by the receiver.

Position

The positioning type used to calculate the position.

This field shows all of the position types configured on the receiver. The position type being used is highlighted with a green box.

- **Single**

A GNSS code based position is being calculated without the use of any correction sources. This is the default positioning type.

- **RTK**

A carrier based position is being calculated using the Real Time Kinematic (RTK) method.

Latitude

Latitude of the receiver position in degrees.

Longitude

Longitude of the receiver position in degrees.

Height

The height of the receiver in metres.

The height is shown as height above mean sea level (MSL) or as ellipsoidal height. When the height set to show height above sea level, "(MSL)" is included in the field name.

2d-SD

The horizontal standard deviation of the position.

Course Over Ground

Actual direction of motion over ground with respect to True North, in degrees.

Azimuth

Left-handed rotation around the z-axis in degrees clockwise from North. This is the inertial azimuth calculated from the IMU gyros and the SPAN filters. Azimuth is available only if SPAN is active.

Pitch

Right-handed rotation from local level around the x-axis in degrees.

Roll

Right-handed rotation from local level around the y-axis in degrees.

Speed

Speed over ground in km/h.

North Velocity

The velocity in a northerly direction. A negative (-) value implies a southerly direction. The velocity is in m/s.

East Velocity

The velocity in an easterly direction. A negative (-) value implies a westerly direction. The velocity is in m/s.

Up Velocity

The velocity in an upward direction. A negative (-) value implies a downward direction. The velocity is in m/s.

2.5.2 Device Status**CPU Usage**

The percentage of computing power currently being used by the module.

Temperature

The approximate temperature of the module.


Module Input Voltage

Supply voltage being provided to the module.

2.5.3 2d-SD


The *2d-SD* tile provides a graph of the horizontal position standard deviation over time.

The Y-axis scale can be configured to 5 cm, 10 cm, 50 cm, 1 m, or 5 m. The default scale is 5 cm.

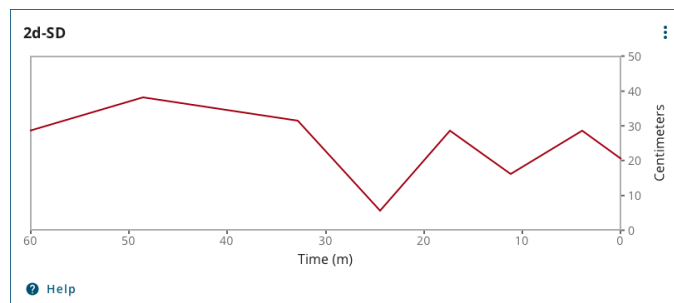**2.5.4 Height-SD**

The *Height-SD* tile provides a graph of the ellipsoidal height standard deviation over time.

The Y-axis scale can be configured to 5 cm, 10 cm, 50 cm, 1 m, or 5 m. The default scale is 5 cm.

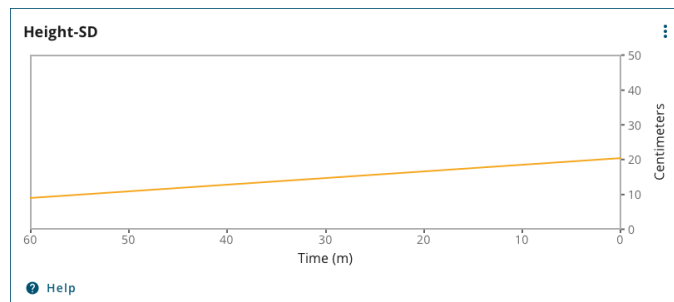

2.5.5 Satellite View

The *Satellite View* tile displays each satellite the receiver is tracking in graphical format. Concentric circles from 0° to 90° represent elevations from the horizon to directly overhead.

The satellites being tracked are represented with icons according to their satellite system. The PRN of the satellite tracked appears below the Satellite icon.

- If the Satellite icon is green, the satellite is used in the positioning solution.
- If the Satellite icon is amber, the satellite is being tracked but is not used in the positioning solution.

A legend on the *Satellite View* tile identifies the icon used for each GNSS system and the number of satellites used in the solution.

To view information about a specific satellite, click on the Satellite icon. A pop up box displays PRN, azimuth, elevation and tracking information about the satellite.

2.5.6 Positioning Configuration

On a PIM222A receiver, positioning configuration is applied at one time. Enter all of the applicable positioning configuration parameters, described in the following sections, and then click the **Apply** button.



NMEA Interface Mode

When the PIM222A COM port is in NMEA interface mode, NovAtel Application Suite is not able to retrieve the existing configuration. A message is displayed to indicate that the current configuration is not known and the parameters on the Positioning Configuration window are filled with suggested default values.

RTK

To use RTK corrections, the receiver must have a communications link through the COM2 port to an RTK base station. Use the *RTK* tile to configure the PIM222A to receive RTK corrections.

Input Format

RTCMV3

Input Port

☒ COM1
 ☐ COM2

☐ Enable PIMTP wrapper

Input Format

Displays the format of the incoming RTK messages.

Input Port

Select the port through which RTK corrections are received.

Enable PIMTP wrapper

Select this option to receive the RTCMV3 messages that are wrapped in a PIMTP format message.

Clear this option to receive raw RTCMV3 messages.

CAN Configuration

Use the *CAN Configuration* tile to set the parameters the PIM222A needs to communicate on the CAN bus.

CAN Bit Rate
☒ 250K
☐ 500K
☐ 1M

DMI Config Value (Define DMI protocol type)

1
▼

Enter value communicated by NovAtel.

CAN Bit Rate

Select the bit rate that is used on the CAN bus to which the PIM222A is connected.

DMI Config Value

Select the DMI Config Value for the DMI connected to the PIM222A.

Please contact Hexagon A&P Application Engineering for supported DMI Configuration number details.

Vehicle Parameters

Use the *Vehicle Parameters* tile to set the parameters of the vehicle in which the PIM222A is installed.

Steering Methods

FRONT_WHEEL_ACKERMANN
▼

Wheel Base

26.000
m

Front Wheel Track

0.260
m

Rear Wheel Track

12.000
m

Secondary Wheel Base

0.120
m

DMI Offsets (from IMU Center of Navigation to center of rear wheel axle)

X	26.000	°(degrees)	Xσ	0.260	°(degrees)
Y	12.000	°(degrees)	Yσ	0.120	°(degrees)
Z	7.000	°(degrees)	Zσ	0.070	°(degrees)

Steering Methods

Click the drop down menu and select the steering method used by the vehicle.

Wheel Base

Enter the wheel base of the vehicle in metres.

Front Wheel Track

Enter the front wheel track in metres.

Rear Wheel Track

Enter the rear wheel track in metres.

Secondary Wheel Base

Enter the secondary wheel base of the vehicle in metres.

DMI Offsets

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the center of the rear axle. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the IMU Body frame.

In the **X σ** , **Y σ** and **Z σ** boxes, enter the offset standard deviation in metres. The standard deviation settings are optional.

SPAN

Use the *SPAN* tile to configure SPAN GNSS+INS technology on the receiver.



A dual frequency capable GNSS antenna is required to use SPAN.

IMU Rotational Offsets

Relative to Vehicle Frame

Installation Rotation Offsets

X	26.000	°(degrees)	Xσ	0.260	°(degrees)
Y	12.000	°(degrees)	Yσ	0.120	°(degrees)
Z	7.000	°(degrees)	Zσ	0.070	°(degrees)

[View Setup](#)

Antenna Offsets

IMU Center of Navigation to Antenna Phase Center

Primary Antenna

X	0.000	m	Xσ	0.000	m
Y	0.000	m	Yσ	0.000	m
Z	0.000	m	Zσ	0.000	m

Secondary Antenna (Optional)

X	0.000	m	Xσ	0.000	m
Y	0.000	m	Yσ	0.000	m
Z	0.000	m	Zσ	0.000	m

User (Optional)

X	0.000	m	Xσ	0.000	m
Y	0.000	m	Yσ	0.000	m
Z	0.000	m	Zσ	0.000	m

[Capture screenshot.](#)

Installation Rotation Offsets

The Installation Rotations are the differences in orientation between the IMU Body Frame (typically marked on the IMU enclosure) and the vehicle frame. In the vehicle frame, Z is always considered to be upwards, Y is

forward through the direction of travel, and X is to the right.



The order of rotations is Z-X-Y and all rotations are right handed.

In the **X**, **Y** and **Z** boxes, enter the rotations, in degrees, from the IMU Body Frame to the vehicle frame.

In the **Xσ**, **Yσ** and **Zσ** boxes, enter the rotation offset standard deviation. The standard deviation settings are optional.

Primary Antenna

The Primary Antenna offset is the three dimensional distance from the IMU to the primary GNSS antenna. The primary antenna offsets are required for all SPAN systems.

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the GNSS antenna phase center. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the IMU Body frame.

In the **Xσ**, **Yσ** and **Zσ** boxes, enter the offset standard deviation in metres.



The measurements for the offsets should be done as accurately as possible, preferably to within millimetres especially for RTK operation. Any error in the offsets will translate into an error in the INS position.



Large standard deviations can lead to an inaccurate position solution. Therefore, it is highly recommended to measure translation offsets as accurately as possible and to manually enter translation offset standard deviations that reflect that accuracy.

Secondary Antenna

If the SPAN system has a second GNSS antenna, set the *Secondary Antenna* offset parameters.

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the phase center of the secondary GNSS antenna. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the IMU Body frame.

In the **Xσ**, **Yσ** and **Zσ** boxes, enter the offset standard deviation in metres.

User

If the SPAN system has another device for which the relative location is needed by the SPAN system, set the *User* offset parameters.

In the **X**, **Y** and **Z** boxes, enter the distance, in metres, from the IMU center of navigation to the location of the device. The offsets are measured in three directions, X axis, Y axis and Z axis, relative to the IMU Body frame.

In the **Xσ**, **Yσ** and **Zσ** boxes, enter the offset standard deviation in metres. The standard deviation settings are optional.

2.5.7 Logging Configuration

Use the *Logging* configuration window to enable saving logs to the computer running NovAtel Application Suite. Only the logs configured to be output on the connected port are saved.

To enable logging to the NovAtel Application Suite computer:

1. Set the **Logging** option to on ()

2. Click **Browse**.

The Open Folder dialog box appears.

3. Navigate to the folder in which you want to store the logs.

4. Click **Select Folder**.

The *Logging* configuration window appears with the file name of the selected folder displayed.

5. Click **Apply** to start collecting logs.

To disable logging to the NovAtel Application Suite computer, set the **Logging** option to off ().

2.5.8 Details

The *Details* tile provides information about the receiver.

Hardware Version

Version of the PIM222A module.

Firmware Version

Version of the firmware loaded on the PIM222A module.

Boot Version

Version of the boot code loaded on the PIM222A module.

PSN

Product serial number for the PIM222A module.

Model Number

Model number of the module.

2.5.9 Update Firmware

Use the *Update* window to load new software onto the receiver.

Update Firmware

Update files have a ".hex" file extension.

Select File

[Browse](#)

Update Measurement Engine 1

Update files have a ".bin" file extension.

Select File

[Browse](#)

Update Measurement Engine 2

Update files have a ".bin" file extension.

Select File

[Browse](#)

[Need Help?](#) [Apply](#)



The new software must be copied onto the computer used to run NovAtel Application Suite before starting this procedure.

To load new software on the receiver:

1. Click the **Browse** button for the firmware component to be updated.
 - **Update Firmware** – updates the main PIM222A firmware.
 - **Update Measurement Engine 1** – updates the TeseoV Measurement Engine 1
 - **Update Measurement Engine 2** – updates the TeseoV Measurement Engine 2

The *Select File* dialog box appears.

2. Navigate to the folder in which the new software to load is stored and select the software file.

The selected file appears in the *File name* field.

3. Click the **Open** button.

The Update window appears with the name of the selected file in the *Select File* field.

4. Click the **Apply** button

After the new software is loaded, the receiver will restart.

2.5.10 *Terminal*

Use the *Terminal* window to send commands to the receiver and display any receiver acknowledgments and outputs.

To enter a command:

1. Enter the command and click **RETURN**.

Only the **Restart** and **Update_get/Updateget** commands can be sent to the PIM222A from the *Terminal* window.

To re-issue a command:

1. Use the Up and Down arrow keys on the keyboard to select the command to re-issue.
2. Press **ENTER**.

Three buttons are also available on the *Terminal* window.

Load

Click **Load** to load a list of commands from a file to the receiver and automatically execute those commands.

Save

Click **Save** to save the commands issued in the current session of the Terminal to a file.

Record

Click **Record** to begin recording all activity in the Terminal. Click again to stop recording. A prompt to Save the recording to a file displays.

2.6 G-III Reference Receiver

The computer running NovAtel Application Suite can connect to a G-III Reference Receiver using the Maintenance port, Data port or Monitor port. When connected to a G-III Reference Receiver, the tiles available on NovAtel Application Suite are different depending on which port the NovAtel Application Suite computer is connected to and the G-III Reference Receiver state.

Port	G-III Reference Receiver in Operating Mode	G-III Reference Receiver in Configuration Mode
Maintenance (serial port)	N/A	Configuration view
Data (Ethernet)	Operating view	Configuration view
Monitor (Ethernet)	Operating view except Terminal and Reset screens	N/A

2.6.1 Operating View

The Operating view is the default screen when the NovAtel Application Suite computer is connected to the Data port and the G-III Reference Receiver is in Operational mode. The Operating view is the only view available when the NovAtel Application Suite computer is connected to the Monitor port.

Summary Bar

On Operating view screens, the Summary bar provides the following status information about the G-III Reference Receiver.

Positioning

The *Positioning* status indicator shows the state of the Solutions tile status indicator.

Latitude

The *Latitude* field shows the latitude of the receiver in degrees.

Longitude

The *Longitude* field shows the longitude of the receiver in degrees.

Height

The *Height* field shows the ellipsoidal height of the receiver in metres.

Device

The *Device* status indicator shows the state of the Device tile status indicator.

Model

The *Model* field shows the receiver type.

Logging

The *Logging* field shows the status of logging to the local receiver.

Time (GPS)

The *Time (GPS)* field shows the current GPS week number and the number of milliseconds from the beginning of the GPS week.

State

The *State* field shows the G-III Reference Receiver state.

Status Window

The *Status* window has two tabs: *Positioning* and *Tracking*. The *Positioning* tab contains the *Solutions*, *Device*, *Satellite View*, *Logging* and *ACG* tiles. The *Tracking* tab contains the *Satellite Tracking* tile.

Solutions Tile

The *Solutions* tile shows the position and clock information for the G-III Reference Receiver.

Latitude

The latitude of the receiver position in degrees.

Longitude

The longitude of the receiver position in degrees.

Height

The ellipsoidal height of the receiver in metres.

Datum

The datum used by the receiver. The G-III Reference Receiver always uses WGS84.

Clock Model

The status of the clock model. This field can be Not Computed or Computed.

Clock Offset

The receiver clock offset in μs .

Clock Offset SD

The receiver clock offset standard deviation in μs .

Clock Drift

The receiver clock drift in $\mu\text{s/s}$.

Signal Type

The signal type from which the clock model was computed. This field can be GPS L1 C/A, Galileo E1 or Unknown (not computed).

Table 3: Solutions Tile Status Indicator

Indicator Color	Status
Red	<p><i>With a proper fix position:</i></p> <p>Clock model is not computed (receiver is not tracking enough satellites).</p> <p><i>Without proper fix position or an invalid fix position:</i></p> <p>A FIX POSITION is not entered in CONFIGURATION state and/or the clock model is not computed (receiver is not tracking enough satellites).</p>
Amber	The position is not fixed.
Green	The status of the clock model is <i>Computed</i> and the position is fixed.

Device Tile

The *Device* tile displays information about the G-III Reference Receiver.

State

The receiver operating state.

Mode

The receiver operating mode.

Software Attenuation

The software attenuator setting.

IOMaster – CPU Usage

The percentage of idle time available on the IOMaster card.

IOMaster – Temperature

The board temperature of the IOMaster card (°C).

DSPC – CPU Usage

The percentage of idle time available on the DSPC card.

DSPC – Temperature

The board temperature of the DSPC card (°C).

RFCC – Temperature

The board temperature of the RFCC card (°C).

RFDC – Temperature

The board temperature of the RFDC card (°C).

Table 4: Device Tile Status Indicators

Indicator	Indicator Color	Status
Overall	Red	At least one of the individual Device status indicators is red.
	Amber	At least one of the individual Device status indicators is amber and none are red.
	Green	All of the individual Device status indicators are green.
CPU	Red	CPU usage for the card is above or equal to 90%.
	Amber	CPU usage for the card is between 70% and 90%.
	Green	CPU usage for the card is less than 70%.
Temperature	Red	The temperature monitoring warning bit for the card is set.
	Green	The temperature monitoring warning bit for the card is not set.

Satellite View Tile

The *Satellite View* tile displays each satellite the receiver is tracking in graphical format. Concentric circles from 0° to 90° represent elevations from the horizon to directly overhead.

The satellites being tracked are represented with icons according to their satellite system. The PRN of the satellite tracked appears below the Satellite icon.

A legend on the Satellite View tile identifies the icon used for each GNSS system, the number of satellites used in the solution and the number of satellites tracked but not used.

To view information about a specific satellite, click on the Satellite icon. A pop up box displays PRN, azimuth, elevation and tracking information about the satellite.

Table 5: Satellite View Status Indicators

Indicator	Indicator Color	Status
Satellite Icon (PRNs)	Amber	The tracking status of the satellite is not <i>directedfpdll</i> or <i>pdll</i> .
	Green	The tracking status of the satellite is <i>directedfpdll</i> or <i>pdll</i> .
Satellite View Tile status indicator	Red	<p><i>With a proper fix position:</i></p> <p>Clock model is not computed (receiver is not tracking enough satellites).</p> <p><i>Without proper fix position or an invalid fix position:</i></p> <p>A FIX POSITION is not entered in CONFIGURATION state and/or the clock model is not computed (receiver is not tracking enough satellites).</p>
	Green	At least four PRNs have a status of green.

Logging Tile

The *Logging* tile displays the status of logging to the NovAtel Application Suite computer.

If logging to the NovAtel Application Suite computer is active, the log file name, log file size and the messages that are currently being logged are displayed.

The Logging tile status indicator is always green.

AGC Status Tile

The AGC tile displays the Automatic Gain Control (AGC) data for the G-III Reference Receiver.

The AGC data for a single DSPC card is displayed on the tile. To view the AGC information for another DSPC, click the button for the DSPC card to view. For example, to view the AGC data for DSPC2, click the **DSPC2** button.

To view additional AGC information, click the **View Frequency Information** link. A text box appears below the AGC graph with the following information.

AGC Word

The AGC status word.

Pulse Width

The VARF pulse width.

Modulus

The VARF modulus.

Noise Floor

The calculated noise floor.

% Pulses Blanked

The ratio of samples blanked over the previous second.

DC Offset

The A/D DC offset estimate (samples).

Active Flag

Indicates if the card is controlling the AGC for this frequency.

Bin Skew

Indicates if Bin Skew is present.

AGC Calibration

Indicates whether AGC calibration is Coarse or Fine.

ADC Range

Indicates which 3 bits of the 8-bit ADC output are currently being used by the receiver.

Noise Floor Calculation Method

Indicates whether the method of Noise Floor Calculation is AGC or Post Correlation.

Bin Count Overflow

A flag identifying when more than 1 bin was filled with 1023+ samples.

Rail Gain

A flag identifying when the VGA is railed high/low for 3+ consecutive seconds.




Bins Not Full

A flag identifying when all the bins contain 1 or more but less than 1023 samples.

Bins Empty

A flag identifying when all the bins are empty.

Table 6: AGC Status Tile Indicator

Indicator Color	Status
Red	<p>Either one of these conditions is met:</p> <ul style="list-style-type: none"> • AGC Pulse Width = 0 or 1000 • Railed Gain = 1 <p> The status indicator will be red if any of the RF paths meet one of the above conditions.</p>
Amber	<p>The conditions to be red are not met and one of these conditions is met:</p> <ul style="list-style-type: none"> • AGC Pulse Width is > 900 or AGC Pulse Width < 100 • Bin Skew = 1 • Bins Not Full = 1 • Bins Empty = 1 <p> The status indicator will be amber if none of the RF paths meet the criteria to be Red and at least one of the RF paths meet one of the conditions above.</p>
Green	<p>All of the following conditions are met:</p> <ul style="list-style-type: none"> • AGC Pulse Width <= 900 or AGC Pulse Width >= 100 • Bin Skew = 0 • Railed Gain = 0 • Bins Not Full = 0 • Bins Empty = 0 <p> The status indicator will be green only if all of the available RF paths meet the above conditions.</p>

To copy the AGC Status information to another application, click the **Copy to clipboard** link. The information can then be pasted into any application that can accept CSV formatted information.

Satellite Tracking Tile

The *Satellite Tracking* tile displays the carrier to noise ratio and lock time for the GNSS signals the receiver is tracking. This tile is on the *Tracking* page of the *Status* window.

Constellation

The graphs on the *Satellite Tracking* tile display tracking information from the satellites of a single constellation (e.g. GPS). The button of the constellation currently being viewed is dark. To change the constellation being viewed, click the button for the constellation.

Graphs

There are two graphs available on the *Satellite Tracking* tile: Carrier-to-Noise and Lock Time.

2.6.2 Carrier-to-Noise

To view the *Carrier-to-Noise* graph, click the **Carrier-to-noise** button.

The *Carrier-to-Noise* graph displays the current carrier-to-noise ratio values for all of the satellites (PRNs) being tracked for the currently selected constellation. A carrier-to-noise bar is shown for each of the frequencies available on the PRN. If there are no frequencies being tracked for the PRN, the text "no signal" is shown for the PRN. If there are more PRNs tracked than can be shown on the tile, a scroll bar appears at the bottom of the graph.

The status of the signal is indicated by the color of the carrier-to-noise bar.

Green	Good
Amber	Warning
Red	Poor

A legend for the carrier-to-noise status is shown on the right side of the graph. To hide or show the legend, click the arrow button on the legend.

2.6.3 Lock Time

To view the *Lock Time* graph, click the **Lock Time** button.

The *Lock Time* graph displays the number of seconds of continuous tracking for all of the satellites (PRNs) being tracked for the currently selected constellation. A lock time bar is shown for each of the frequencies available on the PRN. If there are no frequencies being tracked for the PRN, the text "no signal" is shown for the PRN. If there are more PRNs tracked than can be shown on the tile, a scroll bar appears at the bottom of the graph.

A legend for the lock time status is shown on the right side of the graph. To hide or show the legend, click the arrow button on the legend.

2.6.4 View Satellite Details

To view details about a specific satellite, hover the mouse pointer over one of the signals bars. A pop up window appears showing information for the frequencies tracked on that satellite. The signal the mouse pointer is over is highlighted.

The details pop up window is available on the *Carrier-to-Noise* graph and the *Lock Time* graph.

2.6.5 Show

Elevation Mask

When the **Elevation Mask** option is enabled, satellites below the configured elevation mask for the constellation have a gray bar at the top of the graph. The gray bar has the text "Below X Mask" where X is the elevation mask for the constellation.

When the **Elevation Mask** option is disabled, the gray bar is not shown.

Highest/Lowest Values

When the **Highest/Lowest Values** option is enabled, marks are added to each signal bar to indicate the highest and lowest Carrier to Noise values recorded in the last 30 seconds.

When the **Highest/Lowest Values** option is disabled, the highest and lowest marks are hidden.



The Highest/Lowest Values option is available only on the *Carrier to Noise* graph.

2.6.6 Sort By

The information on the *Satellite Tracking* graphs can be sort by PRN or satellite elevation.

PRN

Select this option to sort the graph by satellite PRN number in ascending order.

Elevation 0°>90°

Select this option to sort the graph by elevation angle starting with 0° (horizon).

Elevation 90°>0°

Select this option to sort the graph by elevation angle starting with 90° (directly overhead).

2.6.7 View all satellite information

To view the satellite tracking information for all of the satellites in a constellation:

1. Click the button for the constellation to view (e.g. GPS).
2. Click the **View all satellite information** link.

The *All satellite information* dialog box appears.

This dialog box shows the PRN, Elevation, Channel, Frequencies available, Carrier-to-Noise ratio and Lock Time for each satellite tracked from the selected constellation. It also shows the Elevation Mask set for the constellation.

3. To copy the satellite information to another application, click the **Copy to clipboard** link. The information can then be pasted into any application that can accept CSV formatted information.
4. When finished viewing the information, click the **Done** button to close the dialog box.

Table 7: Satellite Tracking Status Indicator

Indicator Color	Status
Red	<p><i>With a proper fix position:</i></p> <p>Clock model is not computed (receiver is not tracking enough satellites).</p> <p><i>Without proper fix position or an invalid fix position:</i></p> <p>A FIX POSITION is not entered in CONFIGURATION state and/or the clock model is not computed (receiver is not tracking enough satellites).</p>
Green	At least four PRNs have a status of green.

Details

To access the *Details* window, click the **Device** menu and then click **Details**.

Receiver Version Tile

The *Receiver Version* tile shows the version information of all of the cards in the G-III Reference Receiver.

Ethernet Status Tile

The *Ethernet Status* tile shows the Ethernet status of the ETHA (DATA) port.

Logging Configuration

The *Logging* window is used to configure the messages that are logged to the NovAtel Application Suite computer.

To access the *Logging* window, click the **Configuration** tab.



The *Configuration* tab is available only when the NovAtel Application Suite computer is connected to the DATA port on the G-III Reference Receiver.

If the G-III Reference Receiver is in Operational mode when the *Logging* window is accessed, a message appears at the top of the *Logging* window from which you can choose to change the G-III Reference Receiver to Configuration mode. If you click the **Restart** button, a Reset command is sent to receiver and after reset, Configuration Mode view is displayed.

To configure the logs to be saved to the computer running NovAtel Application Suite:

1. Click **Browse**.

The *Open Folder* dialog box appears.

2. Navigate to the folder in which you want to store the logs.

The default folder is: <Current User APPDATA>/Documents/Novatel Data/DataLogger/.

3. Click **Select Folder**.

The Logging configuration window appears with the path name of the selected folder displayed in the *Local File System* box.

4. In the **Message Sets** section, click the button for one of the message sets. The logs contained in the selected message set will be collected.
5. To add other logs, click the **Custom Messages** box and start typing the name of the log. A list of logs with names that start with the typed letters appears.

6. Click the name of the log to add it to the logs collected.

7. Repeat steps 5 and 6 for each log to add.

8. Click **Next**. A dialog box appears.

9. If you want to collect the logs with the current message settings, click **Start** to start collecting logs.

If you want to change the message settings for the logs, click **Edit**. The *Optional Settings* page appears.

10. Adjust the Optional Settings as required.

11. Click **Start** to start collecting logs.

Message Sets

The *Logging* window has several Message Sets. When a Message Set is selected, all of the logs in the set are added to the list of logs to save on the NovAtel Application Suite computer.

All Logs

This message set contains the following logs:

- AGCINFOB
- ALLSQMIB
- ALLSQMQB
- ALMANACB
- CARDSTATUSB
- CORRDATAB
- CORRLOCATIONB
- ETHSTATUSB
- EXCEPTIONDATAB
- MEASUREMENTDATAB
- RANGE
- RAWFRAMEDATAB
- RAWGPSSUBFRAMEWPB
- RAWWAASFRAMEWPB
- RXCOMMANDSB
- SATPOSB
- TIMESOLUTIONB
- VERSIONB

All (Legacy)

This message set contains the following logs:

- ALLSQMIB
- ALLSQMQB
- RANGE
- RAWGPSSUBFRAMEWPB
- RAWWAASFRAMEWPB

All (G-III)

This message set contains the following logs:

- AGCINFOB
- ALMANACB
- CARDSTATUSB
- CORRDATAB
- CORRLOCATIONB

- ETHSTATUSB
- EXCEPTIONDATAB
- MEASUREMENTDATAB
- RAWFRAMEDATAB
- RXCOMMANDSB
- SATPOSB
- TIMESOLUTIONB
- VERSIONB

G-III Standard

This message set contains the following logs:

- AGCINFOB
- ALMANACB
- CARDSTATUSB
- CORRDATAB
- CORRLOCATIONB
- ETHSTATUSB
- EXCEPTIONDATAB
- MEASUREMENTDATAB
- RAWFRAMEDATAB
- RXCOMMANDSB
- SATPOSB
- TIMESOLUTIONB
- VERSIONB

Measurement

This message set contains the following logs:

- ALLSQMIB
- ALLSQMQB
- CORRDATAB
- CORRLOCATIONB
- MEASUREMENTDATAB
- RANGE
- TIMESOLUTIONB

SQM

This message set contains the following logs:

- ALLSQMIB
- ALLSQMQB

- CORRDATAB
- CORRLOCATIONB

Satellite Navigation Data

This message set contains the following logs:

- ALMANACB
- RAWFRAMEDATAB
- RAWGPSSUBFRAMEWPB
- RAWWAASFRAMEWPB
- SATPOSB

Status

This message set contains the following logs:

- AGCINFOB
- CARDSTATUSB
- ETHSTATUSB
- EXCEPTIONDATAB
- RXCOMMANDSB
- VERSIONB

Playback

This message set contains the following logs:

- AGCINFOB
- CARDSTATUSB
- ETHSTATUSB
- MEASUREMENTDATAB
- RXCOMMANDSB
- SATPOSB
- TIMESOLUTIONB
- VERSIONB

Restart

To Restart the G-III Reference Receiver, click the **Device** menu and then click **Restart**.

The G-III Reference Receiver resets and then enters Configuration mode.



The Restart option is available only when the NovAtel Application Suite computer is connected to the Data port on the G-III Reference Receiver.

Terminal

Use the Terminal window to send commands to the G-III Reference Receiver and display any receiver acknowledgments and outputs.

To enter a command:

1. Type the command and press **ENTER**.

To re-issue a command:

1. Use the Up and Down arrow keys on the keyboard to select the command to re-issue.
2. Press **ENTER**.

When the G-III Reference Receiver is in Operational mode, an option is provided to switch to Configuration mode.

When the G-III Reference Receiver is in Configuration mode, an option is provided to switch to Operation mode.



The *Terminal* window is available only when the NovAtel Application Suite computer is connected to the Data port on the G-III Reference Receiver.

2.6.8 Configuration View

If the G-III Reference Receiver state is *Configuration* and the NovAtel Application Suite computer is connected to the Data port, the Configuration Mode view is the default view.



If the NovAtel Application Suite computer is connected to the Maintenance port, the Configuration Mode view is the default view irrespective of whether the receiver state is Operational or Configuration.



When connected to the Maintenance port, only the Receiver Version information on the Device window is available. All other data is shown as "NA".

The *Terminal* window is the default window in Configuration View. From this window you can send commands to the G-III Reference Receiver and display any receiver acknowledgments and outputs.

Also available in Configuration View are the

- *Logging* window – see *Logging Configuration* below
- *Details* window – see *Details* on page 132
- *Restart* option – see *Restart* on the previous page

Logging Configuration

The *Logging* window is used to configure the messages that are logged to the NovAtel Application Suite computer.

To access the *Logging* window, click the **Configuration** tab.

If the G-III Reference Receiver is in Operational mode when the *Logging* window is accessed, a message appears at the top of the *Logging* window from which you can choose to change the G-III Reference Receiver to Configuration mode. If you click the **Restart** button, a Reset command is sent to receiver and after reset, Configuration Mode view is displayed.

To configure the logs to be saved to the computer running NovAtel Application Suite:

1. Click **Browse**.

The *Open Folder* dialog box appears.

2. Navigate to the folder in which you want to store the logs.

The default folder is: <Current User APPDATA>/Documents/Novatel Data/DataLogger/.

3. Click **Select Folder**.

The Logging configuration window appears with the path name of the selected folder displayed in the *Local File System* box.

4. In the **Message Sets** section, click the button for one of the message sets. The logs contained in the selected message set will be collected.

5. Click **Next**. A dialog box appears.

6. If you want to collect the logs with the current message settings, click **Start** to start collecting logs.

If you want to change the message settings for the logs, click **Edit**. The *Optional Settings* page appears.

7. Adjust the Optional Settings as required.

8. Click **Start** to start collecting logs.

Message Sets

The *Logging* window has two Message Sets. When a Message Set is selected, all of the logs in the set are added to the list of logs to save on the NovAtel Application Suite computer.

None

No logs are selected to be saved. This is the default Message Set.

Troubleshooting

This message set contains the following logs:

- CARDSTATUSB
- ETHSTATUSB
- EXCEPTIONDATAB
- RXCOMMANDSB
- VERSIONB

Chapter 3 Playback


Playback allows you to view the information stored in a log file using the Playback interface.



To start viewing a log file, the file must be loaded into Playback. To load a file:

1. Click the **Open Playback File** button.

The New Playback dialog box opens.

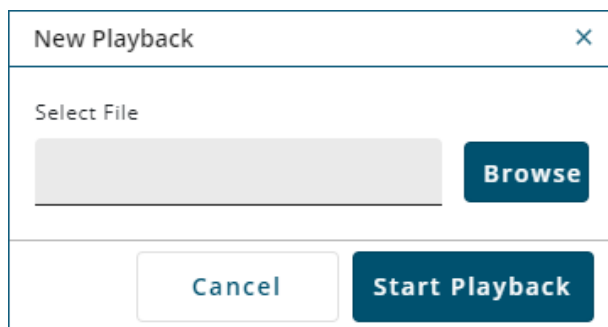

2. Click the **Browse** button.


The Open File dialog box appears.

3. Navigate to the folder that contains the log file to load and select the file.
4. Click the **Open** button.
5. Click the **Start Playback** button.

The Playback window changes to show the viewing window. See *View a File In Playback* on the next page.

3.1 Recent Playback Activity

If there are any recently accessed playback files, the Playback window changes to show the recent files.

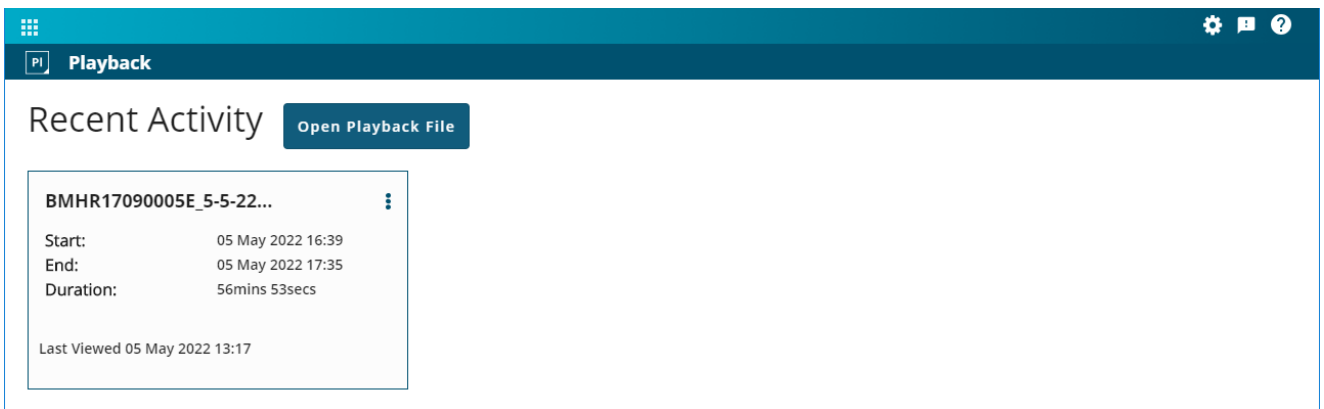


To open a recent playback file, click the icon for the playback file.

To open a playback file not shown, use the **Upload Playback File** button.

3.2 View a File In Playback

When a file is loaded, the Playback window changes to show the information stored in the loaded log file.

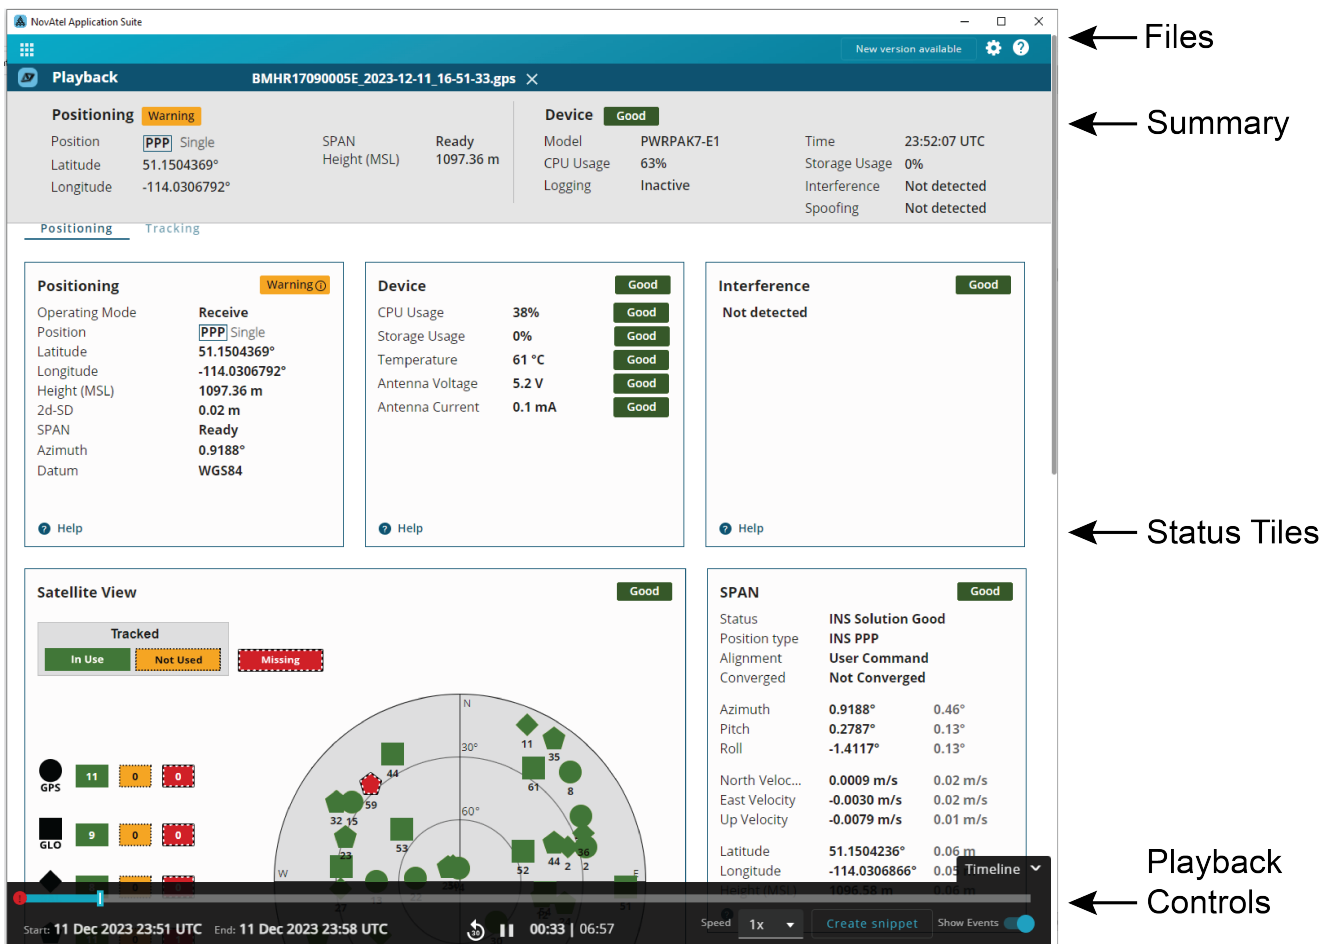

3.2.1 Files Bar

The *Files* bar appears at the top of the Playback window. This bar shows the file names of all of the log files currently loaded into Playback.

The log file that is currently being viewed is black. To view a different log file, click the tab on the Files bar for that log file.

To close a log file, click the **X** button on the log file tab.

3.2.2 Summary Bar

The Summary bar provides status information about the receiver. As the log file is played back, the information on the Summary bar changes to show the status of the receiver at the current point within the log file.

Status Indicator

A colored bar with text indicates the status of the summary information shown.

Color	Text	Description
Green	Good	The receiver is functioning and there are no warnings or errors.
Amber	Warning	The receiver is functioning, but there are one or more issues that may require attention.
Red	Error	An issue is preventing the receiver from functioning. The Error state will remain until the situation is resolved.

If the receiver has a warning or error, check the status tiles. An amber or red bar appears on the status tile where more information about the warning or error can be found.

Position

The *Position* field shows all of the positioning types configured on the receiver. The positioning type that is currently being used to calculate the position is highlighted in a box.

Latitude

The *Latitude* field shows the latitude of the calculated position in degrees.

Longitude

The *Longitude* field shows the longitude of the calculated position in degrees.

SPAN

The *SPAN* field shows the status of SPAN GNSS+INS technology.

Height

The *Height* field shows the height above mean sea level of the calculated position in metres.

Model

The *Model* field shows the receiver type.

CPU Usage

The *CPU Usage* field shows the amount of receiver computing (CPU) power currently being used.

Logging

The *Logging* field shows the status of logging to the receiver's internal memory.

Time

The *Time* field shows the current UTC time.

Storage Usage

The *Storage Usage* field shows the amount of receiver internal memory that has been used.

Interference

The *Interference* field indicates if the receiver has detected interference in the GNSS signal.

3.2.3 Status Tiles

The status tiles show the information that is stored in the log file. As a file is played back, the information on the status tiles changes to reflect the information at the current point in the log file.

For descriptions of the status information shown on the tiles, refer to the following:

- *Positioning Status* on page 53
- *Satellite View* on page 56
- *Ports Status* on page 57
- *Logging Status* on page 58
- *Device Status* on page 59
- *Interference Status* on page 59
- *ALIGN Status* on page 60
- *SPAN Status* on page 61
- *Radio Status* on page 65

The tiles available vary depending on the type of receiver and the software features enabled.


Each tile provides a color coded bar to indicate overall status of the information on that tile.

Color	Text	Description
Green	Good	The receiver is functioning and there are no warnings or errors.
Amber	Warning	The receiver is functioning, but there are one or more issues that may require attention.
Red	Error	An issue is preventing the receiver from functioning. The Error state will remain until the situation is resolved.
Gray	Off	The feature has been disabled or has not yet been configured.

3.2.4 Playback Controls

The controls for viewing a log file are at the bottom of the Playback window.

Viewing the Log File

To start viewing a log file, click the play button (). As the file is played back, the information on the Playback windows changes.

- The Summary bar shows the status information at the current point in the log file.
- The status tiles show position information at the current point in the log file
- The progress bar shows the current point in the file.
- The Date/Time field shows the time the information at the current point in the log file was collected.

The speed at which the file is played back can be changed. To change the playback speed, click the **Speed** drop menu and select a playback rate.

To pause playback, click the pause button (⏏).

To move back 30 seconds in the playback, click the replay button (⏮).

To replay a log file, click the replay button (🔄).

Events in the Log File


If an event occurred on the receiver while the Playback session was being collected, the event will be shown on the progress bar. Errors are shown as red dots, warnings are shown as amber dots and status messages are shown as white dots.

To view more information about an event, click on the event in the progress bar. A dialog box appears providing the event message and the time the event occurred.

Events on the progress bar can be shown or hidden. To show the events, set the **Show Events** option to on (☑). To hide the events, set the **Show Events** option to off (☐).

Show or Hide the Playback Controls

To show the full Playback controls, click the **Timeline** button.




To hide the Playback controls, click the **Timeline** button.

Save a Snippet

A snippet is a portion of the log file that is extracted and saved to a separate file. To save a snippet:

1. Click the **Create Snippet** button.

The snippet selection tool appears on the progress bar.

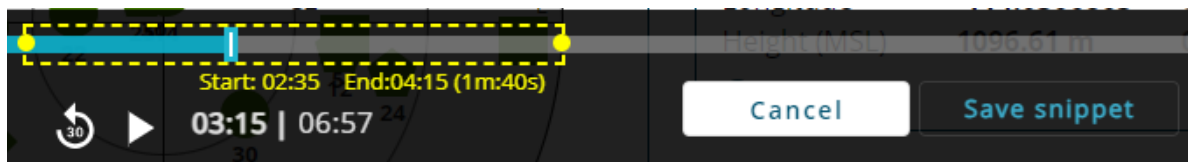

The amber box indicates the portion of the log file that will be saved.

2. Use the handles at the end of the snippet tool to adjust how much of the file will be included in the snippet.
3. Click the **Save Snippet** button.

The *Save Snippet* dialog box appears.

4. Navigate to the folder in which the snippet will be saved.
5. Enter a name for the snippet file in the *File name* box.
6. Click the **Save** button.
7. To save the file and view the newly created snippet in Playback, click the **Yes** button. The *New Playback* dialog box appears. Click the **Start Playback** button.

To save the file only, click the **No** button.

Chapter 4 Convert


The Convert tool is a graphic interface that converts NovAtel logs from one format to another.

For OEM7 receivers, Convert accepts ASCII, BINARY and ABBREVIATED ASCII formats and converts them to ASCII, BINARY, ABBREVIATED ASCII, RINEX or KML formats.

For G-III Reference Receivers, Convert accepts ASCII and BINARY formats and converts them to ASCII or RINEX format.

4.1 Start Convert

To start Convert, click the **Convert** icon on the *NovAtel Application Suite* main window. The Convert window displays.

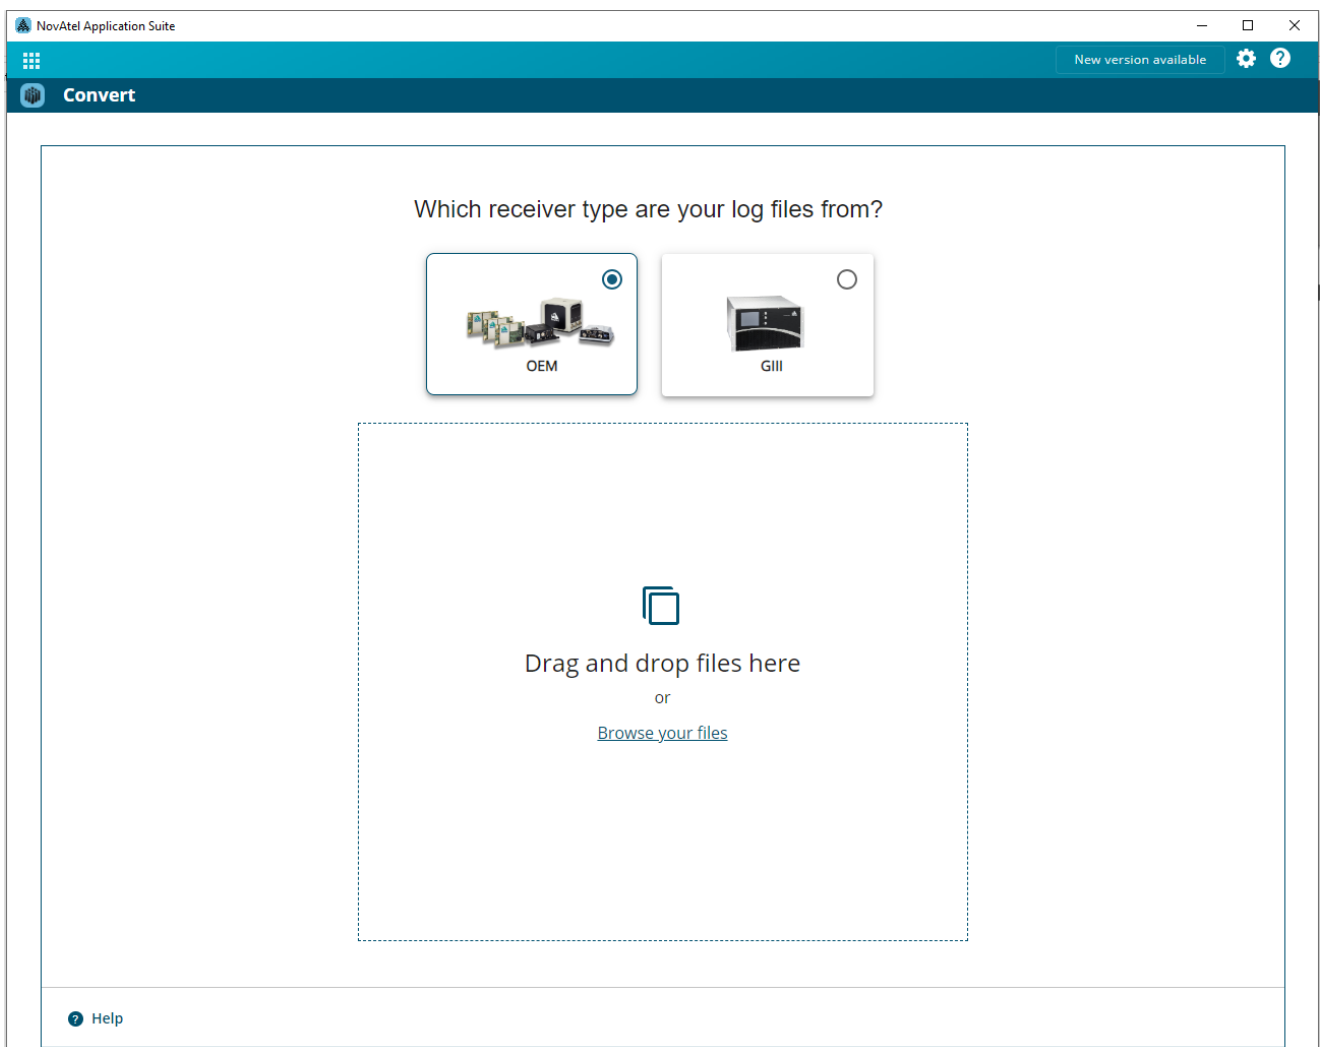

Files requiring conversion need to be opened in Convert, refer to *Open files in Convert* below for details.

4.2 Open files in Convert

Files can be opened in Convert using drag and drop or the *Browse your files* button.

To open files using drag and drop:

1. Select the type of receiver the logs are from.

Click **OEM** if the logs are from an OEM7 receiver.

Click **GIII** if the logs are from a G-III Reference Receiver.

2. Use Windows to navigate to the folder that contains the file or files to convert.
3. Drag and drop the files into the *Get Started* box on the Convert window.

The Convert window shows the number of files to be opened and the progress of the files being read.

To open files using the Browse your files button.

1. Select the type of receiver the logs are from.

Click **OEM** if the logs are from an OEM7 receiver.

Click **GIII** if the logs are from a G-III Reference Receiver.

2. Click the **Browse your files** button.
3. Navigate to the folder that contains the file or files to convert.
4. Select the file or files and click **Open**.

The Convert window shows the number of files to be opened and the progress of the files being read.

After the Convert opens the file or files, the *Output Settings* window displays.



Convert supports the following G-III Reference Receiver variants.


- WAAS G-III Reference Receiver
- IRIMS G-III Reference Receiver
- QZSS G-III Reference Receiver
- KASS G-III Reference Receiver
- EGNOS V3 RIMS Multi-Constellation Receiver
- KUS G-III Reference Receiver

4.2.1 Invalid files

When opening a file, Convert checks the contents of the file to ensure the file contains valid GNSS data. If a file contains information that is not valid GNSS data, it is considered an invalid file and Convert will not load the file.

If all of the files to be opened are invalid, Convert displays a message to indicate the files cannot be loaded. Check the files to see if they contain valid GNSS data and then try to open them again, or open different files.

If some of the files are valid and some are invalid, Convert displays the list of files to be opened and indicates which files are valid and which are invalid.

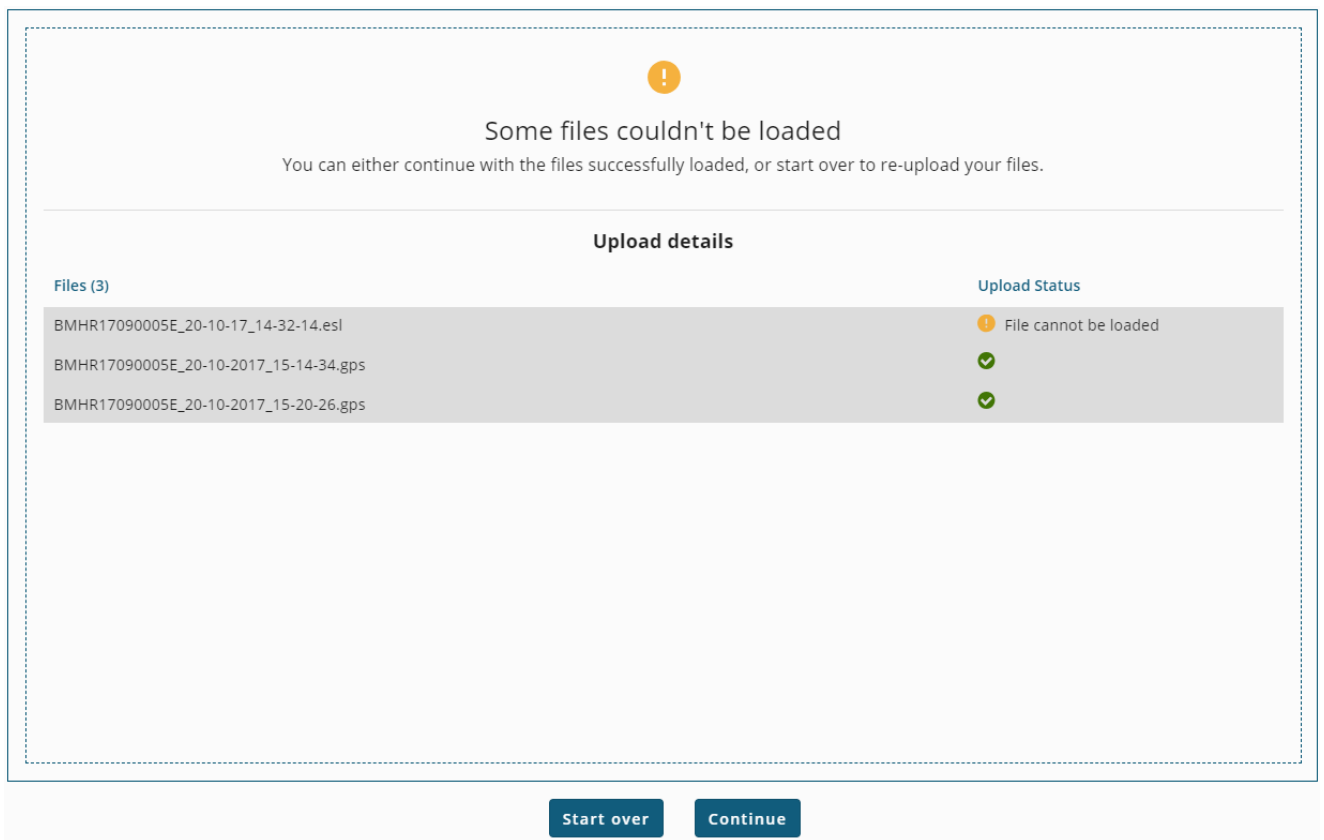

To open the files that are valid and exclude the invalid files, click the **Continue** button. The *Output Setting* window displays.

To stop opening the current list of files and try opening other files, click the **Start over** button.

4.3 Output Settings window

The *Output Settings* window displays information about the opened files and the messages (logs) contained within the opened files. From this window, the messages to convert are selected and the conversion parameters are configured.

File ready to convert | Name: BMHR17090005E_5-5-22_10-38-43.gps
Size: 55.74 MB

Output Settings

1. Messages
2. Format


Messages

Select all messages ☒

ASSIGNLBANDBEAM 682 instances	<input checked="" type="checkbox"/>	BDSECUTOFF 1 instances	<input checked="" type="checkbox"/>	BESTPOS 3413 instances	<input checked="" type="checkbox"/>
BESTSATS 682 instances	<input checked="" type="checkbox"/>	CHANCONFIGLIST 1 instances	<input checked="" type="checkbox"/>	CONNECTIMU 682 instances	<input checked="" type="checkbox"/>
ECUTOFF 1 instances	<input checked="" type="checkbox"/>	FILESTATUS 3413 instances	<input checked="" type="checkbox"/>	FILESYSTEMCAPACITY 3408 instances	<input checked="" type="checkbox"/>
GALECUTOFF 1 instances	<input checked="" type="checkbox"/>	GLOECUTOFF 1 instances	<input checked="" type="checkbox"/>	HWMONITOR 3412 instances	<input checked="" type="checkbox"/>
INSCOMMAND 1 instances	<input checked="" type="checkbox"/>	INSPVAX 3413 instances	<input checked="" type="checkbox"/>	INSPVAX 3413 instances	<input checked="" type="checkbox"/>
INTERFACEMODE 17732 instances	<input checked="" type="checkbox"/>	ITDETECTSTATUS 3413 instances	<input checked="" type="checkbox"/>	LOGLIST 3413 instances	<input checked="" type="checkbox"/>
MODELFEATURES 1 instances	<input checked="" type="checkbox"/>	NAVCECUTOFF 1 instances	<input checked="" type="checkbox"/>	NTRIPCONFIG 2046 instances	<input checked="" type="checkbox"/>
PORTSTATS 3413 instances	<input checked="" type="checkbox"/>	QZSSECUTOFF 1 instances	<input checked="" type="checkbox"/>	RXSTATUS 3413 instances	<input checked="" type="checkbox"/>
SATVIS2 4095 instances	<input checked="" type="checkbox"/>	SBASCONTROL 682 instances	<input checked="" type="checkbox"/>	SERIALCONFIG 3410 instances	<input checked="" type="checkbox"/>

Help
Start over
Next

If a single file was opened, the box at the top of the *Output Settings* window displays the file name and size of the file.

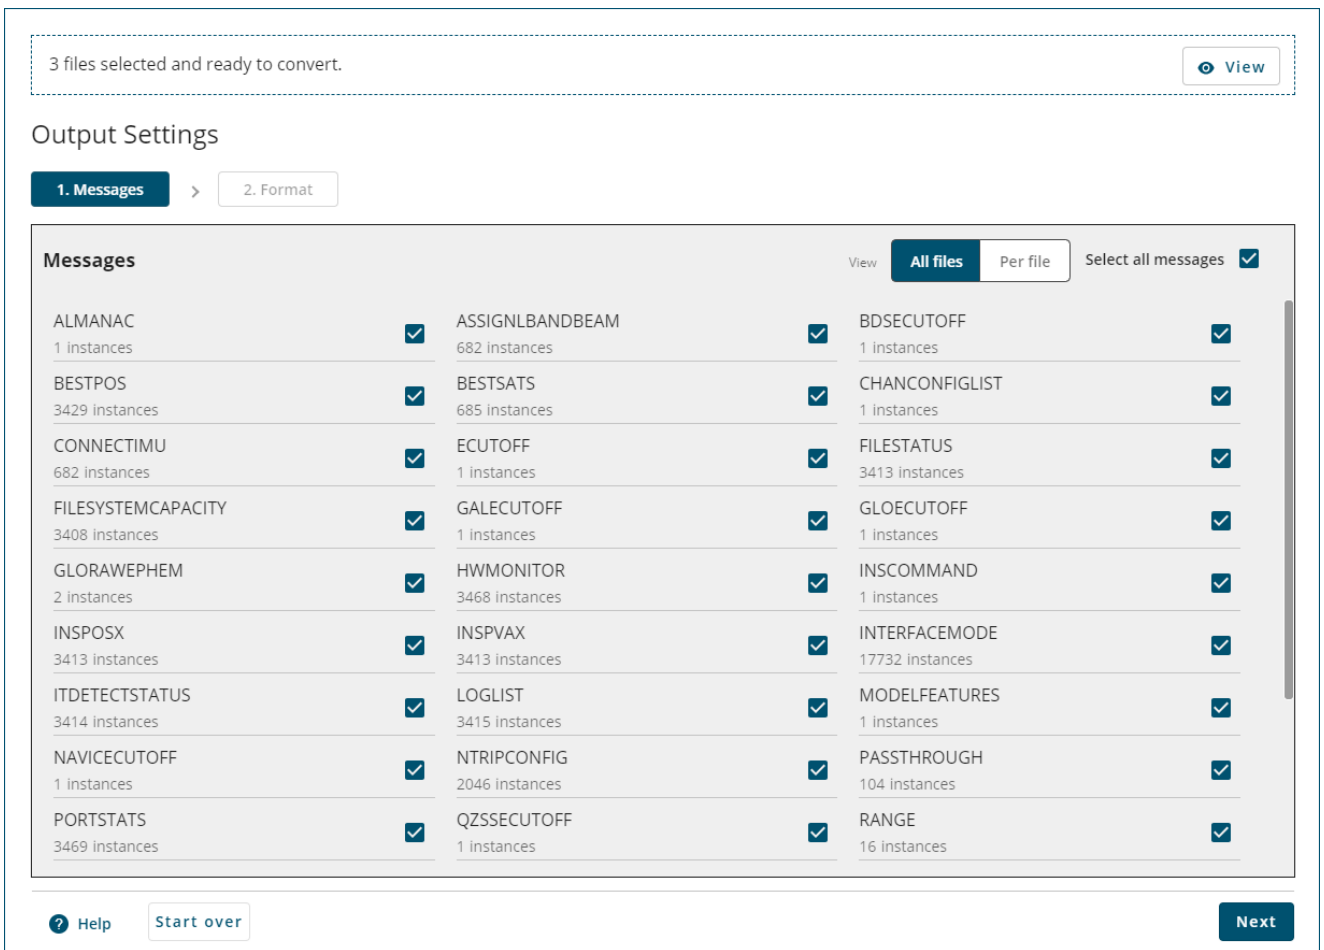

If multiple files were opened, the box at the top of the *Output Settings* window displays the number of files opened. To view the file name and size of all of the opened files, click the **View** button.

View files ×	
Files (3)	Size
BMHR17090005E_5-5-22_10-38-43.gps	55.74 MB
BMHR17090005E_5-5-22_10-37-10.gps	134.56 KB
BMHR17090005E_21-4-20_17-3-36.gps	4.17 MB
<div>Done</div>	

If you want to change the files opened, click the **Start over** button to return to the *Getting Started* window and select other files.

4.3.1 Output Settings – Messages

The *Messages* tab of the *Output Settings* window shows the logs available in the opened files.

3 files selected and ready to convert. View

Output Settings

1. Messages > 2. Format

Messages

View All files Per file

Select all messages ☒


ALMANAC 1 instances <input checked="" type="checkbox"/>	ASSIGNLBANDBEAM 682 instances <input checked="" type="checkbox"/>	BDSECUTOFF 1 instances <input checked="" type="checkbox"/>
BESTPOS 3429 instances <input checked="" type="checkbox"/>	BESTSATS 685 instances <input checked="" type="checkbox"/>	CHANCONFIGLIST 1 instances <input checked="" type="checkbox"/>
CONNECTIMU 682 instances <input checked="" type="checkbox"/>	ECUTOFF 1 instances <input checked="" type="checkbox"/>	FILESTATUS 3413 instances <input checked="" type="checkbox"/>
FILESYSTEMCAPACITY 3408 instances <input checked="" type="checkbox"/>	GALECUTOFF 1 instances <input checked="" type="checkbox"/>	GLOECUTOFF 1 instances <input checked="" type="checkbox"/>
GLORAWEPHEM 2 instances <input checked="" type="checkbox"/>	HWMONITOR 3468 instances <input checked="" type="checkbox"/>	INSCOMMAND 1 instances <input checked="" type="checkbox"/>
INSPVAX 3413 instances <input checked="" type="checkbox"/>	INSPVAX 3413 instances <input checked="" type="checkbox"/>	INTERFACEMODE 17732 instances <input checked="" type="checkbox"/>
ITDETECTSTATUS 3414 instances <input checked="" type="checkbox"/>	LOGLIST 3415 instances <input checked="" type="checkbox"/>	MODELFEATURES 1 instances <input checked="" type="checkbox"/>
NAVICECUTOFF 1 instances <input checked="" type="checkbox"/>	NTRIPCONFIG 2046 instances <input checked="" type="checkbox"/>	PASSTHROUGH 104 instances <input checked="" type="checkbox"/>
PORTSTATS 3469 instances <input checked="" type="checkbox"/>	QZSSECUTOFF 1 instances <input checked="" type="checkbox"/>	RANGE 16 instances <input checked="" type="checkbox"/>

? Help
Start over
Next

The **Messages** tab displays the name of each log found in the opened files. Below the name of each log is the number of times that log was found in the opened files.

When the check box beside the log name is selected (☒) , all of the logs with that name will be converted into the new format. When the check box beside the log name is cleared (☐) , none of the logs with that name will be converted into the new format. To select all of the logs in the opened files, select (☒) the **Select all message** option.

For RANGECMP, RANGECMP2, RANGECMP3 and RANGECMP4 logs, the log can be decompressed into the RANGE log format when the file is converted. To change the compression settings for these logs:

1. Click the Settings button ().
The **Message Settings** box opens.
2. Select the **Yes** option to decompress the log into a RANGE log format.
Select the **No** option to leave the log in its current compression format.
3. Click the **Apply** button.
The **Message Settings** box closes and the Decompression setting shown below the log name is updated to the new setting.



For the G-III Reference Receiver, only the following messages are supported: AGCINFOB, ALMANACB, CARDSTATUSB, CORRDATA, CORRLOCATIONB, ETHSTATUSB, EXCEPTIONDATA, FACTORYDATA, MEASUREMENTDATA, RAWFRAMEDATA, RXCOMMANDSB, SATPOSB, TIMESOLUTIONB, and VERSIONB.

Single file open

When a single file is open, the *Messages* tab shows all of the logs found in the file.

File ready to convert | Name: BMHR17090005E_5-5-22_10-38-43.gps
Size: 55.74 MB

Output Settings

1. Messages
2. Format

Messages

ASSIGNLBANDBEAM

682 instances

✓

BESTSATS

682 instances

✓

ECUTOFF

1 instances

✓

GALECUTOFF

1 instances

✓

INSCOMMAND

1 instances

✓

INTERFACEMODE

17732 instances

✓

MODELFEATURES

1 instances

✓

PORTSTATS

3413 instances

✓

SATVIS2

4095 instances

✓

BDSECUTOFF

1 instances

✓

CHANCONFIGLIST

1 instances

✓

FILESTATUS

3413 instances

✓

GLOECUTOFF

1 instances

✓

INSPOX

3413 instances

✓

ITDETECTSTATUS

3413 instances

✓

NAVCECUTOFF

1 instances

✓

QZSSECUTOFF

1 instances

✓

SBASCONTROL

682 instances

✓

BESTPOS

3413 instances

✓

CONNECTIMU

682 instances

✓

FILESYSTEMCAPACITY

3408 instances

✓

HWMONITOR

3412 instances

✓

INSPVAX

3413 instances

✓

LOGLIST

3413 instances

✓

NTRIPCONFIG

2046 instances

✓

RXSTATUS

3413 instances

✓

SERIALCONFIG

3410 instances

✓

Select all messages

✓

Help

Start over

Next

When the logs to be converted are selected, click the **Next** button. The *Format* tab displays.

Multiple files open

When multiple files are open, the *Messages* tab can be viewed in *All files* or *Per file* view.

To view the *Messages* tab in *All files* view, click the **All files** button.

NovAtel Application Suite User Manual v2.5

150

3 files selected and ready to convert. [View](#)

Output Settings

1. Messages > 2. Format

Messages

View **All files** Per file

Select all messages ☒

ALMANAC 1 instances	<input checked="" type="checkbox"/>	ASSIGNLBANDBEAM 682 instances	<input checked="" type="checkbox"/>	BDSECUTOFF 1 instances	<input checked="" type="checkbox"/>
BESTPOS 3429 instances	<input checked="" type="checkbox"/>	BESTSATS 685 instances	<input checked="" type="checkbox"/>	CHANCONFIGLIST 1 instances	<input checked="" type="checkbox"/>
CONNECTIMU 682 instances	<input checked="" type="checkbox"/>	ECUTOFF 1 instances	<input checked="" type="checkbox"/>	FILESTATUS 3413 instances	<input checked="" type="checkbox"/>
FILESYSTEMCAPACITY 3408 instances	<input checked="" type="checkbox"/>	GALECUTOFF 1 instances	<input checked="" type="checkbox"/>	GLOECUTOFF 1 instances	<input checked="" type="checkbox"/>
GLORAWEPHEM 2 instances	<input checked="" type="checkbox"/>	HWMONITOR 3468 instances	<input checked="" type="checkbox"/>	INSCOMMAND 1 instances	<input checked="" type="checkbox"/>
INSPSX 3413 instances	<input checked="" type="checkbox"/>	INSPVAX 3413 instances	<input checked="" type="checkbox"/>	INTERFACEMODE 17732 instances	<input checked="" type="checkbox"/>
ITDETECTSTATUS 3414 instances	<input checked="" type="checkbox"/>	LOGLIST 3415 instances	<input checked="" type="checkbox"/>	MODELFEATURES 1 instances	<input checked="" type="checkbox"/>
NAVISECUTOFF 1 instances	<input checked="" type="checkbox"/>	NTRIPCONFIG 2046 instances	<input checked="" type="checkbox"/>	PASSTHROUGH 104 instances	<input checked="" type="checkbox"/>
PORTSTATS 3469 instances	<input checked="" type="checkbox"/>	QZSSECUTOFF 1 instances	<input checked="" type="checkbox"/>	RANGE 16 instances	<input checked="" type="checkbox"/>

[? Help](#)
[Start over](#)
[Next](#)

In *All Files* view, the *Messages* tab shows the logs found in all of the files organized by log name. When a log is selected or cleared using the check box beside the log name, the selection applies to all instances of the logs in all of the source files.

To view the *Messages* tab in *Per file* view, click the **Per file** button.

2 files selected and ready to convert. View

Output Settings

1. Messages > 2. Format

Messages
View All files Per file
Select messages ▼

Files (2)

▼ BMHR17090005E_5-5-22_10-38-43.gps

ASSIGNLBANDBEAM 682 instances	<input checked="" type="checkbox"/>	BDSECUTOFF 1 instances	<input checked="" type="checkbox"/>	BESTPOS 3413 instances	<input checked="" type="checkbox"/>	BESTSATS 682 instances	<input checked="" type="checkbox"/>	CHANCONFIGLIST 1 instances	<input checked="" type="checkbox"/>
CONNECTIMU 682 instances	<input checked="" type="checkbox"/>	ECUTOFF 1 instances	<input checked="" type="checkbox"/>	FILESTATUS 3413 instances	<input checked="" type="checkbox"/>	FILESYSTEMCAPACITY 3408 instances	<input checked="" type="checkbox"/>	GALECUTOFF 1 instances	<input checked="" type="checkbox"/>
GLOECUTOFF 1 instances	<input checked="" type="checkbox"/>	HWMONITOR 3412 instances	<input checked="" type="checkbox"/>	INSCOMMAND 1 instances	<input checked="" type="checkbox"/>	INSPOSX 3413 instances	<input checked="" type="checkbox"/>	INSPVAX 3413 instances	<input checked="" type="checkbox"/>
INTERFACEMODE 17732 instances	<input checked="" type="checkbox"/>	ITDETECTSTATUS 3413 instances	<input checked="" type="checkbox"/>	LOGLIST 3413 instances	<input checked="" type="checkbox"/>	MODELFEATURES 1 instances	<input checked="" type="checkbox"/>	NAVSECUTOFF 1 instances	<input checked="" type="checkbox"/>
NTRIPCONFIG 2046 instances	<input checked="" type="checkbox"/>	PORTSTATS 3413 instances	<input checked="" type="checkbox"/>	QZSSECUTOFF 1 instances	<input checked="" type="checkbox"/>	RXSTATUS 3413 instances	<input checked="" type="checkbox"/>	SATVIS2 4095 instances	<input checked="" type="checkbox"/>
SBASCONTROL 682 instances	<input checked="" type="checkbox"/>	SERIALCONFIG 3410 instances	<input checked="" type="checkbox"/>	SKDETECTCONFIG 1 instances	<input checked="" type="checkbox"/>	TIME 3413 instances	<input checked="" type="checkbox"/>	TRACKSTAT 3413 instances	<input checked="" type="checkbox"/>
UNKNOWN 56 instances	<input checked="" type="checkbox"/>	VERSION 1 instances	<input checked="" type="checkbox"/>						

▼ BMHR17090005E_5-5-22_10-37-10.gps

ALMANAC 1 instances	<input checked="" type="checkbox"/>	BESTPOS 16 instances	<input checked="" type="checkbox"/>	BESTSATS 3 instances	<input checked="" type="checkbox"/>	GLORAWEPHEM 2 instances	<input checked="" type="checkbox"/>	HWMONITOR 2 instances	<input checked="" type="checkbox"/>
ITDETECTSTATUS 1 instances	<input checked="" type="checkbox"/>	LOGLIST 1 instances	<input checked="" type="checkbox"/>	PASSTHROUGH 104 instances	<input checked="" type="checkbox"/>	PORTSTATS 2 instances	<input checked="" type="checkbox"/>	RANGE 16 instances	<input checked="" type="checkbox"/>
RAWEPHEM 1 instances	<input checked="" type="checkbox"/>	RXSTATUS 1 instances	<input checked="" type="checkbox"/>	UNKNOWN 63 instances	<input checked="" type="checkbox"/>	VERSION 1 instances	<input checked="" type="checkbox"/>		

? Help
Start over
Next

In *Per file* view, the *Messages* tab shows the logs found organized by the file in which the log exists. In this view, a specific log name can appear several times on the *Messages* tab if it is found in more than one file. When a log is selected or cleared using the check box beside the log name, the selection applies only to the logs contained in the file in which the selection is made. This allows a log (for example, BESTPOS) in one file to be converted, while the same log in a different file is not converted.

To select or clear the check boxes for a log in all of the source files, use the **Select messages** drop menu.

When the logs to be converted are selected, click the **Next** button. The *Format* tab displays.

Notes

In the *Per file* view, the RANGE compression and decompression settings can also be set per file. When the compression and decompression settings are set per file, Convert provides a confirmation box to allow you to confirm or cancel the per file setting. If the per file settings are confirmed, the text **Set per file** is shown below the log name on the *Messages* tab.

If a message selection or RANGE compression setting is changed in the *All files* view after a per file setting is made, Convert provides a confirmation box to allow you to confirm or cancel the global setting.

4.3.2 Output Settings – Format

The *Format* tab provides access to the parameters used to convert the messages.

File ready to convert | Name: BMHR17090005E_2023-12-11_13-25-17.gps

Size: 4.51 MB

Output Settings

1. Messages

>

2. Format

Time Interval (Optional)

Start 11 Dec 2023 20:25:35 UTC | End 11 Dec 2023 20:39:13 UTC (Duration 00:13:38)

Format

ASCII

☐

Binary

☐

Abbreviated ASCII

☐

KML - Google Earth

☐

RINEX v2.1

☐

RINEX v3.01

☐

RINEX v3.02

☐

RINEX v3.03

☐

RINEX v3.04

☐

☐

Sample Rate

Example: 100 (Hz)

This will apply a single rate to all output files.

Unknown Data

☒ Separate file

☐ Interleave

This will separate the unknown bytes into a single separate file for each chosen output format.

Destination

☒ Source file folder

☐ Select folder

C:\Users\rmunro\Documents\NovAtelData\DataLogger

Prefix/Suffix (Optional)

Example: my-gps

This will be added to the output file name(s)

☒ Prefix

☐ Suffix

Help

Start over

Previous

Convert

2 files selected and ready to convert. [View](#)

Output Settings

1. Messages > 2. Format

Format

ASCII *	<input type="checkbox"/>	Binary *	<input type="checkbox"/>
Abbreviated ASCII *	<input type="checkbox"/>	KML - Google Earth *	<input type="checkbox"/>
RINEX v2.1 *	<input type="checkbox"/>	RINEX v3.01 *	<input type="checkbox"/>
RINEX v3.02 *	<input type="checkbox"/>	RINEX v3.03 *	<input type="checkbox"/>
RINEX v3.04 *	<input type="checkbox"/>		

Sample Rate

Example: 100 (Hz)

This will apply a single rate to all output files.

Unknown Data

☒ Separate file ☐ Interleave

This will separate the unknown bytes into a single separate file for each chosen output format.

Destination

☒ Source file folder ☐ Select folder

C:\Users\rmunro\Documents\NovAtelData\DataLogger

Prefix/Suffix (Optional)

Example: my-gps

This will be added to the output file name(s)

☒ Prefix ☐ Suffix

[Help](#) [Start over](#)
[Previous](#) [Convert](#)

Time interval

When a single file is loaded, the log information to convert can be filtered based on a time interval. To set the time period, use the handles on the slider to set the start and end times. As the sliders are moved, the Start or End times shown below the slider are updated. Only logs within the specified time period will be converted.



The Time Interval field is not available if there are multiple source files.

Format

In the *Format* box, select the checkboxes of the formats to which the logs will be converted.



The Convert button is disabled until at least one format is selected.



Conversion to KML format is not supported on all logs.

The following position logs can be converted to KML format: BESTPOS, MATCHEDPOS, RTKPOS, MARKPOS, MARK2POS, MARK3POS, MARK4POS, PSRPOS, PPPPOS, PDPPOS, ROVERPOS, BESTGNSSPOS, MASTERPOS and INSPOSX.

The following velocity log can be converted to KML format: BESTVEL.

File Splitting

If converting the logs to ASCII, BINARY, ABBREVIATED ASCII or KML - Google Earth format, the size of a log file converted can be managed by splitting the output file based on file size, log type or time.

To split the output file:

1. Click the Settings button (⚙️) beside the selected format to which the logs are being converted.
The *Format Settings* dialog box displays.
2. Select the **Enable File Splitting** checkbox.
3. Select the method by which the output file will be split.
 - Select **Logs** to create a separate file for each log type converted. Each output file is appended with the name of the log.
 - Select **Size** and enter the maximum file size of the converted output file (in MBs) to split the output files by file size.
If the maximum size is reached, Convert will create multiple output files when converting the log file. A suffix (" _Part1", " _Part2", etc.) is added to the name of the output files to indicate the order of the files.
 - Select **Daily (UTC)** to create a separate file for each day. The date is added to the name of the output files.
 - Select **Time** and enter the maximum time length (in seconds) to split the output files by time.
If the length of the file exceeds the time entered, Convert will create multiple output files when converting the log file. A suffix (" _Part1", " _Part2", etc.) is added to the name of the output files to indicate the order of the files.
4. Click the **Apply** button.

RINEX Settings

If converting the logs to one of the RINEX formats, the file settings for the output file can be configured.

To configure the RINEX file settings:

1. Click the Setting button (⚙️) beside the RINEX format to which the logs are being converted.
The *Format Settings* dialog box displays.
2. To configure Convert to create the resulting RINEX output files as kinematic when converting from other formats, select the **Force kinematic data flag** checkbox.



The *Force kinematic data flag*, *Use Hatanaka compression* and *UTC Offset* checkboxes are not available for G-III Reference Receivers.

3. To enable Hatanaka compression of the output files, select the **Use Hatanaka compression** checkbox.
4. To configure the UTC offset from GPS, click the **UTC Offset** field and enter the UTC time offset.
5. To add comments to the RINEX header, select the text boxes in the *Header Information* box and enter the information in the text boxes.
6. Click the **Apply** button.

Sample rate

The number of logs to be converted can be reduced by specifying a sample period that is less than the measurement rate recorded in the input file. For example, if RANGE data is logged at 100 Hz (logged every 0.01 s), it means that there are 100 RANGE logs every second. Specifying a sample rate of 2 Hz, means that only the data at every half second (i.e. 2 logs a second) is converted, thereby reducing the number of RANGE logs in the converted file.

To enter a sample rate, click the *Sample Rate* and enter a value in Hertz.

If no value is entered, no data sampling is done and all of the selected logs are converted.



The specified sample rate is applied to all of the logs being converted.

Unknown data

Select one of the Unknown Data options to determine how Convert manages any information in the file that is not recognized as a log.

Interleave	Information not recognized as a log is included in the file and labeled UNKNOWN.
Separate file	Information not recognized as a log is stored in a separate output file.



The Unknown Data options are enabled only if the log file has unknown data selected.

Destination

The *Destination* parameters determine the folder in which the converted files are stored.

Source file folder

Select this option to save the converted files in the same folder as the input files. The converted files will be saved in the following folder structure:

```
InputFile/Source/TimeStamp/Format/FileName
```

where:

`InputFile` = the folder in which the input files are stored

`Source` = the name of source file being converted

`TimeStamp` = the date and time when the file was converted

`Format` = the data format the file was converted to (ASCII, BINARY, ABBREV, KML or RINEX)

`FileName` = the file name of the converted data with the extension *ascii*, *binary*, *abbrev* or *rinex* depending on the format.

Select folder

Select this option to save the converted files in the folder specified in the text box. To specify the folder, click the search icon and select the folder from the dialog box.

The converted files will be saved in the following folder structure:

`SelectedFolder/Source/TimeStamp/Format/FileName`

where:

`SelectedFolder` = the folder specified in the text box

`Source` = the name of source file being converted

`TimeStamp` = the date and time when the file was converted

`Format` = the data format the file was converted to (ASCII, BINARY, ABBREV ASCII, KML or RINEX)

`FileName` = the file name of the converted data with the extension *ascii*, *binary*, *abbrev* or *rinex* depending on the format.



ABBREV = Abbreviated ASCII.

Prefix/Suffix

Use the *Prefix/Suffix* parameters to add a string to the output file name.


To add a prefix or suffix:

1. Click the text box and enter the text to add to the file name.
2. Select the **Prefix** option to add the text to the start of the file name.
Select the **Suffix** option to add the text to the end of the file name.

When the Format parameters have been set, click the **Convert** button to start converting the files.

4.4 Conversion Results

The *Conversion Results* window provides information about the status of the file conversion.

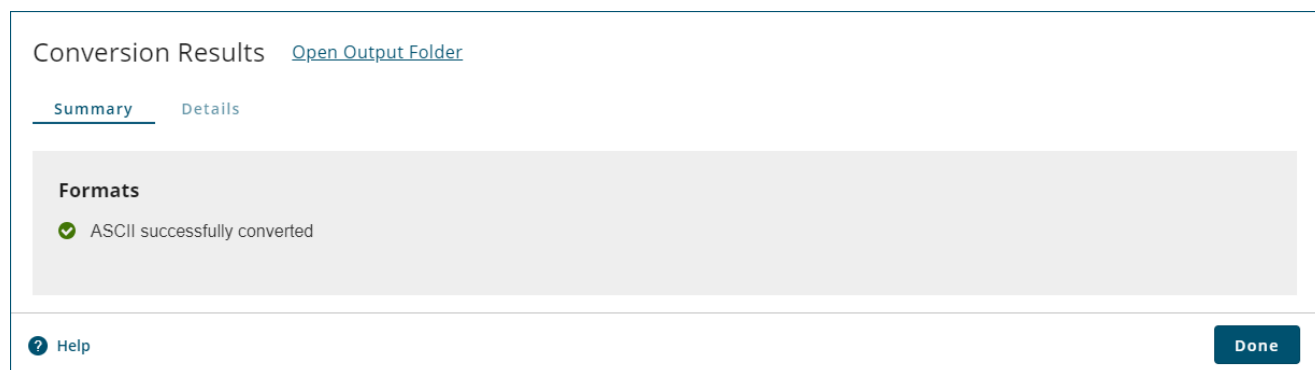

Conversion Results
[Open Output Folder](#)

Summary
Details

Time interval

Logs were converted within the following time range from the input file:

GNSS: 1966, 318950.486 Start 1966, 318950.486 | End 1966, 322551.205 1966, 322551.205

UTC: 13 Sep 2017 16:35:50 Start 13 Sep 2017 16:35:50 | End 13 Sep 2017 17:35:51 (Duration 01:00:01) 13 Sep 2017 17:35:51

Formats

✓ ASCII successfully converted

[? Help](#)
[Done](#)

To view the conversion results, click **Open Output Folder**.

Time Interval

The *Time Interval* tile shows the portion of the file that was converted based on the time interval settings configured in the *Output Settings* window.

This tile is only available when a single file is converted.

Formats

The *Formats* tile shows the conversion status of the formats that were selected to be converted.

If a format was not fully converted, the messages not converted are shown.

Conversion Details

To view the conversion details, click the **Details** tab.

Conversion Results
[Open Output Folder](#)

Summary

Details

Conversion details

View

All files

Per file

Messages(8)	Source Count	Converted Count	Conversion Status
> BESTPOS	10774	10774	✓
> GLOEPHEMERIS	54	54	✓
> GLORAWEPHEM	54	54	✓
> RANGE	10776	10776	✓
> RANGECMP	107888	107888	✓
> RAWEPHEM	16	16	✓
> RAWIMU	1349084	1349084	✓
> VERSION	1	1	✓

Help

Done

The *Details* tile provides more information about the messages converted.

Messages	<p>The <i>Messages</i> column shows the name of the message (log).</p> <p>When there are multiple source files, clicking the arrow (>) beside the message name opens a drop list below the message. This drop list shows the source files in which the messages were found and provides <i>Source Count</i>, <i>Converted Count</i> and <i>Status</i> for the messages found in each source file.</p>
Source Count	The <i>Source Count</i> column shows the number of messages found in the source file or files.
Converted Count	The <i>Converted Count</i> column shows the number of messages that were successfully converted.
Conversion Status	The <i>Conversion Status</i> column shows the overall status of the conversion for the message.

When the **Per file** button is selected, the *Conversion details* tab provides the following information.

Files	The <i>Files</i> column shows the name of the source file.
Conversion Status	The <i>Conversion Status</i> column shows the status of the conversion for the source file.

When you have finished reviewing the conversion results, click the **Done** button. The *Get started* window displays.

4.5 Convert command line interface

The Convert Command Line Interface (CLI) supports the same conversions and filters as the Convert user interface.

The Convert CLI should be run from the location where NovAtel Application Suite is installed. For example, *C:\Program Files\NovAtel Inc\NovAtel Application Suite>NovAtelApplicationSuite.exe --help*.

4.5.1 CLI options

Option	Description
-h, --help	Outputs a help message for Convert CLI.
-f, --format= [FORMAT]	Convert logs to FORMAT (ASCII BINARY ABBREV RINEX* KML). ASCII is the default conversion format.
--receiver-type= [TYPE]	Receiver type of the log files (OEM GIII). OEM is the default receiver type.
-a, --asc, --ascii	Shortcut for -f=ascii.
-b, --bin, --binary	Shortcut for -f=binary.
--abbrev	Shortcut for -f=abbrev
-k, --kml	Shortcut for -f=kml.
-r, --rin, --rinex, -r3.04, --rin3.04, --rinex3.04	Shortcut for -f=rinex3.04.
-r3.03, --rin3.03, --rinex3.03	Shortcut for -f=rinex3.03.
-r3.02, --rin3.02, --rinex3.02	Shortcut for -f=rinex3.02.
-r3.01, --rin3.01, --rinex3.01	Shortcut for -f=rinex3.01.
-r2.1, --rin2.1, --rinex2.1	Shortcut for -f=rinex2.1.
-c, --convert=[comma-separated list of MESSAGE IDs or MESSAGE ID ranges]	Convert only the MESSAGE logs listed in this command. MESSAGE can be a log number or log name. By default, all logs are converted. E.g., -c=RANGE,BESTPOS,RTKPOS
-e, --exclude=[comma-separated list of MESSAGE IDs or MESSAGE ID ranges]	Do not convert the MESSAGE logs listed in this command. All other logs will be converted. MESSAGE can be a log number or log name. E.g., -e=RAWSBASFRAME,RANGECMP,GPSEPHEM

4.5.2 Output path

Option	Description
-o, --output=[PATH]	<p>Use PATH for output.</p> <p>PATH is the path to the directory used to store the output files.</p> <p>If not specified, the output files will be located in the same directory as the input files.</p> <p>The output files will have the following folder structure:</p> <pre>Source/TimeStamp/Format/FileName</pre> <p>where:</p> <p>Source = the name of source file being converted</p> <p>TimeStamp = the date and time when the file was converted</p> <p>Format = the data format the file was converted to (ASCII, BINARY, ABBREV, KML or RINEX)</p> <p>FileName = the file name of the converted data with the extension <i>ascii</i>, <i>binary</i>, <i>abbrev</i> or <i>rinex</i> depending on the format.</p>
--dd	Automatically create a directory named after input file name and write the output files to it.
--md	Put the output files in <output file title>/convert
--dm	Put the output files in convert/<output file title>

4.5.3 Split

Option	Description
--split	Divide the output file into N files, one for each log type. The files extensions will be the file name _log names.
-l=, --limit-output-size=[SIZE (MB)]	Limit the size of the output file to SIZE . If the size is exceeded, multiple output files will be produced.
--limit-output-duration=[time(Secs)]	Limit the size of the output file to time . From the start of the file, the logs till the time duration (for example, 3600 seconds (1 hour)) will be output to one output file and the next duration (3600 seconds (1 hour)) to the next output file and so on.
--daily-utc	Converts the log data on a 24 hours basis, which uses the UTC time zone.

4.5.4 Time windowing

Option	Description
--start-time=<WEEK>,<SECONDS>	Convert logs after the start time. If WEEK is 0 or not given, then the week of the first log will be used.

Option	Description
--finish-time=<WEEK>,<SECONDS>	Convert logs up to the finish time. If WEEK is 0 or not given, then the week of the first log will be used.
--limit-duration=[SECONDS]	Convert only SECONDS of data from start time, or from start of file if no start time is given.

4.5.5 Log conversion

Option	Description
--expand-cmp	Expand RANGECMP* logs to RANGE logs. The default is do not expand RANGECMP* logs to RANGE logs.
--unknown-bytes=[file interleave ignore]	Dump the unknown bytes to a separate file, interleave them in the output, or ignore them altogether.
--forcekinematicdataflag	Include the kinematic information for conversion.

4.5.6 Sampling

Option	Description
--decimate=[INTERVAL (Secs)]	Decimate logs that occur at INTERVAL . INTERVAL must be an integer value that will align with the logging interval of the given MESSAGE or All logs. <i>Example 1:</i> NovAtelApplicationSuite --decimate=5 (output BESTPOS logs at 5 second intervals) <i>Example 2:</i> NovAtelApplicationSuite -c=42 --decimate=42,30 (filter output to only contain BESTPOS(42) logs at 30 second intervals)


Chapter 5 GRIT Monitor

GRIT Monitor provides easy access to the GRIT features available on NovAtel OEM7 receivers. With GRIT Monitor you can monitor jamming, interference or spoofing and mitigate interference allowing the receiver to maintain robust positioning.

GRIT Monitor runs on a Windows® 10/11 or Linux (Ubuntu 20.04 +) based computer and communicates to the receiver using a serial, USB or Ethernet connection.

5.1 Devices Window

Before a GRIT Monitor session can be started with a receiver, a Device must be added for the receiver on the *Devices* window. A Device contains the connection type and communication parameters used to communicate with a receiver.

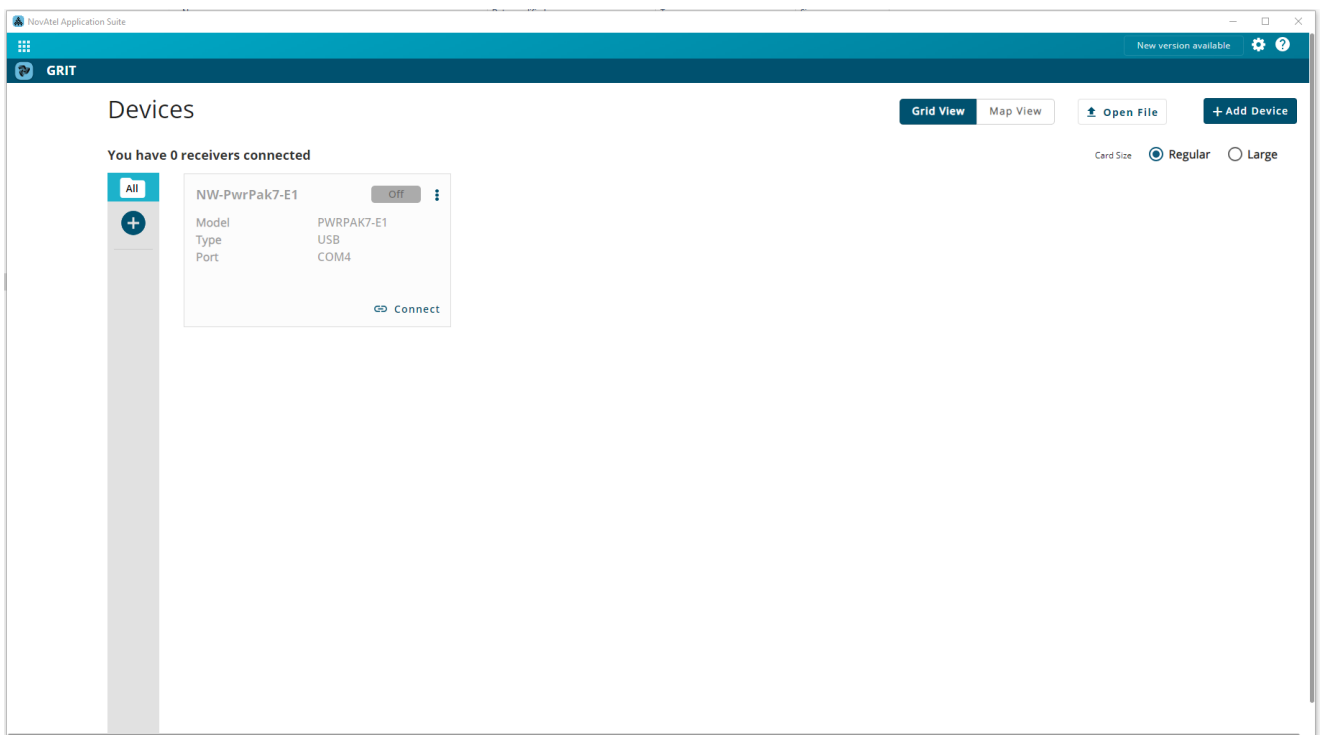

The Devices window contains all of the Devices defined in GRIT Monitor. From this window, Devices can be added, edited and deleted. The Devices are used to start a connection with the receiver and open the GRIT Monitor window for the receiver.



The Devices in GRIT Monitor are synchronized with the Devices in Manage. If a Device is added, changed or removed in Manage, the addition, change or deletion is also made in GRIT Monitor.


The Devices can be viewed in Grid View or Map View.

Grid View is the default view for the *Devices* window. In *Grid View*, the each Device is represented by a card. These cards can be viewed as regular or large cards.

To view regular cards, select the **Regular** option.




To view large cards, select the **Large** option.

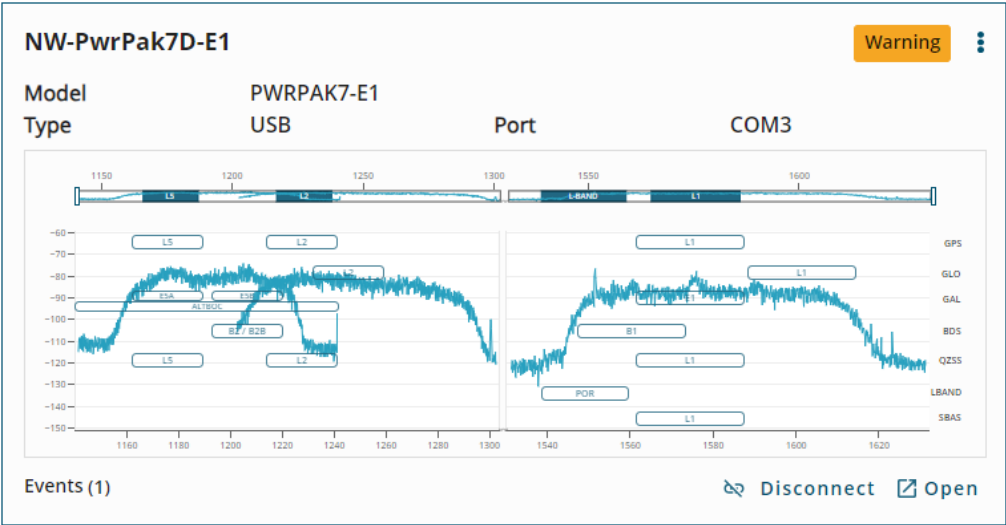

When GRIT Monitor does not have a connection to the receiver, both the regular and large cards show the communication name given to the receiver, the type of receiver (**Model**), the communication method used (**Type**), the COM port used (**Port**), the **Connect** button and the menu button. If the connection Type is Network, both cards show the IP address of the receiver (**IP Address**) and the network port used (**Port**).

When GRIT Monitor has a connection to the receiver, the **Connect** button is removed and the receiver status, current number of events on the receiver, **Disconnect** button and **Open** button are added. On the large card, a small version of the Spectrum Viewer (see *Spectrum Viewer* on page 179) is also added.

To display the *Map View* of the *Devices* window, click the **Map View** button.

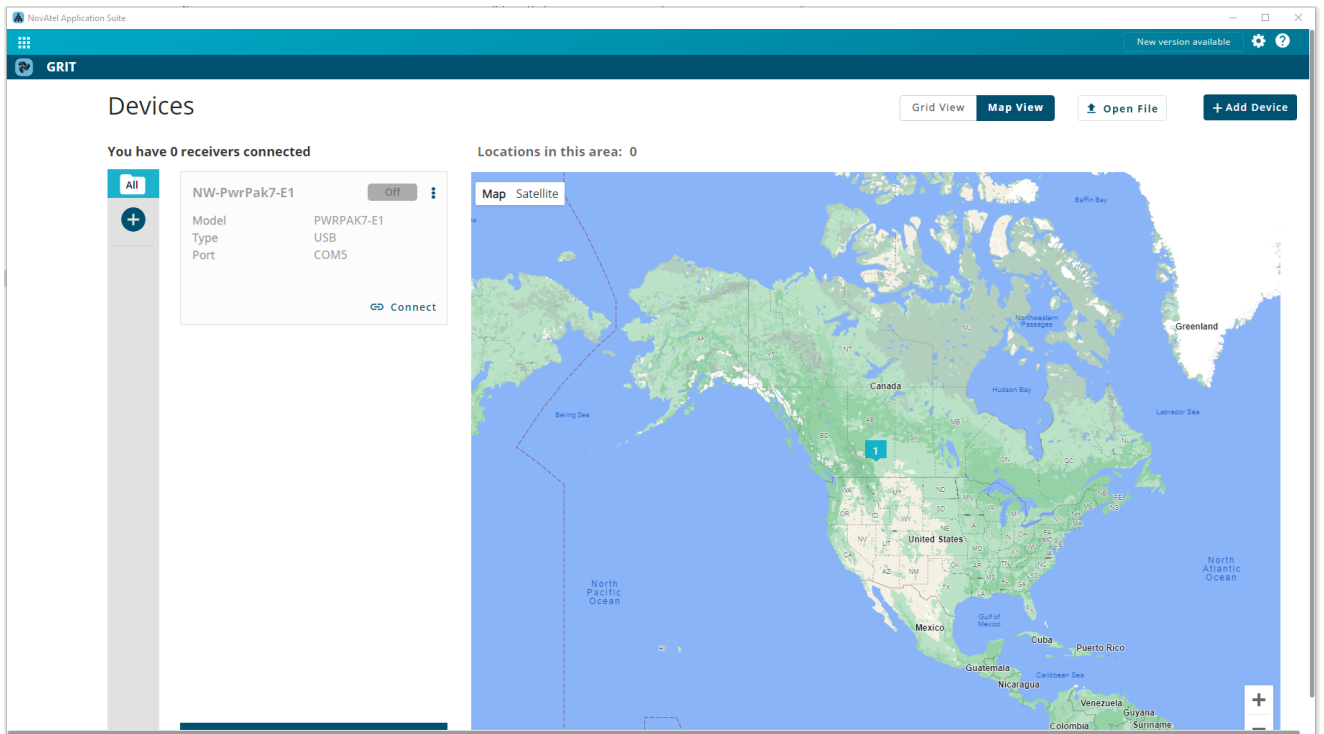

In the Map view, the Devices are shown as flags on the map and cards in the left column.

On the map, there is a flag for each Device added to GRIT. When GRIT Monitor is connected to the Device, the map shows the current position of the device. When the Device is disconnected, the flag shows the last known position of the Device. When the mouse pointer is hovered over a flag, a tooltip appears showing the latitude and longitude of the Device.



When a new Device is added, a flag is not added to the map until a connection is made to the Device and a position is known.

To change what is visible on the map:

- Click the **Satellite** button to change the map to show the satellite view.
- Click the **Map** button to change the display to show the map view.
- Click the **+** button to zoom the map in.
- Click the **-** button to zoom the map view out.
- Click and drag on the map to change the portion of the map that is visible.

For each Device visible in the current view of the map, a card representing the Device appears in the right column. This card shows the Device name, status, **Connect** button and menu button. When connected to the receiver, the **Connect** button is removed and the number of current Events, **Disconnect** button and **Open** button are added.



When a flag is clicked on the map, the flag is highlighted and the card associated with the Device expands to show the same information available on the Grid view of the *Devices* window.




5.1.1 Add a Device – Serial Connection

This type of Device is used for a receiver that is connected to the GRIT Monitor computer using a serial (COM) port.

1. Click the **Add Device** button.

The New Connection dialog box opens.

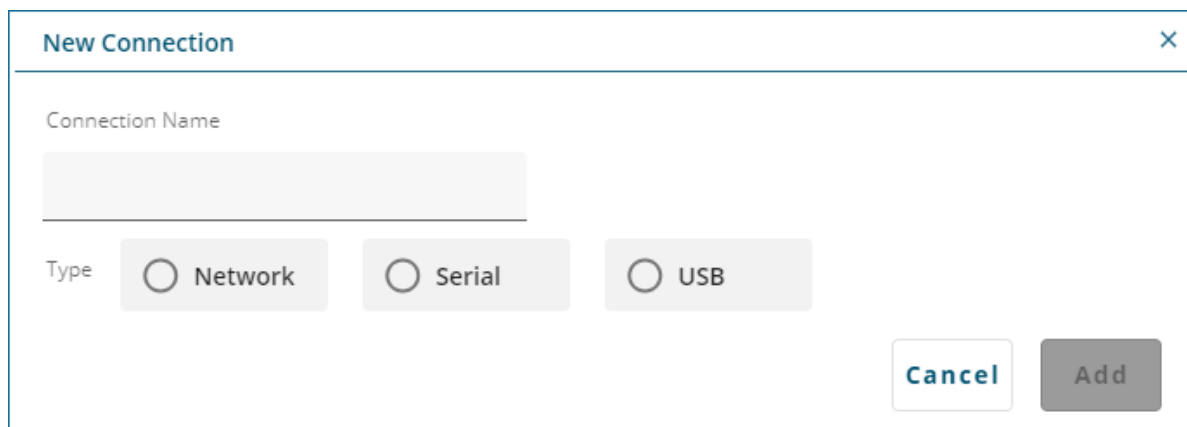

2. In the *Connection Name* box, enter a name for the Device.

This name is used to identify this Device on the *Devices* window and on the *Dashboard* window.

3. Click the **Serial** button.

The *New Connection* dialog box expands to show the serial connection parameters.

4. Click the **Port** drop menu and select the COM port the computer uses to connect to the receiver.
5. Click the **Baud Rate** drop menu and select the baud rate used to communicate with the receiver.
If *Auto* is selected, GRIT Monitor will establish a connection at the highest baud rate available.



Baud rates higher than 115,200 bps are not supported by standard PC hardware. Special PC hardware may be required for higher rates, including 230400 bps and 460800 bps.

6. Use the **Passive** option to enable or disable Passive mode. Passive mode is used to avoid disruptions to logging or port configurations.

If the **Passive** option is selected, GRIT Monitor attempts to communicate with the receiver at the specified baud rate. The baud rate selected must match the baud rate configured on the receiver COM port. The AUTO baud rate option can not be used when Passive is enabled.

If the **Passive** option is cleared, signal breaks are sent over the COM port and the receiver is configured to communicate at the specified baud rate. If Passive is disabled, all previously requested logs on that port will be stopped

7. Use the **Hardware Handshake** option to enable or disable hardware handshaking.

If the **Hardware Handshake** option is selected, the computer will use the CTS and RTS hardware signals to control data flow.

If the **Hardware Handshake** option is cleared, the computer does not use the CTS and RTS signals.



Not all receiver ports support the CTS and RTS signals. Do not enable hardware handshaking unless the receiver port supports CTS and RTS and handshaking is enabled on the receiver port.

8. Click the **Add** button.


A new Device labeled with the name entered in the *Connection Name* box is added to the *Devices* window.

5.1.2 Add a Device – USB Connection

This type of Device is used for a receiver connected to the GRIT Monitor computer using a USB port.

1. Click the **Add Device** button.

The *New Connection* dialog box opens.

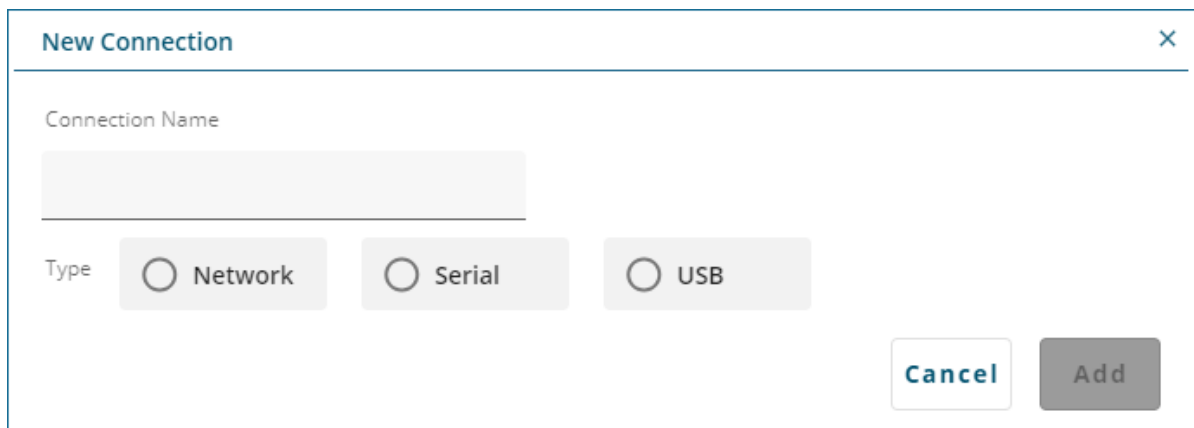

The *New Connection* dialog box is shown. It has a title bar with the text "New Connection" and a close button (X). Inside the dialog, there is a text input field labeled "Connection Name". Below this, there is a "Type" label followed by three radio button options: "Network", "Serial", and "USB". At the bottom right of the dialog, there are two buttons: "Cancel" and "Add".

2. In the *Connection Name* box, enter a name for the Device.

This name is used to identify this Device on the *Devices* window and on the *Dashboard* window.

3. Click the **USB** button.

The *New Connection* dialog box expands to show the USB parameters.

New Connection [X]

Connection Name
PwrPak7_USB

Type
☐ Network
 ☐ Serial
 ☒ USB

USB
 Port
 COM3 ▼

Cancel Add

4. For each USB connection, the NovAtel USB drivers create three virtual COM ports. Click the **Port** drop menu and select the virtual COM port used for this receiver.
5. Click the **Add** button.

A new Device labeled with the name entered in the *Connection Name* box is added to the *Devices* window.




To communicate with a receiver using a USB port, the NovAtel USB drivers must be installed on the computer. For Windows 10/11 computers, the drivers are automatically downloaded. For other operating systems, these USB drivers are available on the NovAtel website at novatel.com/support/support-materials/software-downloads.

5.1.3 Add a Device – Ethernet Connection

This type of Device is used for a receiver connected to the GRIT Monitor computer using an Ethernet port.


1. Click the **Add Device** button.

The *New Connection* dialog box opens.

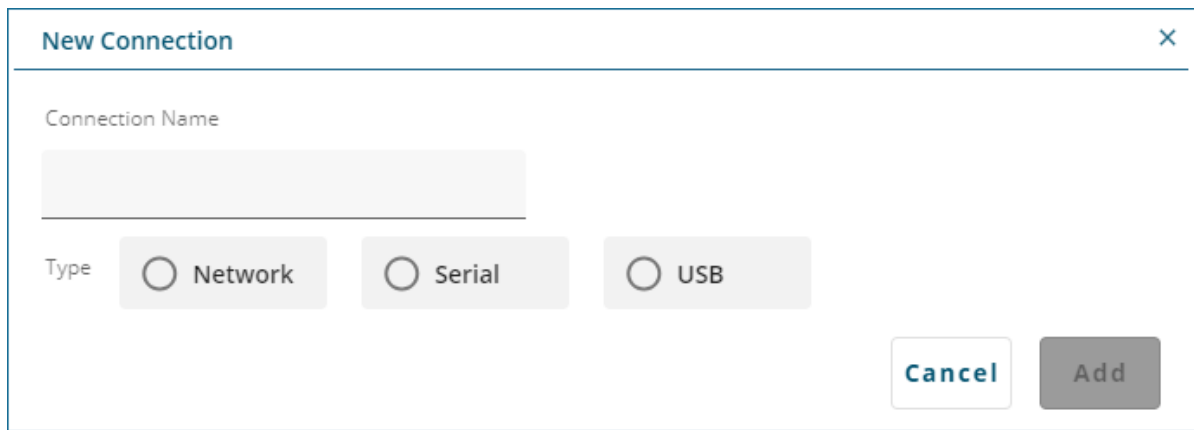

The 'New Connection' dialog box features a title bar with a close button (X). Below the title bar is a 'Connection Name' label followed by a text input field. Underneath is a 'Type' label with three radio button options: 'Network', 'Serial', and 'USB'. At the bottom right are two buttons: 'Cancel' and 'Add'.

2. In the *Connection Name* box, enter a name for the Device.
This name is used to identify this Device on the *Devices* window and on the *Dashboard* window.
3. Click the **Network** button.
The *New Connection* dialog expands to show the network connection parameters.

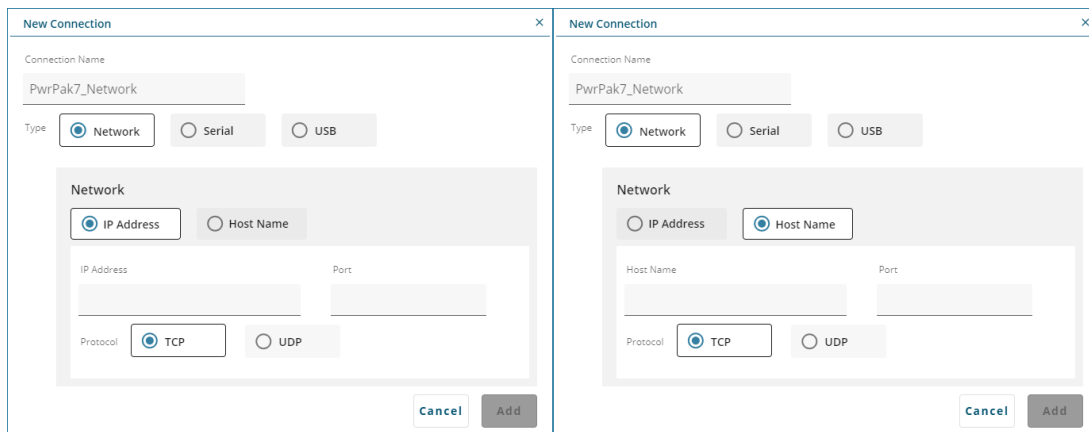

Two side-by-side screenshots of the 'New Connection' dialog box with the 'Network' type selected. The left screenshot shows the 'IP Address' option selected under the 'Network' section, with input fields for 'IP Address' and 'Port', and radio buttons for 'TCP' and 'UDP'. The right screenshot shows the 'Host Name' option selected, with input fields for 'Host Name' and 'Port', and radio buttons for 'TCP' and 'UDP'. Both screenshots have 'Cancel' and 'Add' buttons at the bottom right.


4. If specifying the connected device by its IP address, click the **IP Address** option and enter the IP address of the receiver in the **IP Address** box.
If specifying the connected device by its host name, click the **Host Name** option and enter the host name of the device in the **Host Name** box.
5. In the **Port** box, enter the port used to communicate with the receiver.
The default ports are 3001 to 3007.
6. Click the button (**TCP** or **UDP**) for the protocol used for communication with the receiver.



TCP is the default for ICOM ports.

7. Click the **Add** button.
A new Device labeled with the name entered in the *Connection Name* box is added to the *Devices* window.

5.1.4 Open/Close a Connection

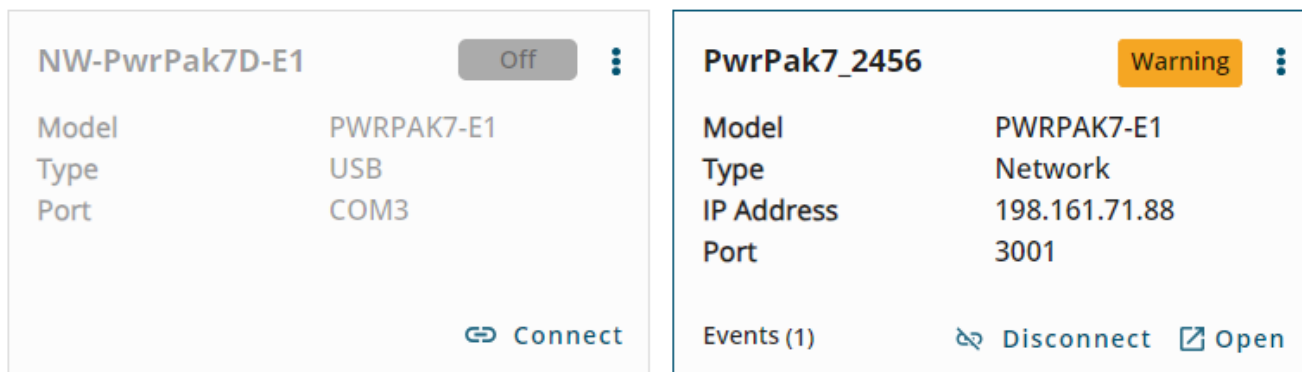

A connection to the receiver must be established before GRIT Monitor can be used to monitor interference.

To connect to the receiver, click the **Connect** button. The device box changes to show *Disconnect* and *Open* buttons.

To close a connection, click the **Disconnect** button. The device box changes to show the *Connect* button.

5.1.5 Open GRIT Monitor for a Device

When GRIT Monitor has a connection to the receiver, the GRIT Monitor windows for the receiver can be viewed. To open the GRIT Monitor windows, click the **Open** button.

See *GRIT Monitor Dashboard* on page 174 for more information.

5.1.6 Change the Communication Parameters of a Device

To change the communication parameters used to connect to a receiver:

1. Click the menu button (⋮) on the Device to change.
2. Click **Edit Device**.
3. Change the communication parameters to match the new settings required to connect to the receiver.

5.1.7 Delete a Device

To delete a Device:

1. Click the menu button (⋮) on the Device to delete.
2. Click **Delete Device**.
A confirmation dialog box appears.
3. Click the **Yes** button.



The Delete Device option is not available when Manage is connected to the receiver.

5.1.8 Group the Devices

When NovAtel Application Suite is installed, the **ALL** group is the only group available. This group contains all of the Devices added.


The added Devices can be organized into additional groups to make it easier to find Devices or to put similar Devices in a single location.

Add a Group

To add a group:

1. Click the  button.

The *New Group* dialog box displays.

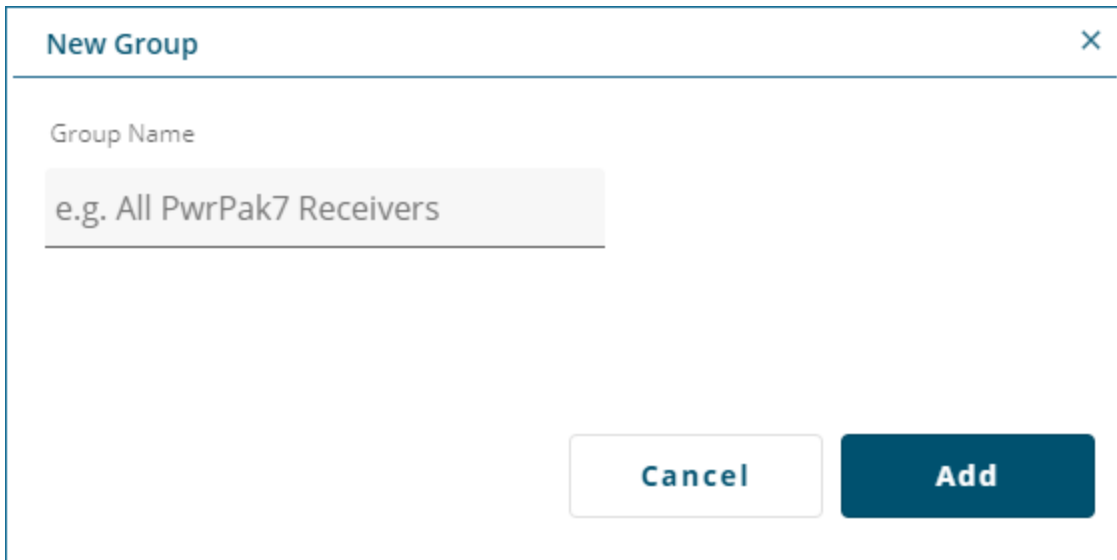


The *New Group* dialog box is a light blue window with a title bar that says "New Group" and a close button (X) in the top right corner. Inside the dialog, there is a label "Group Name" above a text input field. The input field contains the placeholder text "e.g. All PwrPak7 Receivers". At the bottom right of the dialog, there are two buttons: a light blue "Cancel" button and a dark blue "Add" button.

2. In the **Group Name** box, enter a name for the group.
3. Click the **Add** button.

The *Devices* window changes to show the new group and a new group icon (folder icon) is added to the left side of the window.

Open a Group

All of the groups available on the *Devices* window are shown on the left side of the *Devices* window. Each group is represented by a folder icon (e.g. .

To open a group, click the folder icon for the group. The *Devices* window changes to show only the devices that are in the selected group.

Add a Device to a Group

To add a new Device to a group:

1. Click the **Add Device** button.

The *New Connection* dialog box opens.

2. Enter the Device information.

See *Add a Device – Serial Connection* on page 166, *Add a Device – USB Connection* on page 168 or *Add a Device – Ethernet Connection* on page 169 for information about adding a Device.

Change the Devices assigned to Group


To change the Devices in a group:

1. Click the folder icon for the group.

The *Devices* window changes to show the Devices currently in the group.

2. Click the menu button (⋮) beside the group name and click **Update Devices**.

A dialog box appears showing the Devices available to add to the group.

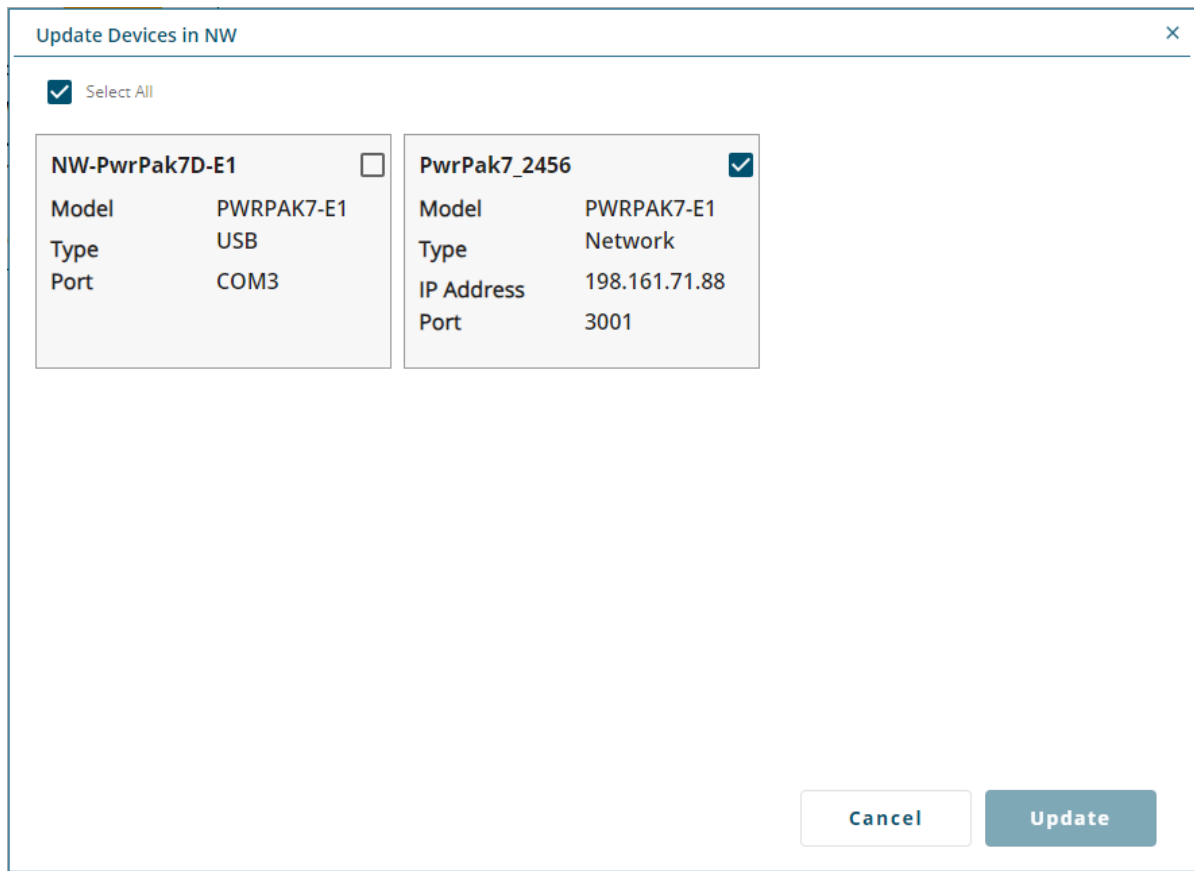

Devices that are already in the group have the check box selected.

3. To add a Device to the group, select the check box for the Device.

To remove a device from the group, clear the check box for the Device.

To select all available Devices, select the **Select All** check box.

4. Click the **Update** button.

Remove a Device from a Group

To remove a Device from a group:

1. Click the folder icon for the group.

The *Devices* window changes to show the Devices currently in the group.

2. Click the menu button (⋮) on the Device to remove.
3. Click **Remove from Group**.

A confirmation dialog box appears.

4. Click the **Yes** button.



Removing a Device from a group does not delete the Device from the *Devices* window. To delete a Device from the *Devices* window, see *Delete a Device* on page 171.

Change the Group Name

To change the name of the Group:

1. Click the menu button (⋮) beside the group name.
2. Click **Edit Group**.
The *Edit Group* dialog box appears.
3. In the **Group Name** box, enter the new name for the group.
4. Click the **Edit** button.


Delete a Group

To delete a group:

1. Click the menu button (⋮) beside the group name.
2. Click **Delete Group**.
A confirmation dialog box appears.
3. Click the **Yes** button.

5.2 GRIT Monitor Dashboard

When a connection to a receiver is opened, the GRIT Dashboard is displayed. From this window, all of the GRIT features for the receiver can be accessed.

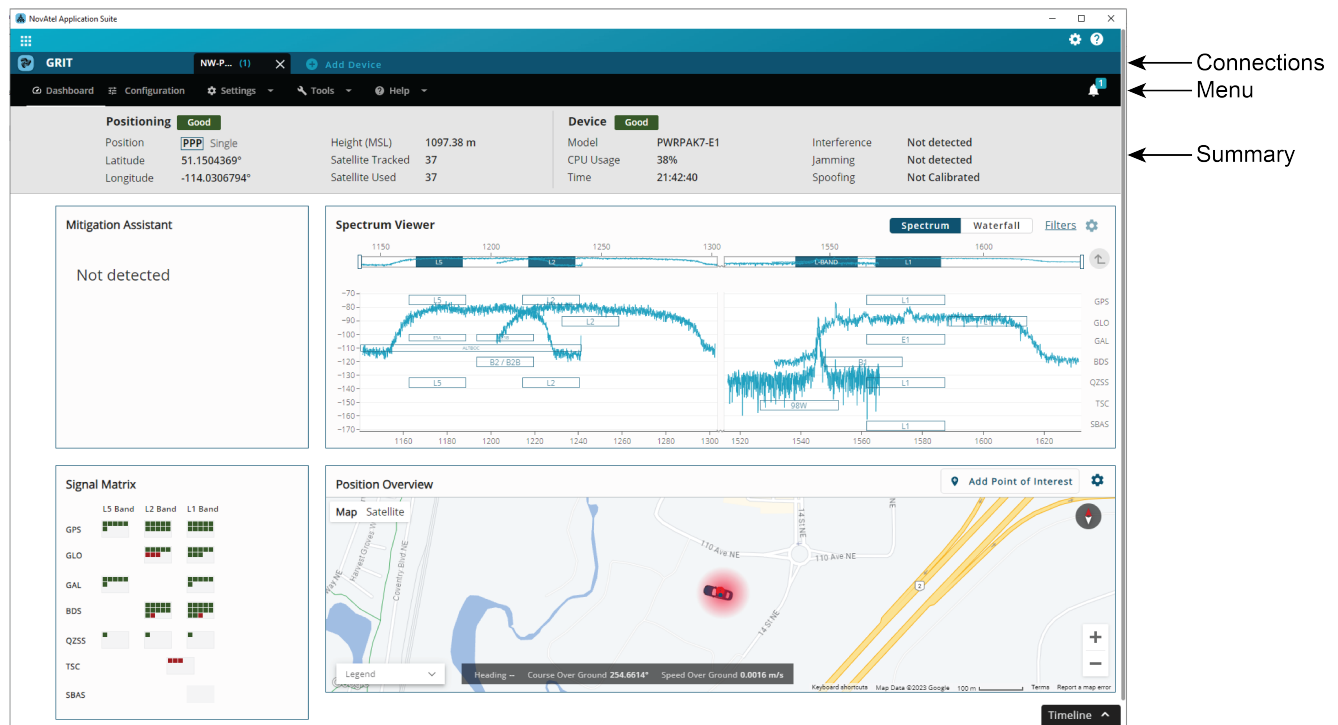

5.2.1 Connections Bar

The *Connections* bar appears at the top of all GRIT Monitor windows. This bar shows all the Devices to which the computer currently has a connection.


The Device that is currently being viewed is black. To view a different Device, click the tab on the Connections bar for that Device.

To close a connection, click the **X** button on the Device tab.

To add a new Device, click the **+** button on the *Connections* bar. The *New Connection* dialog box appears. See *Devices Window* on page 163 for information about adding a Device.

5.2.2 Menu Bar

The **Menu** bar provides access to other tools and settings available in GRIT Monitor. For information about the Menu, see *Menu* on page 199.

From the **Event** menu option () , you can view the events (warnings, errors or status messages) that apply to the receiver. The number beside the Event menu indicates the current number of events on the receiver. For information about the Events menu, see *Events* on page 50.

5.2.3 Summary Bar

The Summary bar provides status information about the receiver.

Positioning Good				Device Good			
Position	PPP Single	Height (MSL)	1097.36 m	Model	PWRPAK7-E1	Interference	Not detected
Latitude	51.1504366°	Satellite Tracked	39	CPU Usage	38%	Jamming	Not detected
Longitude	-114.0306795°	Satellite Used	38	Time	21:46:40	Spoofing	Not Calibrated

Status Indicator

A colored bar with text indicates the status of the summary information shown.

Color	Text	Description
Green	Good	The receiver is functioning and there are no warnings or errors.
Amber	Warning	The receiver is functioning, but there are one or more issues that may require attention.
Red	Error	An issue is preventing the receiver from functioning. The Error state will remain until the situation is resolved.

If the receiver has a warning or error, click the status indicator to open a tooltip with more information about the warning or error. You can also check the status boxes on the *Status* tab in Manage. An amber or red status indicator appears on the status box where more information about the warning or error can be found. See *Status Window* on page 52 for more information.

Position

The *Position* field shows all of the positioning types configured on the receiver. The positioning type that is currently being used to calculate the position is highlighted in a box.

Latitude

The *Latitude* field shows the latitude of the calculated position in degrees.

Longitude

The *Longitude* field shows the longitude of the calculated position in degrees.

Height (MSL)

The *Height (MSL)* field shows the height above mean sea level of the calculated position in metres.

Satellite Tracked

The *Satellite Tracked* field shows the number of satellites the receiver is currently tracking.

Satellite Used

The *Satellite Used* field shows the number of satellites used in the current position mode.

Model

The *Model* field shows the receiver type.

CPU Usage

The *CPU Usage* field shows the amount of receiver computing (CPU) power currently being used.

Time

The *Time* field shows the current UTC time.

Interference

The *Interference* field indicates if the receiver has detected interference in the GNSS signal.

Jamming


The *Jamming* field indicates if the receiver has detected jamming in the GNSS signal.

Spoofing

The Spoofing field indicates if the receiver has detected spoofing in the GNSS signal. The receiver must be calibrated before it can reliably detect spoofing. See *Configuration* on page 195. If the receiver has not yet been calibrated, this field displays *Not calibrated*.

5.2.4 Timeline Bar

GRIT Monitor keeps a 10 minute running history of GRIT Monitor information. This history can be accessed from the Timeline bar.



To view GRIT Monitor information from the past 10 minutes:

1. Click the **Timeline** button to open the Timeline bar.
2. Click the location of interest on the Timeline bar.

GRIT Monitor switches to show the information from the time selected.

The time selected is shown in the middle of the Timeline bar beside the play back controls. The current time is shown on the right side of the Timeline bar.

3. Use the Timeline bar controls to move within the 10 minute window. The GRIT Monitor dashboard screens show the data for the selected time.

The Timeline bar continues to update with new information received by the receiver so that the Timeline always shows the last 10 minutes of information. New information is added on the right side of the bar and information older than 10 minutes moves off of the left side of the bar.



When Timeline is set to play and GRIT Monitor has been open for more than 10 minutes, the time selected marker will appear to be stationary since the new information is being added as the information is being played.

When Timeline is set to play and GRIT Monitor has been open for less than 10 minutes, the time selected marker will appear to move right as new information is added.

When the Timeline is set to pause, the time selected marker will appear to move left as new information is added.

4. When finished viewing the information, click the **RETURN TO LIVE** button.

The Timeline bar can be used to record a GRIT Monitor session as a Playback file.


To record a GRIT Monitor session:

1. Click the **Timeline** button to open the Timeline bar.
2. Click the **Record** button.
3. Select the folder in which to save the Playback file.
GRIT Monitor begins saving the GRIT Monitor session to a file.
4. When the desired information has been recorded, click the **Stop Recording** button.

5.2.5 Mitigation Assistant


The *Mitigation Assistant* window provides guidance on any GNSS interference signals detected.

When there is no interference signal detected, the *Mitigation Assistant* window shows Not detected.

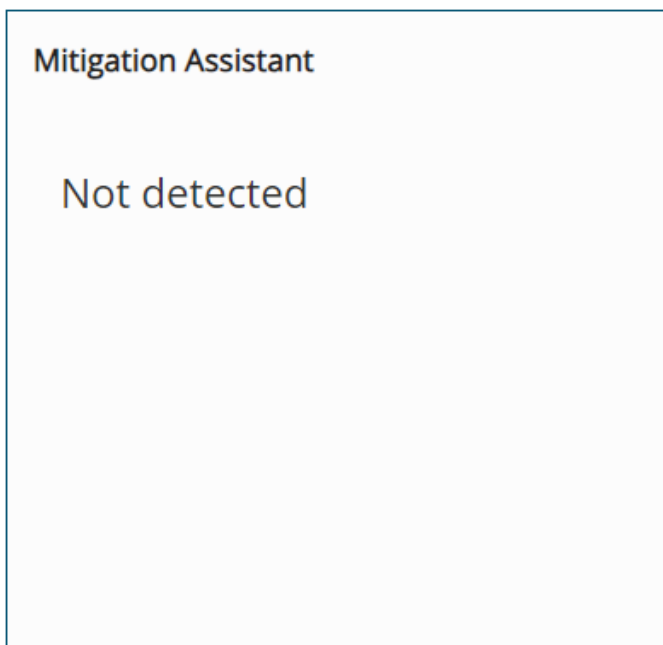

If GRIT Monitor detects an interference signal (either interference, jamming or spoofing), the *Mitigation Assistant* window provides information about the interference detected.

If there are more than one interference signals detected, the *Mitigation Assistant* window shows a list of the interference detected with a brief description.

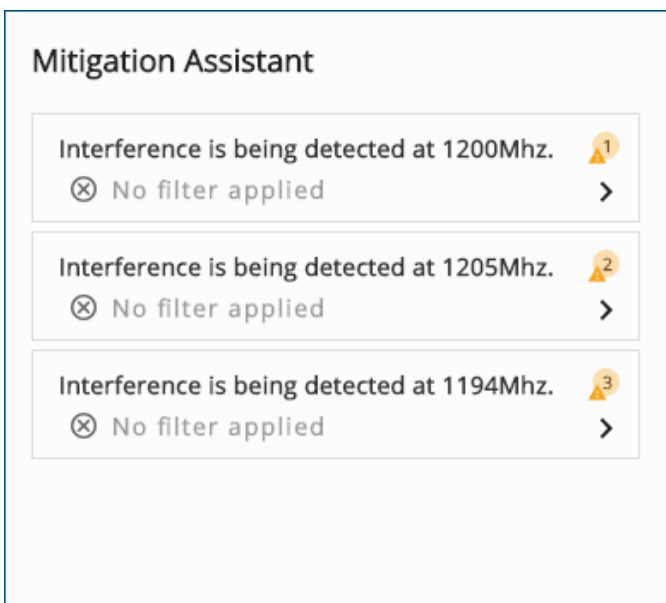


To view more information about one of the interference signals, click the interference signal. From the Interference details window displayed, you can:

- View information about the interference signal.
- Click the **Add filter** button to add a filter to help mitigate the interference.
- Move to the next or previous interference signal.
- Return the list of interference detected.


5.2.6 Signal Matrix

The Signal Matrix window provides the carrier to noise ratio for the GNSS signals the receiver is tracking.

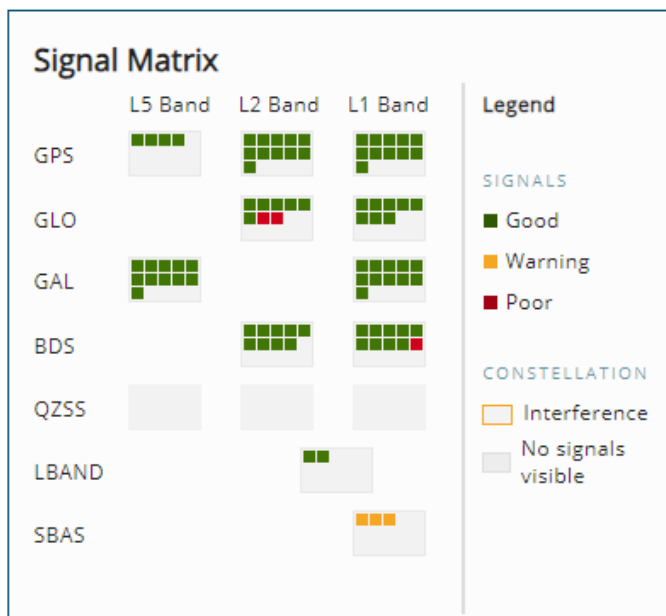

The signals are organized by band and constellation with colored squares representing the number of signals available in that group. The color of each square indicates the carrier to noise status of the each signal.

When you hover the mouse pointer over a band and constellation group, a dialog box appears with details about the signals for that band and constellation.

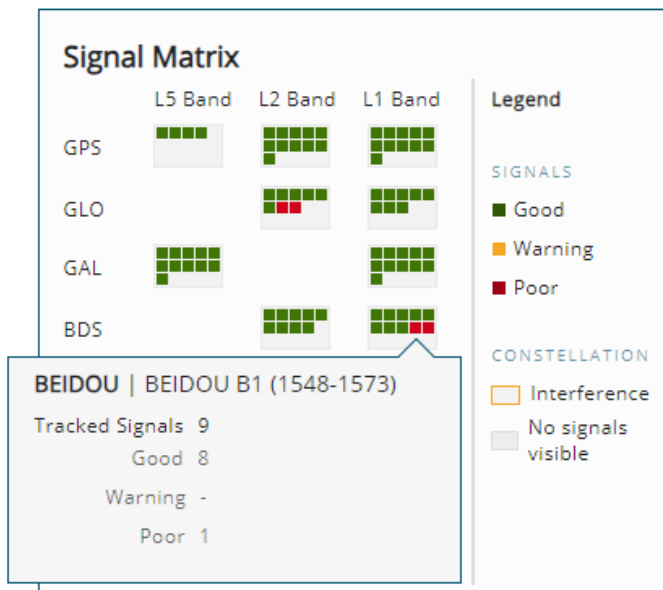


If interference is detected, the color of the impacted constellation names change to yellow and a yellow rectangle is added around the affected signal bands.

5.2.7 Spectrum Viewer

The Spectrum Viewer window shows the Radio Frequency (RF) spectrum in a range of frequencies around the GNSS signals that are being received by the OEM7 receiver. The Spectrum Viewer can be displayed in *Spectrum* view or *Waterfall* view.


Spectrum View

In *Spectrum* view, the *Spectrum Viewer* window shows the real-time received GNSS signals. To show the *Spectrum* view (default), click the **Spectrum** button.

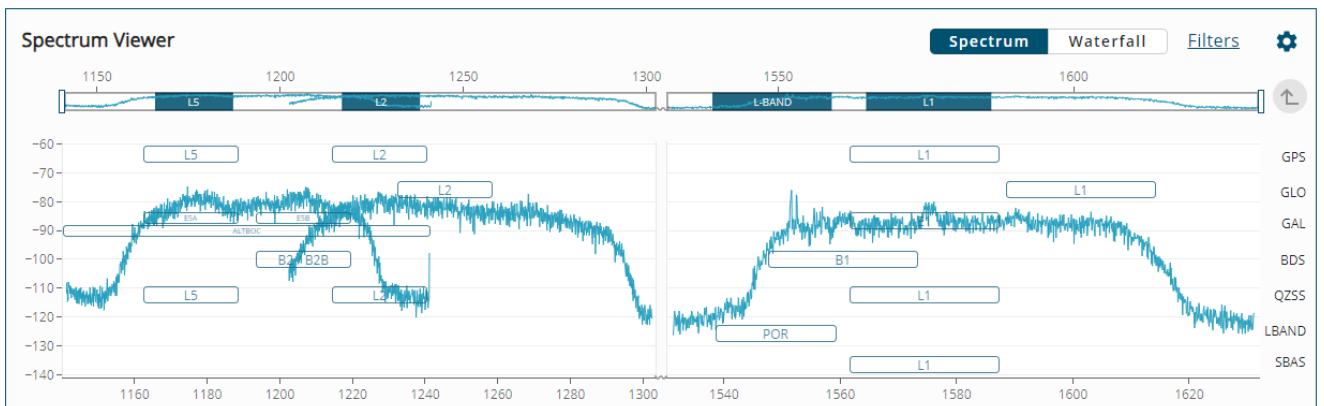


The received RF signals are plotted with the received signal strength (left vertical axis) over the signal frequency (bottom axis). These signals overlay boxes representing the signal bands for each GNSS constellation (right vertical axis).

To zoom in on a specific signal band, click the Band box (dark box labeled L5, L2, L1 or L-BAND) on the Overview bar.

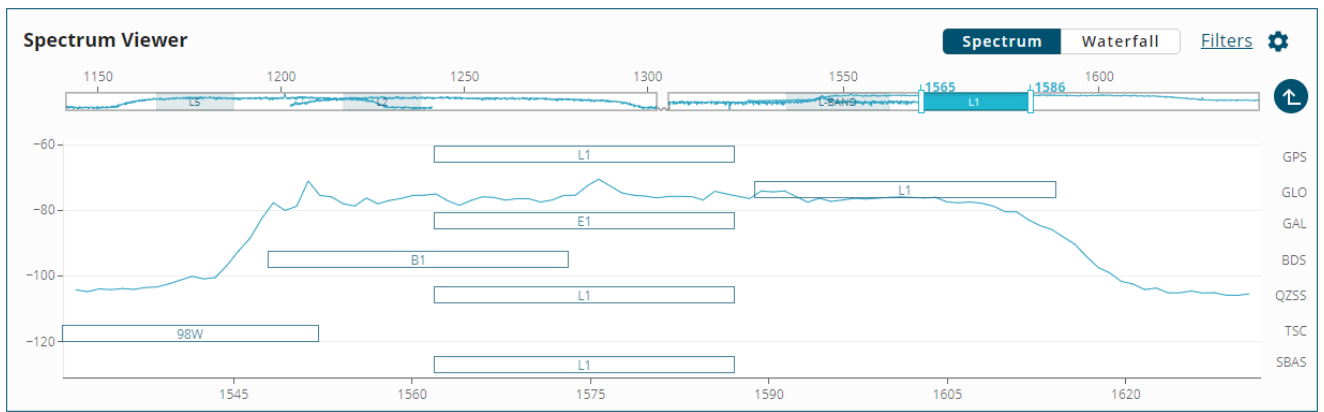


To zoom in on a specific signal, click the Signal box (white box) on the RF signal plot.

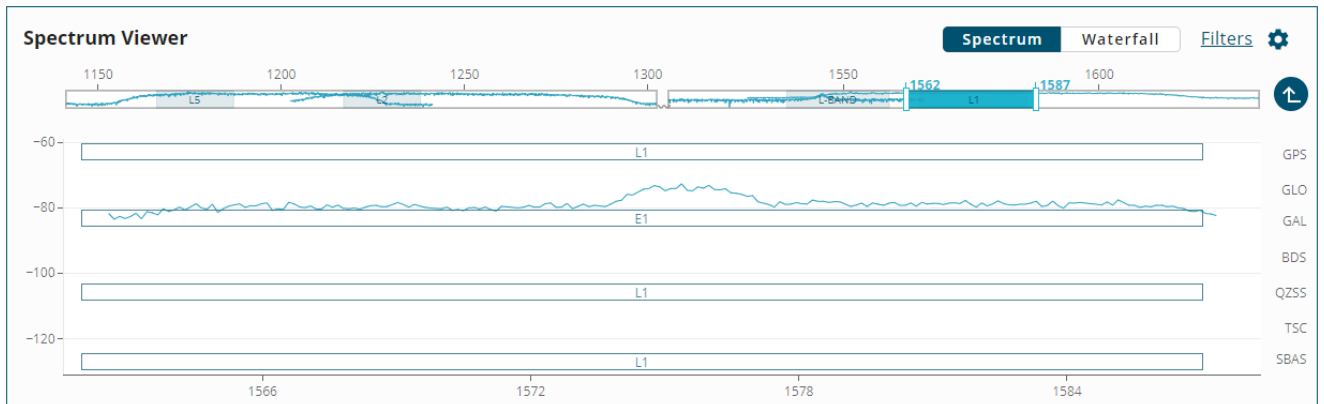


To return to viewing all signals and bands, click the **Up** button (↑).

To view details about a specific frequency, hover the mouse pointer over the received signal plot. The band, frequency and signal strength are shown.

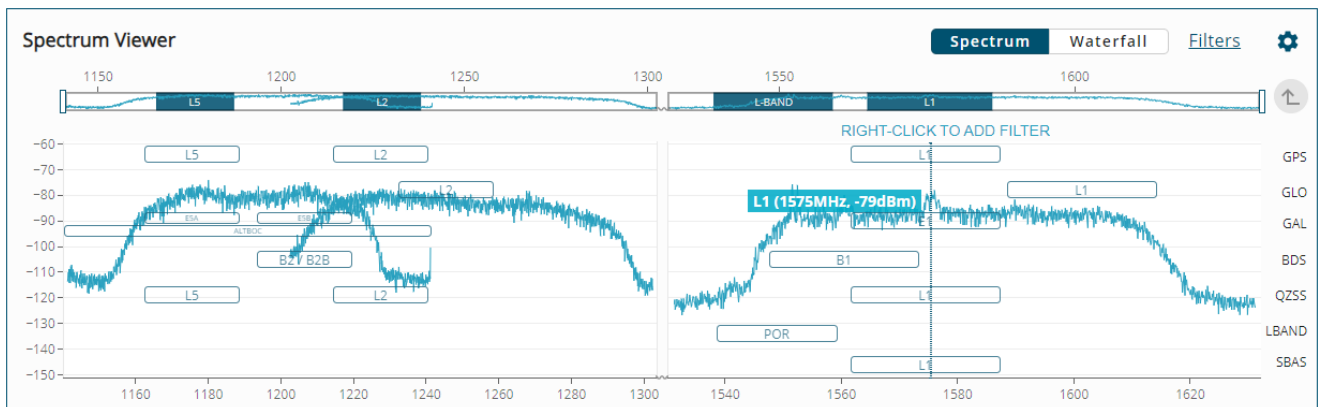


Waterfall View

In *Waterfall* view, the *Spectrum Viewer* window shows a running history of the received GNSS signals. To show the *Waterfall* view, click the **Waterfall** button.

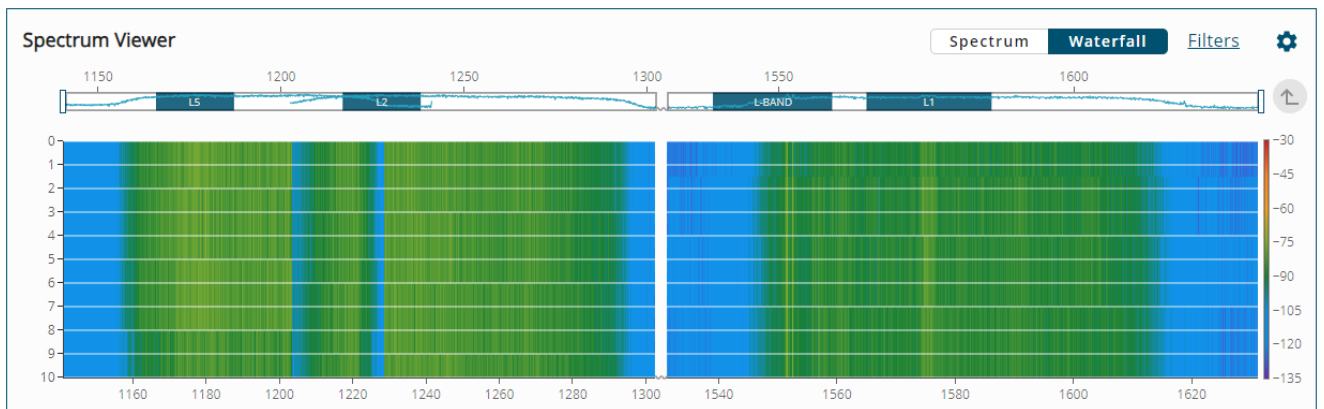

The received RF signals are plotted with time (left vertical axis) over the signal frequency (bottom axis). The received signal strength (right vertical axis) is represented by the color of the frequency at a specific time.

To zoom in on a specific signal band, click the Band box (dark box labeled L5, L2, L1 or L-BAND) on the Overview bar.

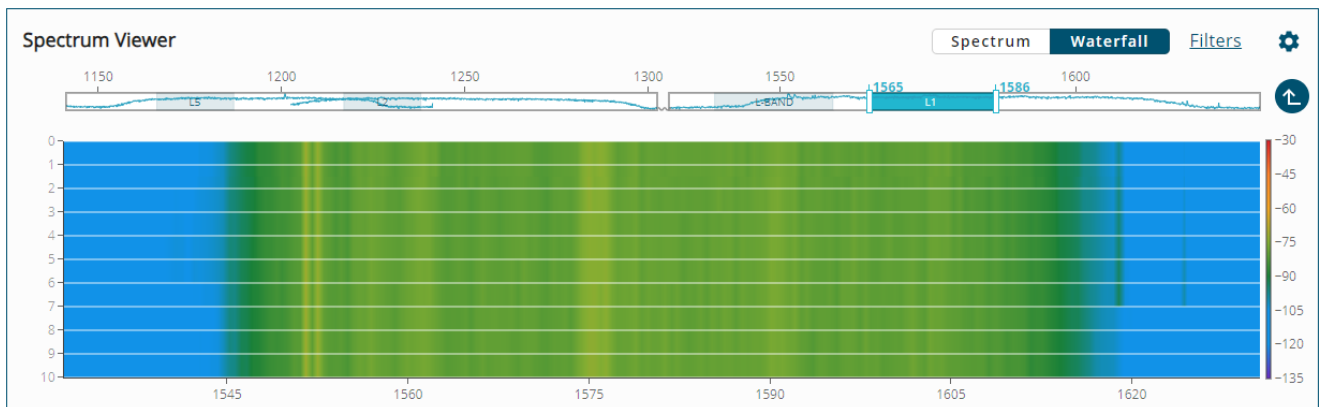

To view details about a specific time and frequency, hover the mouse pointer over the waterfall plot. The band, frequency and signal strength for that time are shown.

Filters

If an interference signal is present, GRIT Monitor can reduce or eliminate the impact on GNSS tracking using the programmable bandpass or notch filters.



Filters can not be applied to the LBand signal band.


Notch Filter

A notch filter reduces the signal power in a narrow frequency band. This type of filter is useful for reducing the signal power of a single, narrow band interference signal. Note that the narrowest possible filter should be used to maintain the maximum amount of overall signal power.

To add a notch filter:

1. Click **Filters** and then click **Add filter**.

The *Add filter* dialog box appears.

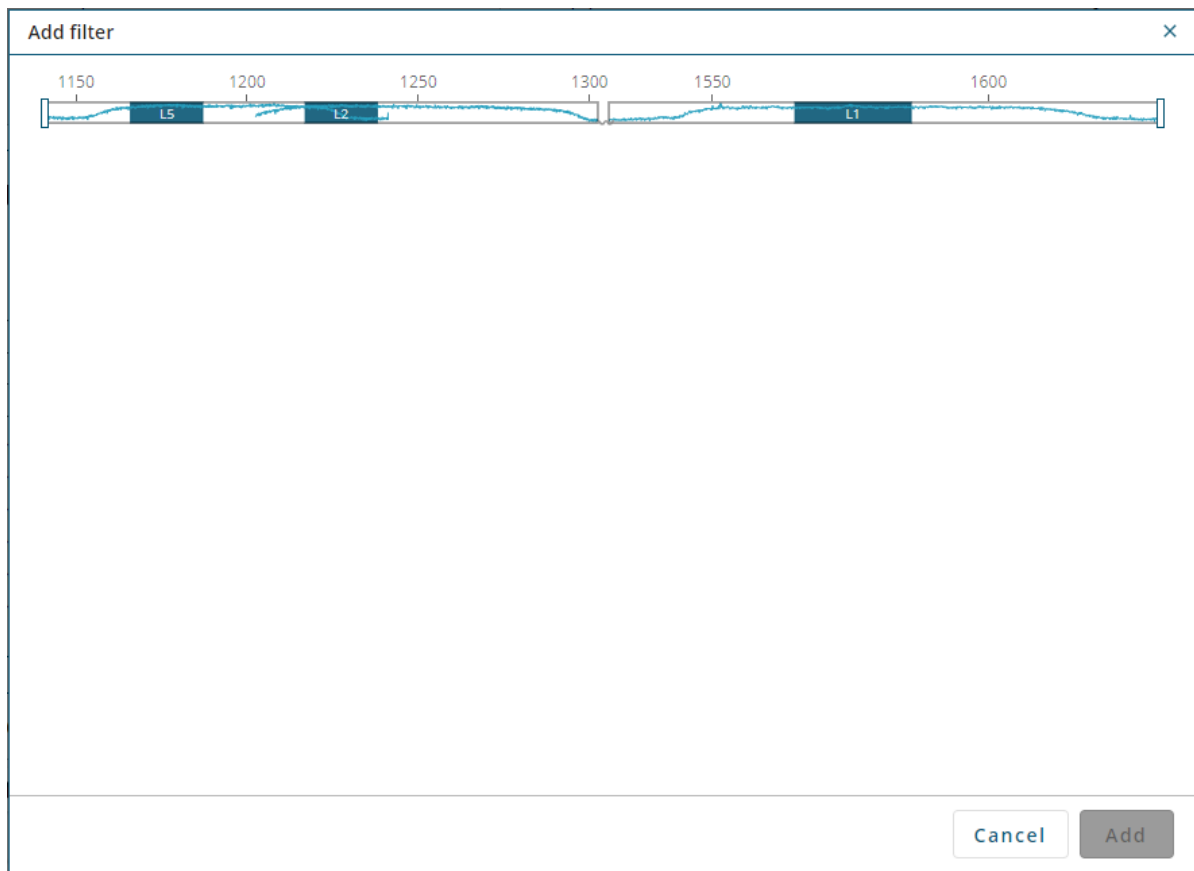

A filter can also be added using one of the following:

- Move the mouse pointer over the frequency on the *Spectrum Viewer* signal plot and click the right mouse button. The *Add filter* dialog box appears with the information required for a filter for the selected frequency entered.
 - Click the **Add filter** link in the interference message on the *Mitigation Assistant* window.
 - Click the **Add filter** link in the interference tooltip on the *Position Overview* window.
2. Click the button for the band to which the filter will be added.

The *Add filter* dialog box changes to show the signals available in the selected band.



3. Use the mouse to select the center frequency of the filter on the signal display. The selected frequency appears in the **Filter Center** box

Alternately, the center frequency for the filter can be entered in the **Filter Center** box.


The GNSS signals impacted by the filter are shown in the **Affected bands** box.

The center frequency entered or selected can be adjusted using the up and down arrows in the **Filter Center** box.



GRIT Monitor provides an error message if the center frequency entered or selected is not within the allowable range.

4. Select the **Filter Bandwidth** option for the notch filter. Only options valid with the entered center frequency are available.
 - Select the narrowest bandwidth that will remove the interference signal.
 - Two notch filters are added which are equal distance from the center frequency. The configured filters are represented by blue bars on the signal display.

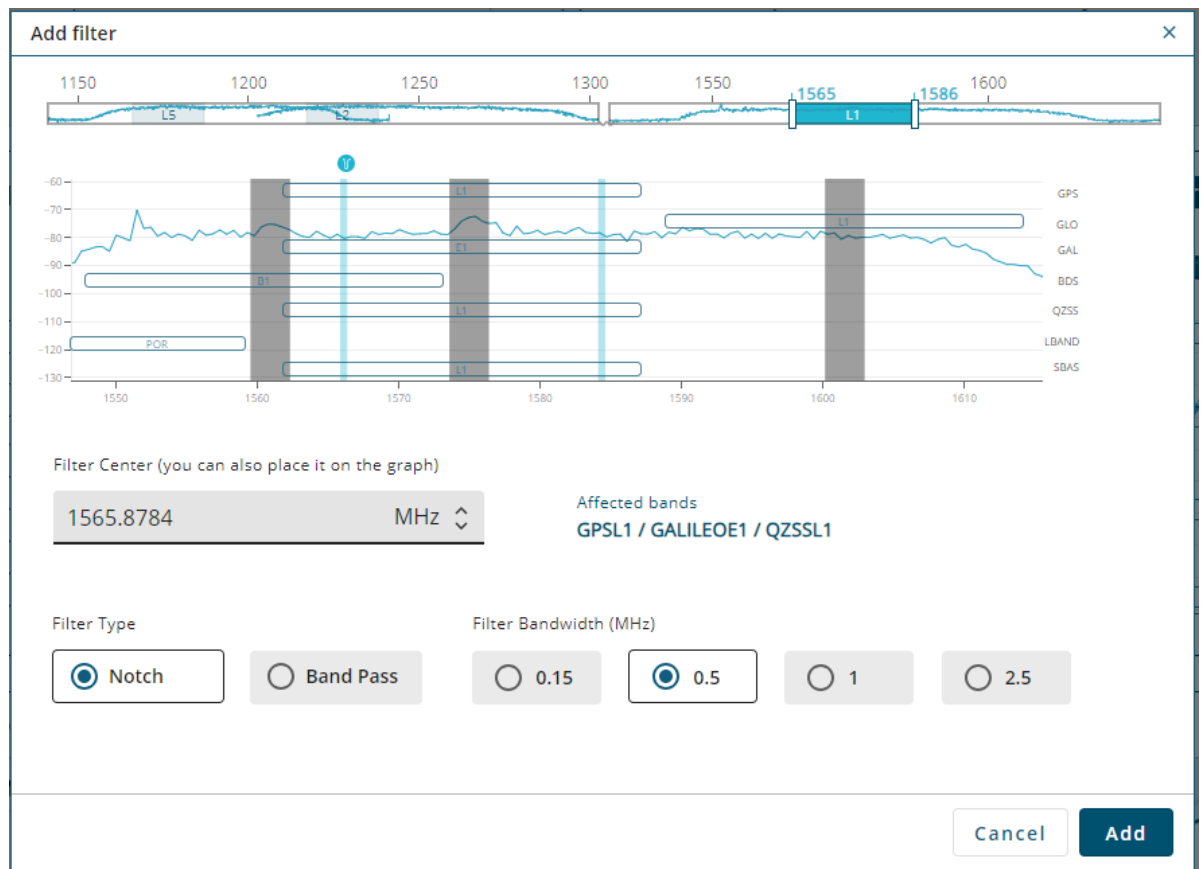

5. Click the **Add** button.

The *Spectrum Viewer* window appears with the notch filtered plot shown.


Bandpass Filter

A bandpass filter reduces the signal power of all incoming signals at the upper and lower end of the GNSS signal band starting at the configured cut-off frequency. This type of filter is good for reducing single or multiple interference signals at the edges of the signal band.

When a bandpass filter is applied to the signal, the upper and lower ends of the signal band are filtered out to reduce the signal power of the interference signal.

To add a bandpass filter:

1. Click **Filters** and then click **Add filter**.
Alternately, move the mouse pointer over the *Spectrum Viewer* signal plot and click **Add filter**.
The *Add filter* dialog box appears.

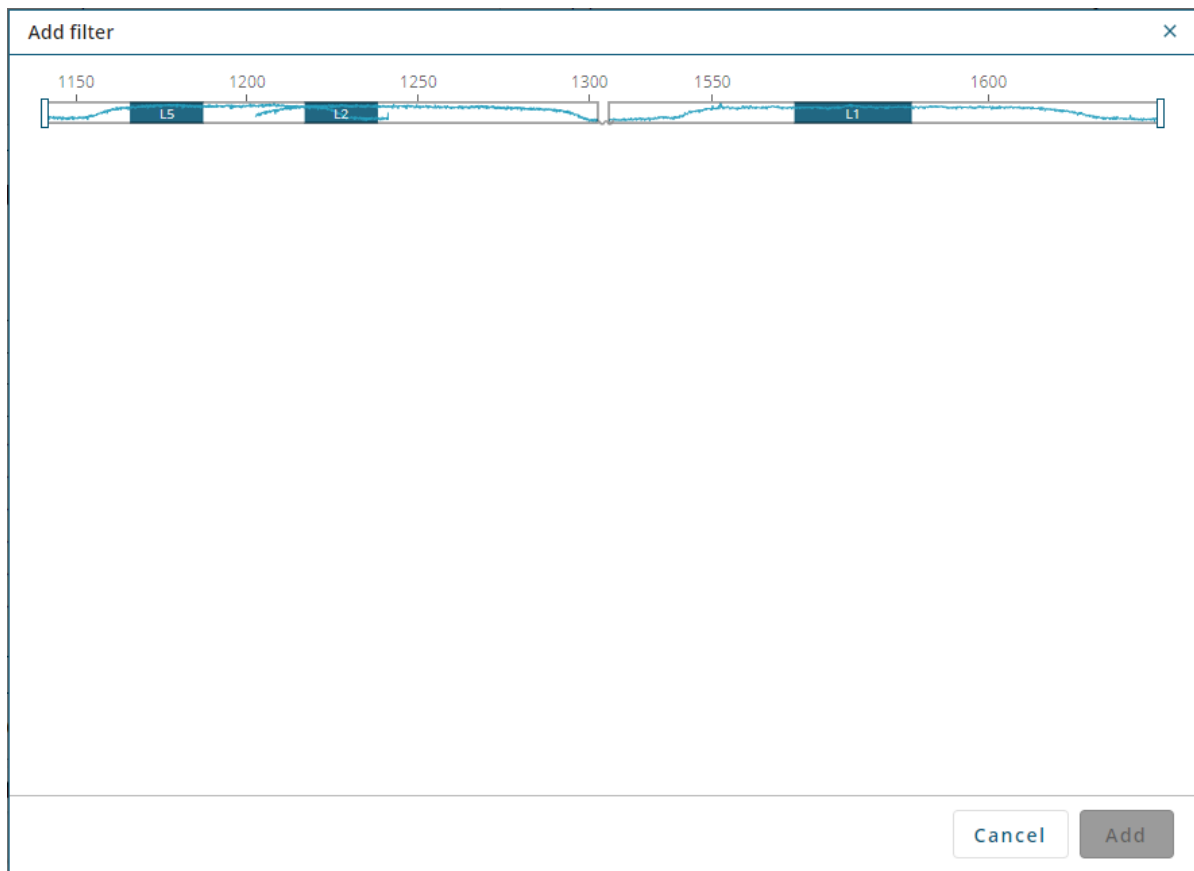


A filter can also be added using one of the following:

- Move the mouse pointer over the frequency on the *Spectrum Viewer* signal plot and click the right mouse button. The *Add filter* dialog box appears with the information required for a filter for the selected frequency entered.
 - Click the **Add filter** link in the interference message on the *Mitigation Assistant* window.
 - Click the **Add filter** link in the interference tooltip on the *Position Overview* window.
2. Click the button for the band to which the filter will be added.

The *Add filter* dialog box changes to show the Signals available in the selected band.



3. Click the **Band Pass** option.

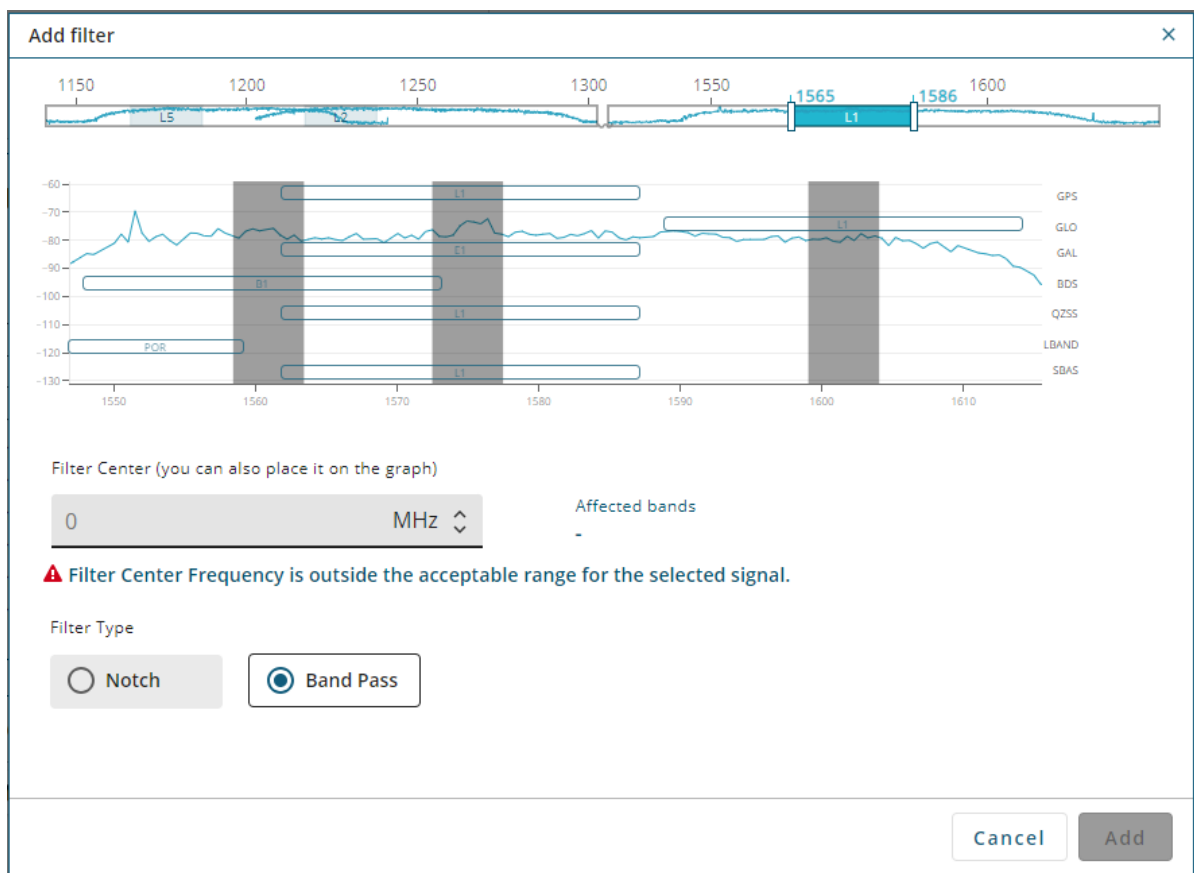

4. Use the mouse to select the center frequency of the filter on the signal display. The selected frequency appears in the **Filter Center** box.

Alternately, the center frequency for the filter can be entered in the **Filter Center** box.

The GNSS signals impacted by the filter are shown in the **Affected bands** box.

The center frequency entered or selected can be adjusted using the up and down arrows in the **Filter Center** box.



GRIT Monitor provides an error message if the center frequency entered or selected is not within the allowable range.


Two band pass filters are added which are equal distance from the center frequency. The configured filters are represented by blue bars on the signal display.





5. Click the **Add** button.

The Spectrum Viewer window appears with the band pass filtered plot shown.

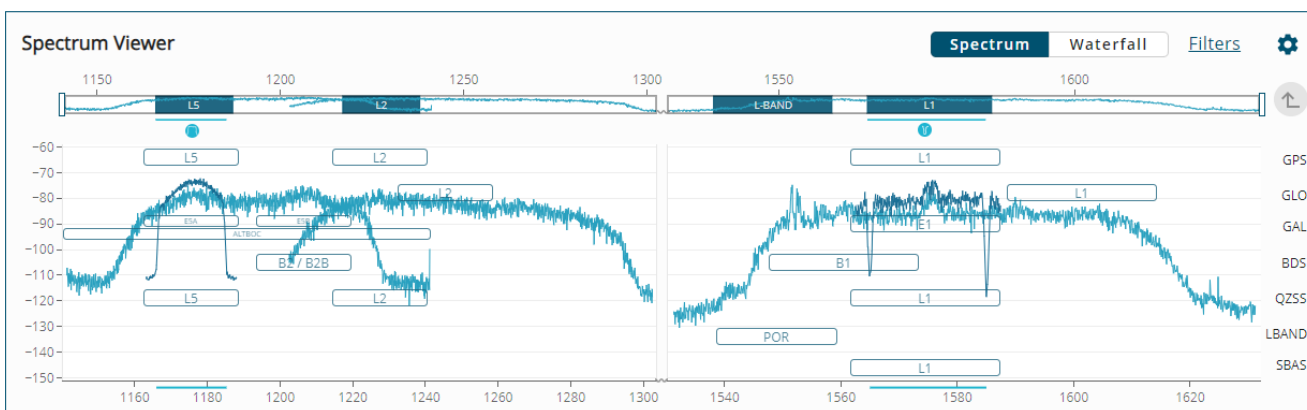When a filter is added, the frequency response of the filtered signal is shown on the *Spectrum Viewer* window.




An icon below the overview bar indicates the type of filter applied ( for bandpass filters and  for notch filters). To view details about the filter, hover the mouse pointer of the icon. Clicking the icon opens the *Filters* dialog.


Show/Hide a Filter


The configured filters can be shown or hidden from the *Spectrum Viewer* window. To show or hide a filter:

1. Click the **Filters** link.

The *Filters* dialog appears.

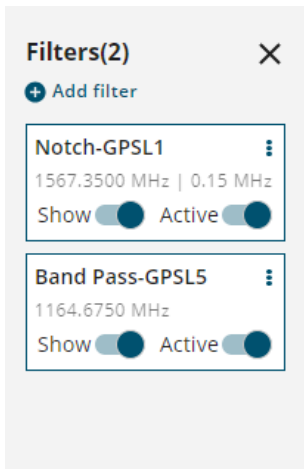

2. To show a filter on the *Spectrum Viewer* window, set the **Show** button to on ().

To hide a filter on the *Spectrum Viewer* window, set the **Show** button to off ().




Hidden filters continue to filter the signal even though they are not visible on the *Spectrum Viewer* window


Activate/Deactivate a Filter

When a filter is activated, the filter is applied to the incoming signal.

1. Click the **Filters** link.

The *Filters* dialog appears.

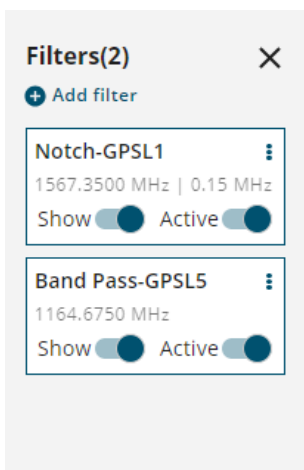

2. To activate a filter, set the **Active** button to on ().


To deactivate a filter, set the **Active** button to off ().

Edit a Filter

To edit a filter:

1. Click the **Filters** link.

The *Filters* dialog appears.

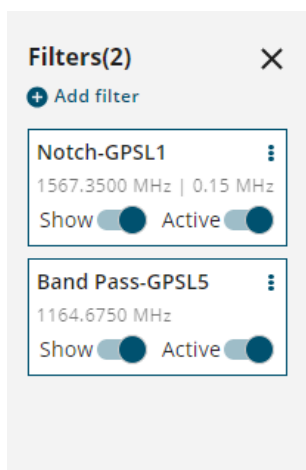

2. Click the menu button (⋮) beside the filter and click **Edit**.

The *Edit Filter* dialog box appears.

3. Change the filter parameters to the desired settings.

For notch filters, only the **Filter Center** and **Filter Bandwidth** parameters can be changed.

For band pass filters, only the **Filter Center** parameter can be changed.


4. Click the **Apply** button.

Delete a Filter

To delete a filter:

1. Click the **Filters** link.


The *Filters* dialog appears.

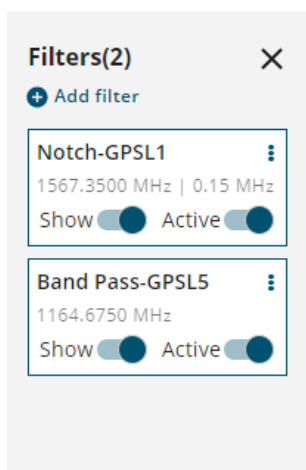

2. Click the menu button (⋮) beside the filter and select **Delete**.

Advanced Settings

The Advanced Settings configure the parameters used to generate the plot. To access the Advanced Settings, click the **Settings** icon (⚙️).

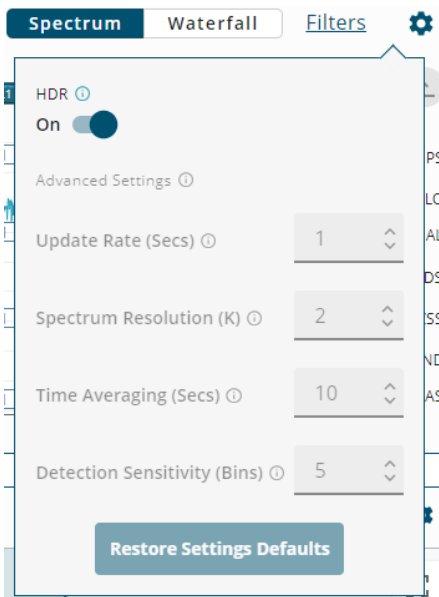

i Decreasing the Update Rate or increasing the Spectrum Resolution will impact receiver idle time. The idle time should be monitored to prevent adverse effects on receiver performance.

i The Advanced Settings are not available when connected to the receiver using a serial connection.

i The Advanced Settings are only available when the *Spectrum Viewer* has been zoomed in to a signal band (e.g. L1, L5, etc.) or a single signal (GPS L1, Galileo E5a, etc.).

HDR

The High Dynamic Range (HDR) mode enables special signal processing to remove distortions from the spectrum, providing a cleaner signal. This optimizes the Automatic Gain Control (AGC) to prevent interfering signals from drowning out the GNSS signals. HDR mode works well against wide band and out-of-band interferers. HDR mode can be combined with bandpass and notch filters, but does draw more power.

Update Rate (Secs)

This parameter sets the spectrum update rate in seconds. It determines how quickly the plot is updated.

The update interval is limited by the FFT size chosen. For 32k, the minimum update period is 0.1 seconds and for 64k, the minimum update period is 0.2 seconds.

Spectrum Resolution (K)

This parameter sets the frequency resolution of the spectrum.

Time Averaging (Secs)

This parameter sets the time averaging window in seconds. 0 means no time averaging.

Detection Sensitivity (Bins)



This parameter sets the integration window size of FFT samples. 1 means no integration.

To reset the Advanced Settings to the factory default values, click the **Restore Settings Defaults** button.



5.2.8 Position Overview

The *Position Overview* window contains a map that shows the current position of the receiver, a history of where the receiver has traveled, information about the receiver's course and information about the locations around the receiver.



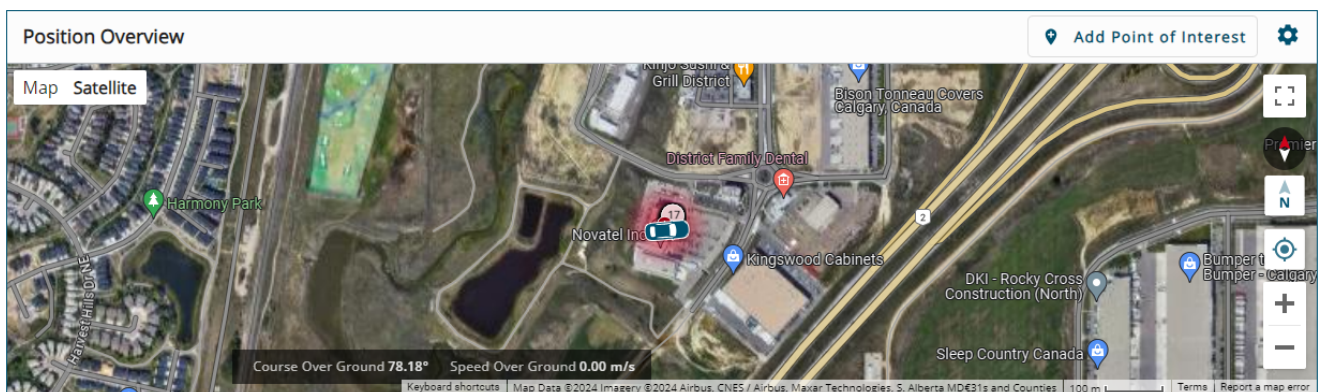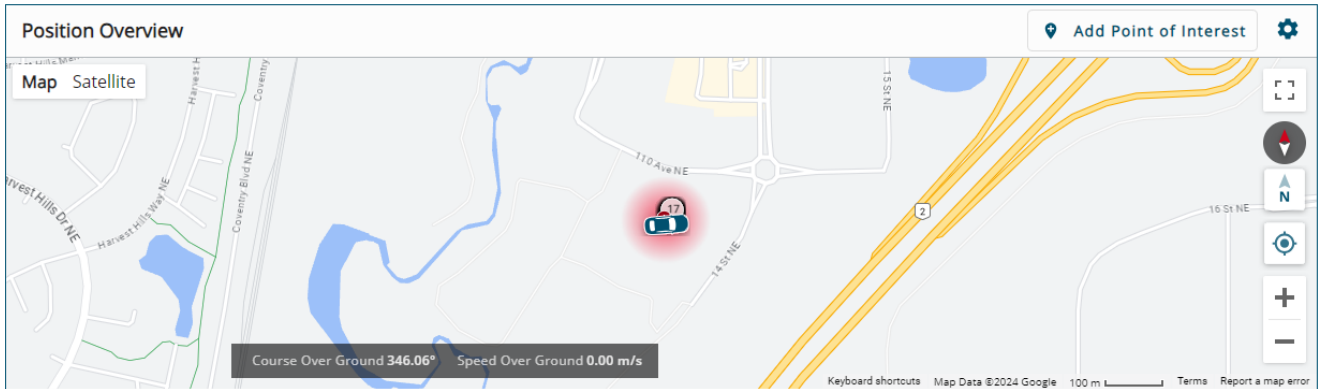






The *Position Overview* window can be shown in Map view or Satellite view.




To change what is visible on the map:

- Click the **Satellite** button to change the *Position Overview* window to show the satellite view.
- Click the **Map** button to change the *Position Overview* window to show the map view.
- Click the **+** button to zoom the map in.
- Click the **-** button to zoom the map view out.
- Click the Full screen button () to expand the map to occupy the entire computer screen.
- Click the Normal screen button () to change from a full screen map to the GRIT Monitor dashboard view.
- Click and drag on the map to change the portion of the map that is visible.

On the *Position Overview* map there can be several icons to provide information about the receiver and its position.

Icon / Label	Description
	<p>Current position marker</p> <p>The current position marker shows the current position and heading of the vehicle in which the receiver is installed.</p> <p>There are several markers available to represent the vehicle. To change markers, see <i>Display</i> on page 208.</p>
	<p>History marker</p> <p>The history markers show the positions where the receiver has been.</p> <p>The amount of time that history markers remain on the <i>Position Overview</i> map can be changed. See <i>Display</i> on page 208.</p>
	<p>Error marker</p> <p>The error markers show the position of the vehicle when an error event occurred on the receiver.</p>
	<p>Warning marker</p> <p>The warning markers show the position of the vehicle when a warning event occurred on the receiver.</p>
	<p>Manual POI – A position of interest on the map you have defined.</p> <p>Points of interest are locations that have significance to the monitoring of GNSS interference. For example, it may be a location with reduced signal availability, high multipath or a known interference source.</p> <p>To add a point of interest, see <i>Add a Point of Interest</i> on the next page.</p>
	<p>Trigger marker</p> <p>The trigger markers show the position of the receiver when an Event input was received.</p> <p>Triggers must be configured before they will be added to the <i>Position Overview</i> map. For information about adding and editing triggers, see <i>Triggers</i> on page 206.</p>
	<p>Compass</p> <p>The red arrow of the compass indicates the direction of North on the <i>Position Overview</i> map.</p>
	<p>Center on position</p> <p>Click this icon to change the map view so the receiver is at the center of the map.</p>
	<p>North up</p> <p>When this icon is visible, the <i>Position Overview</i> map is oriented so north points up. The map orientation does not change based on vehicle track.</p> <p>Click this icon to change to Track up orientation.</p>

Icon / Label	Description
	<p>Track up</p> <p>When this icon is visible, the orientation of the <i>Position Overview</i> map changes so the direction of vehicle travel (track) points up. The compass symbol on the <i>Position Overview</i> map adjusts so the red arrow points north.</p> <p>Click this icon to change to North up orientation.</p>
Heading	<p>The current heading of the vehicle in degrees. The heading is the angle from True North of the base to rover vector in a clockwise direction.</p> <p>The receiver must have ALIGN configured before a heading value is shown on the map.</p>
Course Over Ground	<p>The current course over ground of the vehicle, in degrees.</p> <p>This is the actual direction of motion over ground with respect to True North, in degrees.</p>
Speed Over Ground	<p>The current speed of the vehicle relative to the course over ground.</p>

Add a Point of Interest

To add a point of interest:

1. Click the **Add Point of Interest** button.

Alternately, right click a location on the *Position Overview* window and click **Place Point of Interest here**.

The *Add Point of Interest* window appears.

By default the map displays in map view. To change the map to satellite view, click the **Satellite** button.

2. In the **Point Name** box, enter the name for this point of interest.
3. Optionally, in the **Point Radius** box, enter the radius in metres for the circle that defines the size of the point of interest. This radius is used to determine when a receiver enters or exits a point of interest. The area defined by this radius is shown as a circle around the point of interest on the map view
4. Enter the location of the point of interest.
 - To use the current position of the receiver, click the **Use Current Position** option.
 - Enter the latitude and longitude of the location in the **Latitude** and **Longitude** boxes. The latitude and longitude are entered in decimal degrees.
 - Click on the location of the point of interest on the map.

If the Point of Interest was added by right clicking on the *Position Overview* window, the **Latitude** and **Longitude** boxes contain the values for the selected location.

5. Select one of the notification options to determine when a notification is generated for this point of interest. A notification can be sent when a receiver enters (**On entry**) or leaves (**On exit**) the point of interest. When **None** is selected, the notifications are turned off for this point of interest.
6. Click the **Add** button.

5.3 Configuration

For the receiver to detect a spoofing signal, a calibration procedure must be run. The *Spoofing* window provides access to the spoofing calibration feature.

To access the *Spoofing* window, click the **Configuration** option on the menu.

Spoofing

For spoofing detection to operate, the receiver must be calibrated.

Make sure the following conditions are met:

- Receiver is connected to the antenna which will be used during normal operation
- Receiver is started in a good signal environment (i.e. no interference, no spoofing, and no obstructions);
- A communication connection to the receiver is established;
- Five minutes after startup, confirm that the receiver is tracking multiple GPS satellites (8 or more typically).



Calibrate

To calibrate the receiver for spoofing detection, click the **Calibrate** button.



Before starting a calibration, ensure the receiver is in a good signal environment (no interference, spoofing or obstructions are present).



After a calibration has started, the calibration process must continue until completion. It can not be canceled.

When the calibration procedure is complete, the *Spoofing* window changes to show the calibration is complete.

Spoofing ☒

Last Calibrated(UTC) Now

Please note that the current calibration is only valid for the setup in place at the time of the calibration ; you may need to re-calibrate if anything changes or has changed since.



Re-Calibrate

To disable spoofing detection, set the **Spoofing** option to disabled (☐).

If required, the receiver can be re-calibrated by clicking the **Re-Calibrate** button.

5.4 Playback

GRIT Monitor allows you to view information from a previous GRIT Monitor session that has been stored to a file.




GRIT Monitor sessions are saved to a file using the Timeline bar. See *Timeline Bar* on page 176 for information about saving a GRIT Monitor session to a file.

A Playback session is opened from the *Devices* window. To open a Playback file:

1. From the *Devices* window, click the **Open File** button.

The *New Playback* dialog box appears.

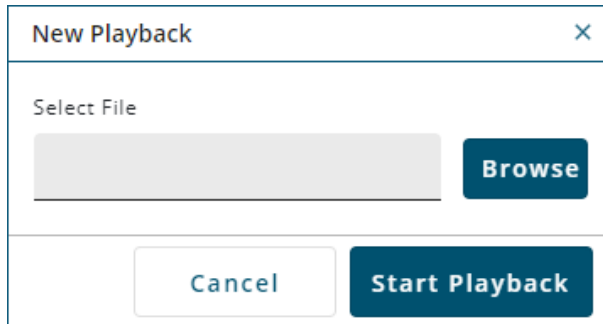

The *New Playback* dialog box is shown. It has a title bar with 'New Playback' and a close button. Below the title bar is a 'Select File' label, a text input field, and a 'Browse' button. At the bottom are 'Cancel' and 'Start Playback' buttons.

2. Click the **Browse** button.

The *Open File* dialog box appears.


3. Navigate to the folder that contains the playback file and click the playback file to open.



The playback file selected must have been created by GRIT Monitor. GRIT Monitor does not open playback files created by Manage.

4. Click the **Open** button.

The *New Playback* dialog box appears with the name of the file in the *Select File* box.

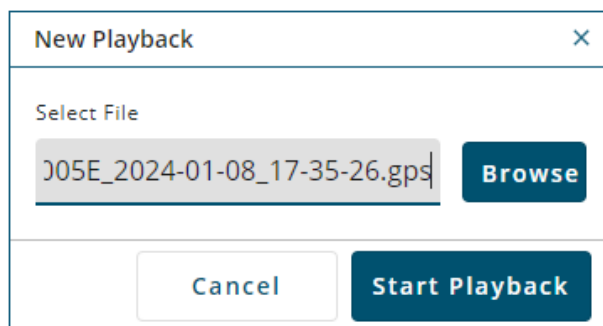

The *New Playback* dialog box is shown again. The 'Select File' text input field now contains the filename '005E_2024-01-08_17-35-26.gps'. The 'Browse' button is still present. The 'Cancel' and 'Start Playback' buttons are at the bottom.

5. Click the **Start Playback** button.

The GRIT Monitor Dashboard appears and the information from the saved GRIT Monitor session starts to play.

5.4.1 Playback Controls

The controls for viewing a GRIT Monitor session are on the Timeline bar.

Viewing the Log File

The information in the GRIT Monitor session file starts playing when the file is opened.

- The Summary bar shows the status information at the current point in the session file.
- The Dashboard tiles show signal information at the current point in the session file
- The progress bar shows the current point in the file.
- The Date/Time field shows the time the information at the current point in the session file was collected.

To pause playback, click the pause button (⏸).

To restart playback, click the play button (▶).

To move back 30 seconds in the playback, click the repeat button (⏮).

To replay a playback file, click the replay button (🔄).

The speed at which the file is played back can be changed. To change the playback speed, click the **Speed** drop menu and select a playback rate.

Events in the Log File


If an event occurred on the receiver while the Playback session was being collected, the event will be shown on the progress bar. Errors are shown as red dots and warnings are shown as amber dots.

To view more information about an event, click on the event in the progress bar. A dialog box appears providing the event message and the time the event occurred.

Events on the progress bar can be shown or hidden. To show the events, set the **Show Events** option to on (☑). To hide the events, set the **Show Events** option to off (☐).

Show or Hide the Playback Controls

To show the full Playback controls, click the **Timeline** button.




To hide the Playback controls, click the **Timeline** button.

Save a Snippet

A snippet is a portion of the log file that is extracted and saved to a separate file. To save a snippet:

1. Click the **Create Snippet** button.

The snippet selection tool appears on the progress bar.

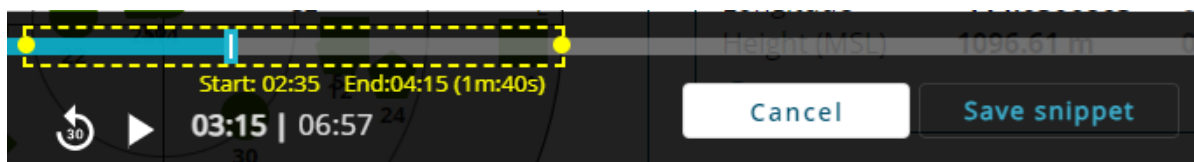

The amber box indicates the portion of the log file that will be saved.

2. Use the handles at the end of the snippet tool to adjust how much of the file will be included in the snippet.
3. Click the **Save Snippet** button.
The *Save Snippet* dialog box appears.
4. Navigate to the folder in which the snippet will be saved.
5. Enter a name for the snippet file in the *File name* box.
6. Click the **Save** button.

7. To save the file and view the newly created snippet in Playback, click the **Yes** button. The New Playback dialog box appears. Click the **Start Playback** button.

To save the file only, click the **No** button.

5.5 Menu

The GRIT Monitor menu is available on all GRIT Monitor windows. It provides access to other windows and settings in the GRIT Monitor interface.



Click a menu item to access the options available.

5.5.1 Dashboard

Click **Dashboard** to display the *Dashboard* window. See *GRIT Monitor Dashboard* on page 174 for more information.

5.5.2 Configuration

Click **Configuration** to display the *Configuration* window. See *Configuration* on page 195 for more information.

5.5.3 Settings

Networking

Click **Networking** to open the *Networking* window.

From the *Networking* window, you can edit the Wi-Fi client, Ethernet and Wi-Fi Hotspot parameters for the receiver. For information about the networking parameters, see *Networking* below.

Map

Click **Map** to open the *Map* window. The *Map* window provides configuration parameters for the map on the *Position Overview* tile. See *Map Settings* on page 203 for more information.

5.5.4 Tools

Terminal

Click **Terminal** to open the *Terminal* window.

The *Terminal* window provides an interface to the receiver's command line interface. From the command line interface, you can access the OEM7 commands and logs. For more information about the *Terminal* window, see *Terminal* on page 209.

5.5.5 Help


Click **Help** to open the NovAtel Application Suite help.

5.6 Networking


Use the *Networking* window to configure the Wi-Fi and Ethernet interfaces on the receiver. Only the interfaces that are available on the receiver are shown.

5.6.1 Wi-Fi

Use the *Wi-Fi* tile to configure the receiver to connect to a Wi-Fi access point.

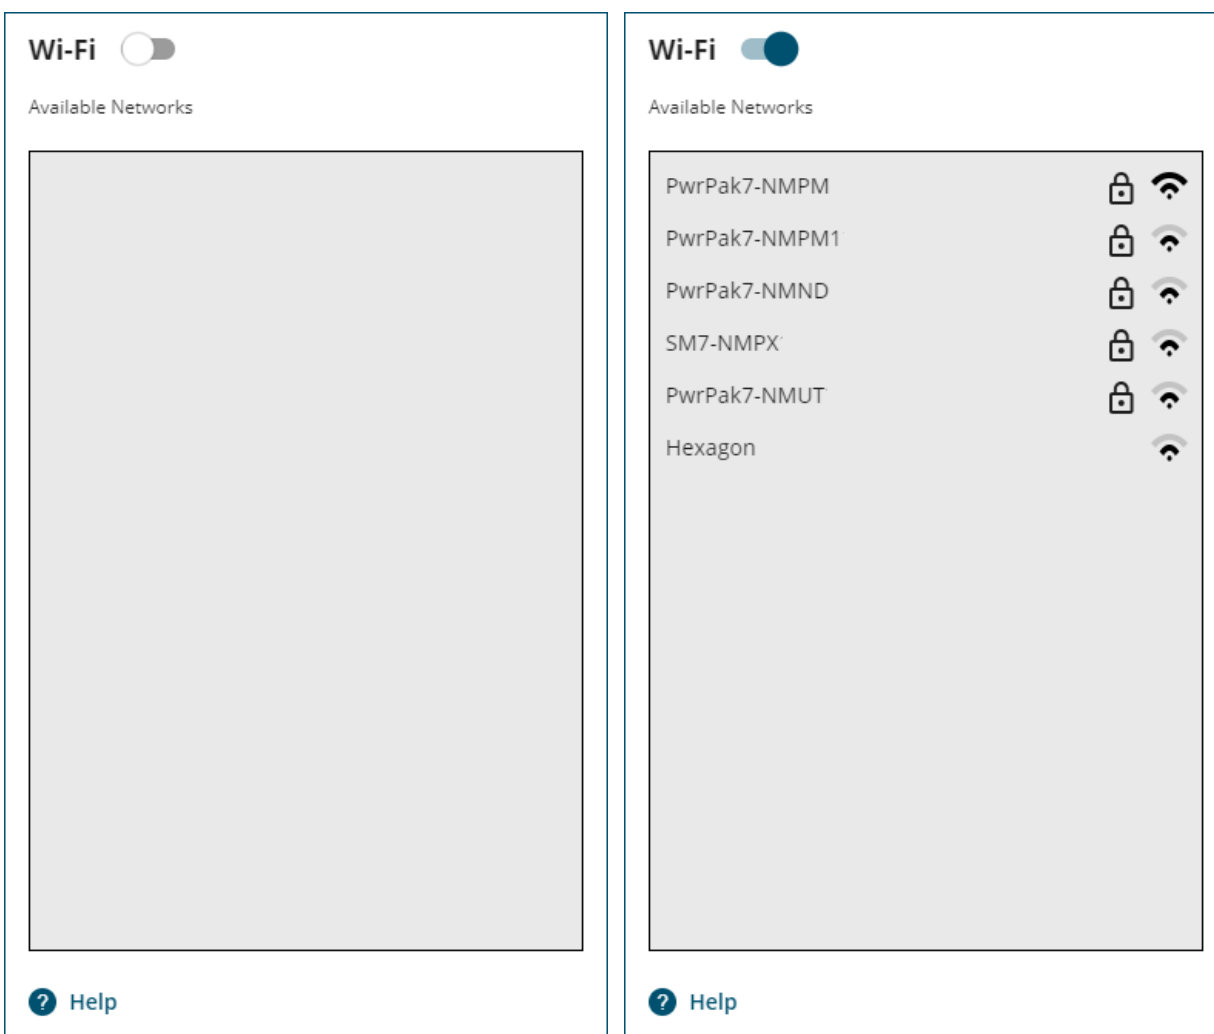

Off/On

Set the Wi-Fi switch to **On** () to enable the Wi-Fi client on the receiver.

Set the Wi-Fi switch to **Off** () to disable the Wi-Fi client.

Available Networks

The Available Networks box displays the Wi-Fi access points (hotspots) the receiver has detected.

Click the access point to which you want the receiver to connect. If the access point is secured, and this is the first time the receiver has attempted to connect, an access dialog box appears. Enter the user name and password for the selected Wi-Fi access point and click **Connect**.

When the receiver makes a connection to an access point, the connection details are stored on the receiver. Up to four access points are stored on the receiver. When the receiver gets into range of a stored access point, it will automatically connect.

To remove an access point from receiver memory:

1. Click the **X** button on the access point. A dialog box appears.
2. Click **Yes**.



NovAtel Application Suite does not support configuring the Wi-Fi interface on the MarinePak7.

5.6.2 Ethernet

Use the *Ethernet* tile to configure the Ethernet interface on the receiver.

If the receiver is connected to a network that uses DHCP:

1. Set the *DHCP* switch to **On** () to enable DHCP.
2. Click the **Apply** button.


The *IP Address* field displays the IP address assigned to the receiver.

If the receiver is being configured to use a static IP address:

1. Set the *DHCP* switch to **Off** () to disable DHCP.
2. In the *IP Address* box, enter the IP address for the receiver.
3. In the *Subnet Mask* box, enter the subnet mask for the receiver.
4. In the *Gateway* box, enter the IP address of the gateway.
5. In the *DNS IP Address* box, enter the IP address of the primary DNS server.
6. Click the **Apply** button.

5.6.3 Wi-Fi Hotspot

Use the Wi-Fi Hotspot window to configure the receiver to function as a Wi-Fi hotspot (access point). Devices, such as the device used to run Manage Web, can then access the receiver using Wi-Fi.

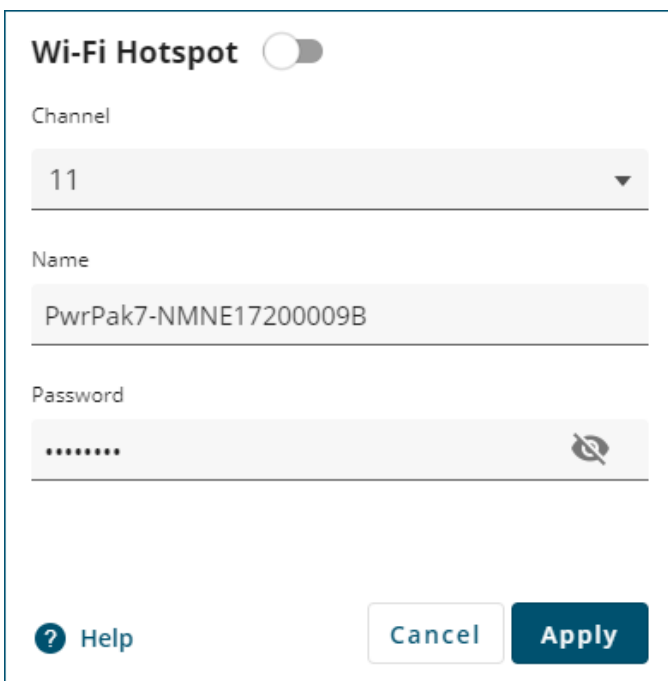

The image shows a 'Wi-Fi Hotspot' configuration window. At the top, there is a title 'Wi-Fi Hotspot' followed by a toggle switch that is currently turned off. Below the title, there are three input fields: 'Channel' with a dropdown menu showing '11', 'Name' with the text 'PwrPak7-NMNE17200009B', and 'Password' with a masked input (dots) and a toggle icon. At the bottom left is a 'Help' link with a question mark icon. At the bottom right are 'Cancel' and 'Apply' buttons.

Wi-Fi Hotspot

Use the *Wi-Fi Hotspot* switch to enable or disable the Wi-Fi hotspot hosted by the receiver.



If you disable the Wi-Fi hotspot, Manage Web will not be able to access the receiver using Wi-Fi.

Channel

This parameter sets the 802.11 channel that the Wi-Fi hotspot uses.

To change the 802.11 channel used, click the **Channel** drop list and select the new channel.

Name

This parameter is the SSID that the receiver broadcasts from the Wi-Fi hotspot.

To change the SSID, enter the new SSID in the *Name* box. The SSID can be up to 33 characters long.

Password

This parameter is the password that Wi-Fi clients must enter to access the receiver's Wi-Fi hotspot.

To change the password, enter the new password in the *Password* box. The password must be between 8 and 64 characters long.



NovAtel Application Suite does not support configuring the Wi-Fi interface on the MarinePak7.

Click **Apply** to save the Wi-Fi Hotspot changes to the receiver.

5.7 Map Settings

The Map window provides configuration parameters for the map on the *Position Overview* tile.

5.7.1 Points of Interest

Points of interest are locations that have significance to the monitoring of GNSS interference. For example, it may be a location with reduced signal availability, high multipath or a known interference source. The points of interest are viewed on the *Position Overview* tile.

The *Point of Interest* window is used to view, delete and modify points of interest. To open the *Points of Interest* window, click the **Settings** menu, select **Map** and then **Points of Interest**.

List View

The List View shows the status of the defined points of interest.

To display the List view, click the **List View** button.

Points of Interest

Delete

Export

List View

Map View

<input type="checkbox"/> Name	Symbol	Radius (m)	Latitude (°)	Longitude (°)	Notification	Visibility	Status	Triggered by	
<input type="checkbox"/> Hexagon A&P Camp		50	51.1504368	-114.0306793	On entry	Show	Active	Manual	
<input type="checkbox"/> Traffic Circle		30	51.151313	-114.028039	On exit	Show	Active	Manual	

Help

Name

The name assigned to this point of interest.

To sort the points of interest by name, click the arrow button () on the right of the window.

Symbol

The symbol used for this point of interest on the *Position Overview* map.

Radius (m)

The radius in metres of the point of interest. This radius is used to determine when a receiver enters or exits a point of interest. The area defined by this radius is shown as a circle around the point of interest on the *Position Overview* map.

Latitude (°)

The latitude of the point of interest in degrees.

Longitude (°)


The longitude of the point of interest in degrees.


Notification

Shows when a notification is generated for this point of interest. A notification can be sent when a receiver enters (On entry) or leaves (On exit) the point of interest. When Notification is set to none, the notifications are turned off for this point of interest.

The points of interest can be sorted by notification status by clicking the arrow beside **Notification**.

Visibility

When the **Show** button is enabled (), the point of interest is visible on the *Position Overview* map.

When the **Show** button is disabled (), the point of interest is not visible on the *Position Overview* map.

To sort the points of interest by visibility status, click the arrow beside **Visibility**.

Status

When the **Active** button is enabled (), the point of interest is active.

When the **Active** button is disabled (), the point of interest is not active.

To sort the points of interest by status, click the arrow beside **Status**.

Triggered by


Displays the method by which the point of interest was added.

If the point of interest was added using the GRIT Monitor interface, this field displays **Manual**.

If the point of interest was created by a triggered event, this field displays the name of the event trigger. Triggered events are configured on the *Triggers* window. See *Triggers* on page 206 for more information.

To sort the points of interest by trigger, click the arrow beside **Triggered by**.

To edit a point of interest:

1. Click the **Edit** icon () beside the point of interest.

The *Edit Point of Interest* window appears.

2. Change the point of interest parameters.
3. Click the **Apply** button.


To delete a single point of interest:

1. Click the **Delete** icon () beside the point of interest.

Map View

The Map View shows the points of interest defined on a map and as cards in the left column.

To display the Map view, click the **Map View** button.

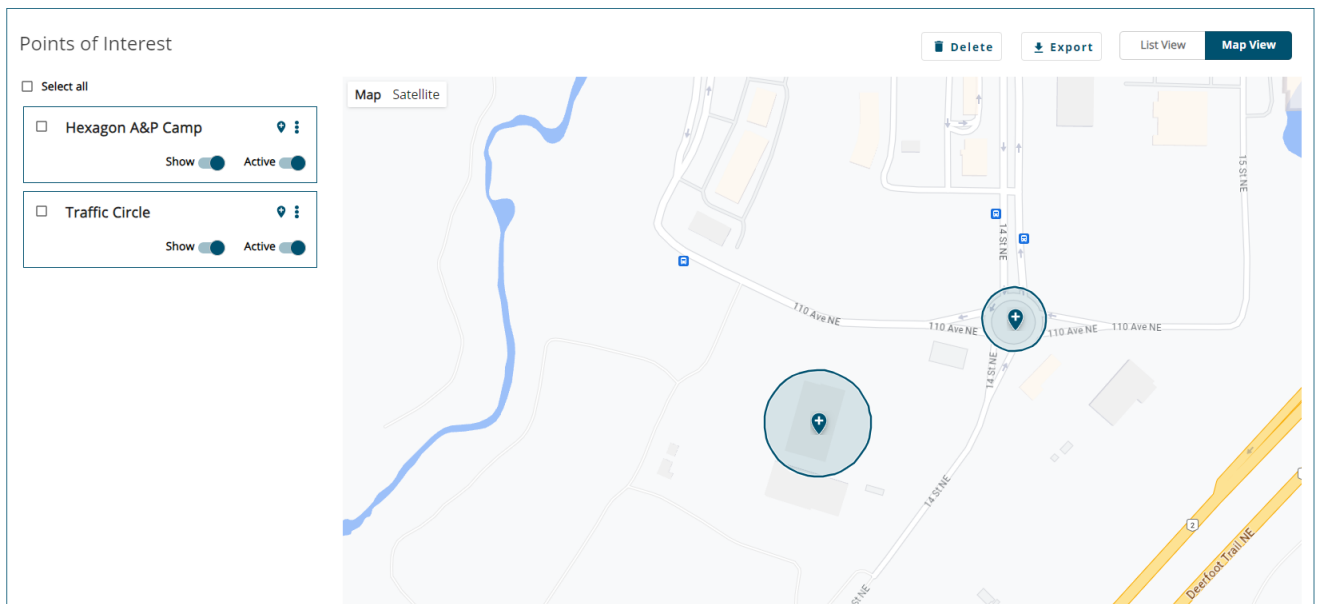


On the map portion of the window, the location of points of interest are shown with the point of interest icon and a circle to represent the area (radius) defined for the point of interest. To view information about the point of interest, hover the mouse pointer over the point of interest icon.


To change what is visible on the map:

- Click the **Satellite** button to change the map to show the satellite view.
- Click the **Map** button to change the display to show the map view.
- Click the + button to zoom the map in.
- Click the - button to zoom the map view out.
- Click and drag on the map to change the portion of the map that is visible.


The details card in the left column shows the name of the point of interest and the icon used for the map. It also provides access to manage the point of interest.

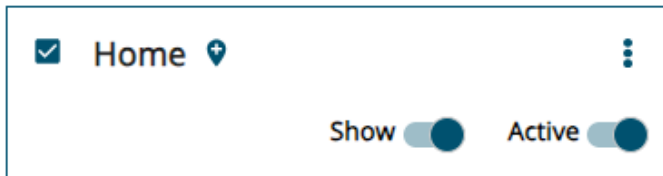


To view more information about the point of interest, click the point of interest name.

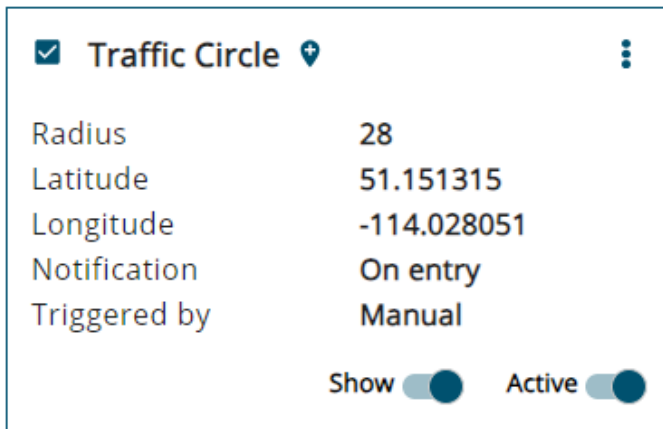

Show

When the **Show** button is enabled () , the point of interest is visible on the *Points of Interest* and *Position Overview* maps.


When the **Show** button is disabled () , the point of interest is not visible on the *Points of Interest* and *Position Overview* maps.

Active

When the **Active** button is enabled () , the point of interest is active.

When the **Active** button is disabled () , the point of interest is not active.

To edit a point of interest:

1. Click the menu button () on the point of interest to change and select **Edit**.
The *Edit Point of Interest* window appears.
2. Change the point of interest parameters.
3. Click the **Apply** button.

To delete a single point of interest:

1. Click the menu button () on the point of interest to delete and select **Delete**.

To delete one or more points of interest:

1. Select the check boxes of the points of interest to delete.
To select all points of interest, select the **Select all** check box
2. Click the **Delete** button.
A confirmation dialog box appears.
3. Click the **Confirm** button.

The location of a point of interest can be saved to a KML file. To save a point of interest to a file:

1. Select the check box of the point of interest to save.
Multiple points of interest can be selected and saved to a single file. To save all points of interest, select the **Select all** check box
2. Click the **Export** button.
A *Save File* dialog box appears.
3. Navigate to the folder where the point of interest file will be saved.
4. Click the **Select Folder** button.

5.7.2 Triggers

When a trigger is defined, an icon is added to the *Position Overview* map when the receiver gets an Event input. This helps visualize where the receiver was when an Event occurred. For example, if the shutter button for a camera is tied to an event, a trigger places an icon on the *Position Overview* map in the location where the picture is taken.



The MARKxPOS logs must be configured on the receiver before they are used as Event Triggers. For information about configuring the MARKxPOS logs, refer to the *OEM7 User Documentation Portal* (docs.novatel.com/OEM7/Content/Logs/MARKxPOS.htm and docs.novatel.com/OEM7/Content/Commands/MARKCONTROL.htm).

The *Triggers* window allows you to view, add, delete and edit triggers. To open the *Triggers* window, click the **Settings** menu, select **Map** and then **Triggers**.


Event

Displays the event log used to record the time and position when the event occurred. This field also shows the icon that appears on the *Point of View* map.

Point Name




Name of the trigger.

Active


When the **Active** button is enabled () , the trigger is active.

When the **Active** button is disabled () , the trigger is not active.

To add a trigger:

1. Click the **Add** button ().
A new, empty trigger is added.
2. Click the **Event** field and select the log for the event.
This parameter shows only logs valid for the receiver.
3. Click the **Point Name** field and enter a name for this trigger.
4. Enable the **Active** button () to activate this trigger.
Disable the **Active** button () to deactivate this trigger.
5. Click the **Apply** button.

To delete a trigger:

1. Click the **Delete** icon () beside the trigger to delete.

5.7.3 Display

The Display settings customize the appearance of the *Points of Interest* map. To open the *Display* window, click the **Settings** menu, select **Map** and then **Display**.

Display

Position

History Marker Show ☒ History Line Show ☒

History Persistence (min)

☒ No limit ☐ 1

☐ 10 ☐ 30 ☐ 60

Position Refresh Frequency (s)

☒ 1 ☐ 5 ☐ 10

☐ 30 ☐ 60

Current Position Marker

Boat Car Drone

Fixed Wing Helicopter Human

Tractor Train Van

Overlays

Legend Show ☐

Heading Show ☐ Course Over Ground Show ☒ Speed Over Ground Show ☒

Speed Over Ground Units

☒ M/S ☐ KM/H ☐ M/H ☐ Kts

Orientation

Map Orientation

☒ North Up ☐ Track Up

[Help](#) [Cancel](#) [Apply](#)

Position

History Marker

When the **Show** button is enabled (☒) , history markers are shown on the *Position Overview* map.

When the **Show** button is disabled (☐) , history markers are not shown.

History Line

When the **Show** button is enabled (☒) , a line showing a history of the vehicle position is shown on the *Position Overview* map.

When the **Show** button is disabled (☐) , the history line is not shown.

History Persistence

Select an option to choose how long, in minutes, the History Markers and History Line are shown on the *Position Overview* map.

Position Refresh Frequency

Select an option to choose how often, in seconds, the current position of the vehicle is updated on the *Position Overview* map.

Current Position Marker


Select an option to choose the icon used to represent the vehicle on the *Position Overview* map.

Overlays


The Overlay settings control the information that is shown on the *Position Overview* map.

Legend

When the **Show** button is enabled (☒) , the Legend is shown on the *Position Overview* map. The Legend provides a description of the icons shown on the map.

When the **Show** button is disabled () , the Legend is hidden.


Heading


When the **Show** button is enabled () , the current heading of the vehicle is shown on the *Position Overview* map.

The receiver must have ALIGN configured before a heading value is shown on the map.


When the **Show** button is disabled () , the heading value is not shown.


Course Over Ground

When the **Show** button is enabled () , the current course over ground of the vehicle is shown on the *Position Overview* map.

When the **Show** button is disabled () , the course over ground value is not shown.

Speed Over Ground

When the **Show** button is enabled () , the current speed over ground of the vehicle is shown on the *Position Overview* map.

When the **Show** button is disabled () , the current speed over ground is not shown.

Speed Over Ground Units

Select the option for the units in which the speed over ground is displayed.

- **M/S** – metres per second
- **KM/H** – kilometres per hour
- **M/H** – miles per hour
- **Kts** – knots (nautical miles per hour)

Orientation

The Orientation settings control the orientation of the *Position Overview* map.

Map Orientation

When **North Up** is selected, the *Position Overview* map is oriented so north points up. The map orientation does not change based on vehicle track.

When **Track Up** is selected, the orientation of the *Position Overview* map changes so the direction of vehicle travel (track) points up. The compass symbol on the *Position Overview* map adjusts so the red arrow points north.

5.8 Terminal

Use the *Terminal* window to send commands to the receiver and display any receiver acknowledgments and outputs.



To enter a command:

1. Type the command and press **ENTER**.

For information about the commands available and commands parameters, refer to the OEM7 Receiver User Documentation Portal (docs.novatel.com/OEM7).

To re-issue a command:

1. Use the Up and Down arrow keys on the keyboard to select the command to re-issue.
2. Press **ENTER**.

Three buttons are also available on the *Terminal* window.

Load

The **Load** button is used to run a set of commands stored in a file on the computer. A typical use of this command file is to load a common configuration on to the receiver. To load a command file:

1. Click the **Load** button.
The *Open* dialog appears.
2. Navigate to the folder that contains the command file and select the file.
3. Click the **Open** button.

The commands in the file are sent to the receiver.



A semicolon (;) can be used to exclude (comment out) a line in the file being loaded. When a semicolon is added to the start of a line, the contents of that line will not be processed by the receiver.

Save

The **Save** button is used to save the commands issued in the current session of the terminal to a file. To save the contents of the *Terminal* window to a file:

1. Click the **Save** button.
The *Save File* dialog box appears.
2. Navigate to the folder where the command file will be stored
3. Enter a name for the file in the *File name* box.
4. Click the **Save** button.

Record

The **Record** button is used to record all activity in the Terminal starting when the button is clicked. To record a Terminal session:

1. Click the **Record** button.
All activity on the Terminal starts to be recorded.
2. After the Terminal activity to be recorded is finished, click the **Stop** button to stop recording.
The *Save file* dialog box appears
3. Navigate to the folder where the recording file will be stored
4. Enter a name for the file in the *File name* box.
5. Click the **Save** button.



Binary logs saved during a Terminal recording will have a "_28" Virtual Port identifier.

